

INSTRUCTION SHEET FOR SET #5.1110 Dodge Neon SRT-4



1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

It is recommended that if you are unfamiliar with this type of work that you refer to a qualified service center specializing in this type of work. It is also recommended that if you choose to do this work yourself that a factory service manual be obtained for the proper procedures pertaining to removal, replacement and proper torque specifications for your vehicle. This instruction set is intended as a guideline for the safe installation of Energy Suspension's Polyurethane. Wheel alignment is almost always disturbed when removing/replacing suspension components. It is recommended that you have the alignment checked on your vehicle at a qualified alignment shop.


© 2004 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means,
without the written consent of Energy Suspension.

Removing center console:

- Remove two screws in bottom of cup holders.
- Remove four screws at bottom of storage bin.
- With e-brake in full "on" position, lift console up. **Pic 1**
- Reach under console and push clips inward to disconnect shifter boot from console. **Pic 2**
- Turn boot sideways and push back thru console. Remove console.

Bushing Removal/Installation:

- Remove four nuts and lift shifter plate up.
- Using a flat blade screw driver, **CAREFULLY!** push out OEM grommets. **Pic 3**
- Place one new Energy bushing #1185 around each stud. **Pic 4**
- Lower shifter plate over studs. Insert OEM washers into #1184. Install bushings over studs.
- Tighten nuts to factory specifications. Install center console.

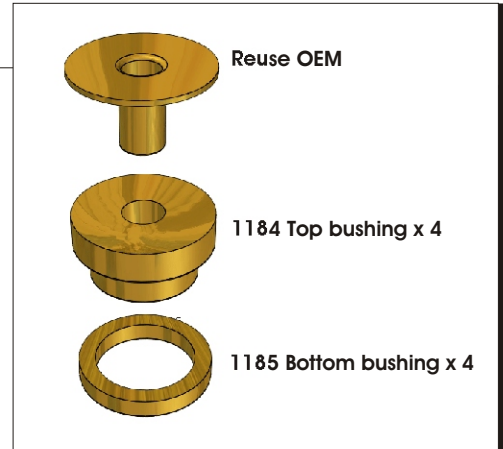

PIC 1



PIC 2



PIC 3



PIC 4

