

# OPEN FIRST!!

**ENERGY**  
**SUSPENSION** 

1131 VIA CALLEJON, SAN CLEMENTE, CA

## Parts List for Master set # 8-18106 00 & UP Toyota Celica

© 2005 Energy Suspension. All rights reserved.  
May not be reproduced, in any form, or by any means,  
without the written consent of Energy Suspension.

### Parts list:

Energy Suspension recommends that you **read over all the installation instructions** and parts list **before you start**.

#### Front control arm bushing set: 8-3119

- 4 2413 lower control arm bushings
- 2 3374 lower control arm bushings
- 4 15.10.490.39 (.875" x .563" x 2.350" sleeve)
- 1 17312 installation instructions
- 1 9.11101 grease

#### Front steering rack bushing set: 8-10102

- 8 2418 steering rack bushings


#### Front sway bar bushing set: 8-5124

- 2 5337 22mm front sway bar bushings
- 2 15.12.67.39 sway bar brackets
- 4 15.03.41.39 flat washers
- 1 17145 installation instructions

#### Rear sway bar bushing set: 8-5125

- 2 5334 17.5mm rear sway bar bushings
- 2 15.12.39.39 sway bar brackets
- 4 15.03.41.39 flat washers
- 1 17145 installation instructions

It is recommended that if you are unfamiliar with this type of work that you refer to a qualified service center specializing in this type of work. It is also recommended that if you choose to do this work yourself that a factory service manual be obtained for the proper procedures pertaining to removal, replacement and proper torque specifications for your vehicle. This instruction set is intended as a guideline for the safe installation of Energy Suspension's polyurethane bushings, once you have removed the factory components from your vehicle.

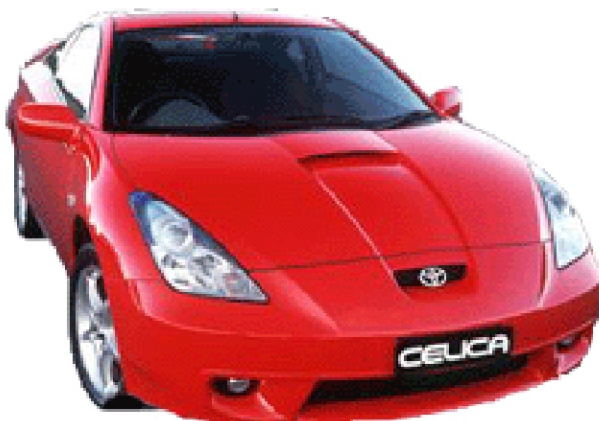

17346

26/JUL/05 BRH