



THE PERFORMANCE EXHAUST COMPANY™

13100 FLOWTECH I™ - STANDARD FINISH

33100 FLOWTECH II™ - CERAMIC FINISH

APPLICATIONS - DODGE/PLYMOUTH/CHRYSLER W/273-360 CI V-8

ASPEN 76-79	BARRACUDA 67-74	BELVEDERE 67-76
CHALLENGER 70-77	CHARGER 66-77	CORONET 67-74
CUDA 70-74	DART 67-76	DEMON 70-76
DUSTER 70-76	GTX 67-76	ROAD RUNNER 67-78
R/T 67-76	SATELLITE 67-76	SUPER BEE 67-74
VALIANT 67-69	VOLARE 76-81	

We realize that you had many choices when you chose your headers, and we thank you for choosing ours. At FLOWTECH®, we put many years of performance exhaust experience into every product we build. We feel and know you will agree that FLOWTECH® Headers are the best you can buy at any price.

As a result of the restricted room available in some engine compartments, you may experience a close fit to some body and chassis components. This is a normal condition. If this is your first time installing a set of headers, it may be time consuming. While not complex, stick with it. As soon as you start your engine, the reward of additional horsepower and performance will be well worth your efforts. Proper installation and periodic maintenance will result in maximum performance and life from your FLOWTECH® Headers.

READ THESE INSTRUCTIONS CAREFULLY BEFORE STARTING:

For ease of installation, your vehicle must be raised a minimum of 24". Warning: Should you decide to install any exhaust product yourself, be warned that the original equipment jack that came with the vehicle is intended for emergency use only. The use of a frame jack in conjunction with a floor jack as main support is highly recommended to minimize the accidental dropping of a vehicle while the installation proceeds. Never go under any vehicle that is supported by a bumper jack!

INSTALLATION NOTE: On some models with the large power steering box, it may be necessary to dent tube L-4 if it touches the bolt that mounts the power steering unit to the chassis. Do so by holding the header in place. Check the clearance and mark the tube with chalk or a pencil. Remove and dent the tube lightly with a hammer.

INSTALLATION NOTE: This header will not accommodate a smog AIR pump. See illustration "C".

1. PREPARE THE CAR FOR INSTALLATION:

- Disconnect the positive battery to prevent accidental damage to electrical system. Remove the starter.
- Remove the spark plugs and shields.
- If equipped with manual transmission, remove the clutch idler assembly.
- Drain the cooling system. Coolant can be reused if drained into a clean container.
- Unbolt the headpipe from the stock exhaust manifold and move aside. Remove the stock manifolds. Remove the front and rear manifold mounting studs, if equipped.
- Remove the left side tie rod from the drag link. Remove the drag link from the pitman arm.

G. Remove the oil filter.

2. CHECK THE CONDITION OF THE MOTOR MOUNTS

It is recommended that new motor mounts be installed before installing headers.

3. LEFT SIDE HEADER INSTALLATION: INSTALL FROM BELOW.

- Remove the left engine mount bolt and raise the engine approximately three inches (3"). Be sure to place a board between the oil pan and floor jack to prevent damage to oil pan. Also, be sure to check the clearance of the fan to the fan shroud. Loosen the shroud, if necessary.
 - Place the header into position.
 - Place the gasket into position. Install the front and rear header bolts. Do not tighten.
- INSTALLATION NOTE:** We recommend the use of a sealant on the bolts used to replace the studs. This prevents coolant leakage.
- Hold the header into position to avoid binding, while the engine is being lowered back into position.
 - Reinstall the engine mount bolt. Torque to specifications.
 - Install the starter while headers are still loose.
 - Install the balance of the bolts. Tighten all header bolts progressively and evenly until they are tight.
 - Reinstall the clutch linkage, if so equipped.
 - If equipped with an automatic transmission, it may be necessary to raise the gear shift linkage cross shaft by rotating the mounting brackets 180° on the frame and transmission. See illustrations "A and B".


4. RIGHT SIDE HEADER INSTALLATION: INSTALL FROM BELOW.

- Remove the left engine mount bolt and raise the engine approximately three inches (3"). Be sure to place a board between the oil pan and floor jack to prevent damage to the oil pan. Also, be sure to check the clearance of the fan to the fan shroud. Loosen the shroud if necessary.
 - Place the header into position.
 - Place the gasket into position. Install the front and rear header bolts. Do not tighten.
- INSTALLATION NOTE:** We recommend the use of sealant on the bolts used to replace the studs to prevent coolant leakage.
- Hold the header into position to avoid binding, while the engine is being lowered into position.
 - Reinstall the engine mount bolt. Torque to specifications.
 - Reinstall the steering linkage. Check for clearance between tube R-2 and the idler arm. There must be a minimum of at least ¼". If not, replace the engine mounts.
 - Replace the spark plugs, oil filter, and coolant in the radiator.



5. AFTER HEADERS ARE IN PLACE:

- Inspect all points with limited clearance. Relocate any points that have contact with the headers. Make sure there is adequate clearance around all lines (transmission, brake, fuel and electrical wires). Reroute as necessary. Before installing your exhaust system, replace any fluids that you have removed or lost.
- All engines are not mounted exactly in the same position from the factory. It is sometimes necessary to loosen the engine mounts and move the engine slightly from one side to the other to obtain maximum clearance.
- Bolt the reducer adapters and gaskets to the collectors.
- Connect the exhaust system by either clamping or welding the exhaust pipes to the reducer adapters.

When you have finished installing your *FLOWTECH*® headers, take the vehicle for a road test. Listen carefully for any exhaust leaks or other strange noises and make corrections. When the vehicle has been driven for a few days, retighten the header bolts. We find that periodically checking the bolts will prevent the flange from warping and the burning out of the header gaskets.

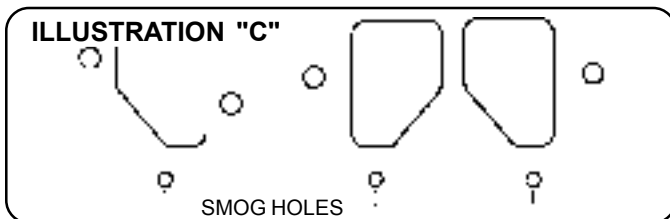

FLOWTECH® does not recommend or advise the removal of emissions control devices. Some models may be equipped with heads, which are drilled for the A.I.R. smog pump but are not fitted with the device from the factory. On these models it is necessary to tap the smog holes below the exhaust ports. Use a 1/4-20 tap and seal with a 1/4-20x3/8" screw. See illustration for location of smog holes below all ports.

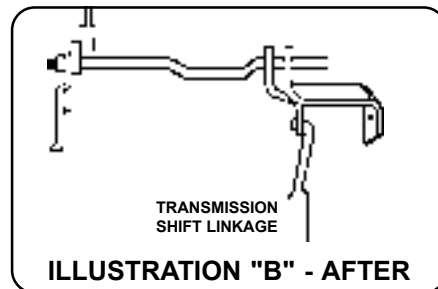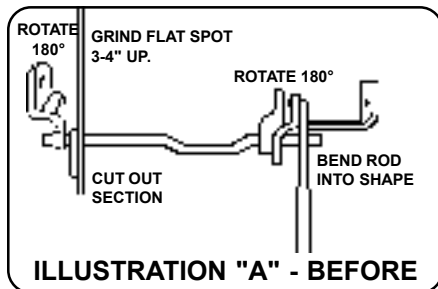

How did we do? Your questions and comments are always welcomed at *FLOWTECH*®. Our technical services department is open Monday through Friday, during the hours of 8:30 AM until 4:30 PM central time. We can be reached at:

1801 Russellville Road • Bowling Green, KY 42102
PHONE 270-781-9741 • FAX 270-781-9772
flowtech@support.holley.com

LIMITATION OF LIABILITY - DISCLAIMER: The regulation of emissions production, noise levels and safety standards is undertaken by the federal government, each of the fifty state legislatures, and by many local municipalities, towns, and counties.

FLOWTECH® by Holley makes no warranties of merchantability, of fitness for particular purpose, Or that its products are approved for general use, or that its products comply with laws, regulations, or ordinances in the states where they may be sold to the ultimate purchaser, the consumer.

Unless expressly stated to the contrary in the *FLOWTECH*® catalog, instruction sheet, or price list, the entire risk as to the conformity of any company product in any such state and as to repair should the product prove to be defective or nonconforming, is on the retail purchaser, the buyer, the ultimate consumer, of such product and it is not upon the seller, distributor, or manufacturer.

In the connection retail purchaser, the buyer, the ultimate consumer assumes the burden of the entire cost of any and all necessary service, alterations, or repair.

The foregoing statement limits the liability of the manufacturer. California vehicle code sections 27156 and 38391 prohibit the advertising, offering for sale, or installation of any device which modifies a vehicle's emissions control system unless exempt and unless otherwise noted, *FLOWTECH*® headers have not received an exemption from these code sections and are not legal for sale or use in California on vehicles originally equipped with catalytic converters. It is illegal, except for racing vehicles, which may never be driven upon a highway, to remove or otherwise render inoperative any emission control device on regulated motor vehicles (Check catalog listings to insure proper application). In the other 49 states, unless otherwise noted, *FLOWTECH*® headers are not legal for pollution controlled motor vehicles, except for racing vehicles which may never be used upon a highway and are not intended or applicable for highway use.

FLOW TECH
 by **Holley**

P/N 13100 - REVISED 01/11/01