




# Dodge Ram 2003- 2008 Dual Bottle Adaptor Kit

## #33087

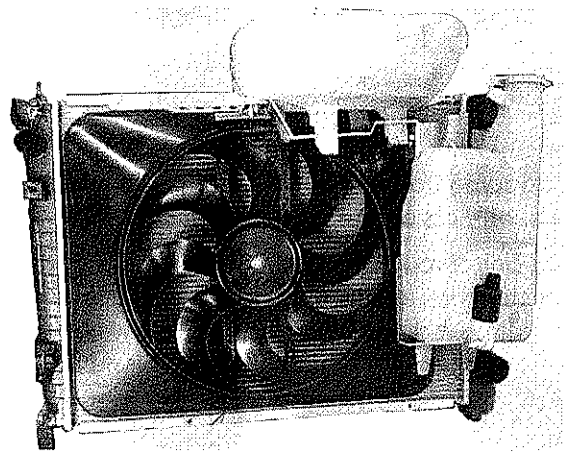

Note: Always read instruction and verify kit contents prior to installation.  
Bracket #18304.....1 ea. Mounting Hardware Kit.....1 ea.  
Instruction Sheet.....1 ea.

Flex-a-lite has developed an adaptor kit for the 03-08 Dodge Hemi which use two separate bottles for washer fluid and coolant overflow. This kit integrates with the brackets included with the Dodge fan shroud #183 to create a stable platform for mounting of your vehicle's coolant overflow bottle.

## INSTALLATION INSTRUCTIONS

1. Follow the install instructions for Dodge Ram Flex-a-lite fan #183 until step 17.
2. Place bracket #18304 on top of the lower shelf on bracket #18302. (FIG. A)
3. Align the mounting holes on both brackets. Place the stud of the 2 included t-bolts facing down through the holes.(FIG. B) Use 2 each of the supplied washers and nylock nuts to secure the t-bolts. Slide top bracket all the way forward and tighten.
4. On the passenger side, mount bracket #18304 to side bracket #18303 using 1 bolt, 1 washer, and 1 nylock nut.(FIG. C)
5. Reinstall the washer fluid tank. Carefully lower the tank onto bracket #18303; align the two plastic fingers protruding from the bottom of the tank with the location slots on the bottom shelf of bracket. Align the top tab on the tank with the prongs on the top tab of the bracket. Push down to fully secure.(FIG. D)



FIG. A



FIG. B



FIG. C

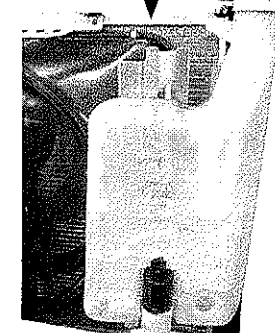
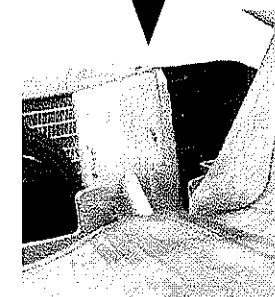
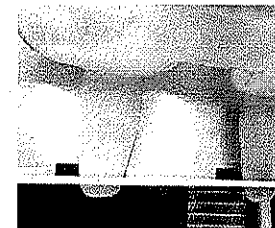


FIG. D

6. Reinstall the radiator overflow tank. Lower the tank onto bracket #18304; align the two plastic fingers protruding from the bottom of the tank with the location slots on the bottom shelf of bracket. (FIG. E)
7. Pass bolt through bottom of bracket #18304 near radiator core, and through the washer fluid reservoir mounting location. Thread remaining washer and nylock on top of washer fluid reservoir mounting location and tighten.(FIG. F)
8. Reconnect coolant overflow hose to radiator filler neck.
10. Reconnect windshield washer fluid tubing to motor on overflow tank.
11. Reconnect electrical connector directly attached to the base of overflow tank.
12. Reconnect electrical connector attached to windshield washer motor on tank.
13. Proceed to wiring instructions in #187 fan installation guide.

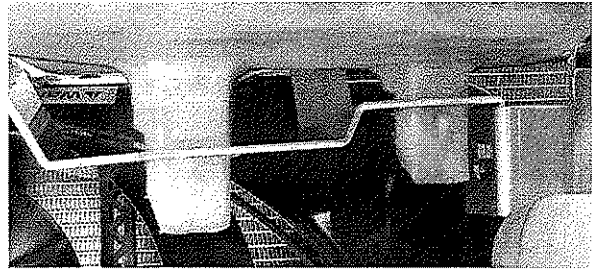


FIG. E



FIG. F

**Note:** Visit our website [www.flex-a-lite.com](http://www.flex-a-lite.com) to register product for warranty and review warranty policy.

**Note:** For questions regarding mounting of this product, call 1-877-767-0554 for assistance.

**The Flex-a-lite Limited Warranty**

Flex-a-lite Consolidated, 7009-45th St. Ct. E. Fife, WA 98424, Telephone No. 253-922-2700, warrants to the original purchasing user, that all Flex-a-lite products to be free of defects in material and workmanship for a period of 365 days (1 year) from date of purchase. Flex-a-lite products failing within 365 days (1 year) from date of purchase may be returned to the factory through the point of purchase, transportation charges prepaid. If, on inspection, cause of failure is determined to be defective material or workmanship and not by misuse, accidental or improper installation, Flex-a-lite will replace the product free of charge, transportation prepaid. Flex-a-lite will not be liable for incidental, progressive or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights, which vary from state to state. The Flex-a-lite warranty is in compliance with the Magnuson-Moss Warranty Act of 1975.