

T-REX

Billet Grilles

54934

**2008 TOYOTA
LAND CRUISER**

54934

**2008 TOYOTA
LAND CRUISER**

2008 TOYOTA LAND CRUISER **UPPER CLASS SERIES MESH GRILLE**

Tools Required:

Phillips / Slotted Screwdrivers
8mm, 10mm Socket
Needle Nose Pliers

Part List:


1	Upper Class Series Grille	2	#10Screws
9	6-32 Nylon Lock Nuts	2	#10 Flat Nuts
2	1/8" Fender Washers	2	#6 Flat Washers
1	Logo Plate	1	Top Plate

Read and understand instructions before attempting installation

Step 1. Remove the factory motor cover by removing the factory clips. Remove the bolts from the top of the grille. Remove all remaining clips and remove the grille. Once the grille is removed from the vehicle; remove the upper seal on the grille. This seal is used to seal the grille and hood.

IF YOU PURCHASED THE LOWER BUMPER GRILLES, INSTALL NOW!

Step 2. Locate the new grille. Install the provided top plate to your new grille using the provided nylon lock nuts. Place the hood seal onto the new grille. Set the grille into the factory opening. Use the lower factory guides to slide in the lower grille brackets (1). Align the top mounting holes to the proper location and place the factory bolts back in (2). Leave these loose. Place the provided screws into the lower mounts. Place the flat nuts on each screw (1).

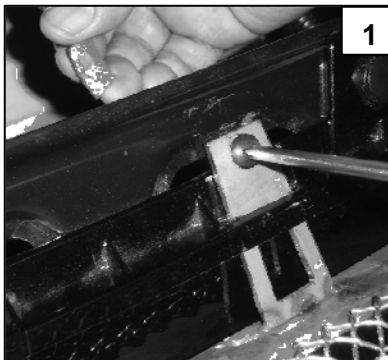

Step 3. Making sure that the grille is centered; tighten down all the hardware. Re-place the upper motor cover. Some of the holes on the top plate should line up with holes in the factory motor cover and utilize the factory clips. To install the logo onto grille, remove your factory logo from the factory grille. Place your factory logo onto the plate aligning the studs on the factory logo to the holes on the plate. Install the logo plate onto the grille making sure that it is centered, tighten the hardware (3).

Thanks for purchasing your T-REX grille, 03-26-08

