

55434
55435

11-13

Chrysler 300C



55434
55435

11-13

Chrysler 300C

11-13 CHRYSLER 300C

2 Pc. Bumper Mesh Grilles

Install time: 30 Mins.

TOOLS REQUIRED:

Plastic Prybar
10mm & 7mm Socket Wrench
3/16 Drillbit & Drill
Screwdriver

PARTS LIST:

(2) Mesh Bumper Grilles
(6) 10/32 Fender Flatwashers
(6) 6/32 Nylon Lock Nuts




PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

Step 1 Factory Grille Shell Removal

- Remove 8 clips on the Plastic Cover. (Fig. 1)
- Carefully pull on Grille Shell to remove part of the Plastic Cover. (Fig. 2)
- With a Plastic Prybar Unclip the Plastic Cover from the Factory Grille Shell. (Fig. 3)
- Remove Plastic Cover. (Pull Grille Shell Carefully outward if Plastic Cover doesnt come off.)
- Remove 2 clips on side Fender Well. (Fig. 4)
- Remove 10mm Bolt on the inner Fender. (Fig. 5)
- Pull Side Fender outward to Unclip. (Fig. 6)
- Remove 8 (7mm) Screws from Underneath the Factory Grille Shell. (Fig. 7)
- Remove Grille Shell and unclip the Electric Wire from the Fog Lights.

Step 2 Grille Bumper Installation

- Place Mesh Grille Over Factory Bumper Opening. (Fig. 8)

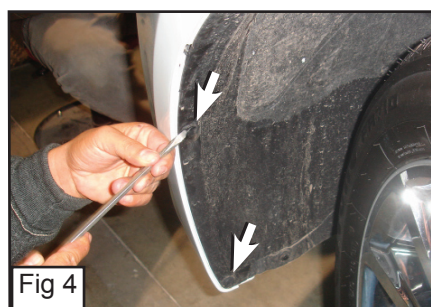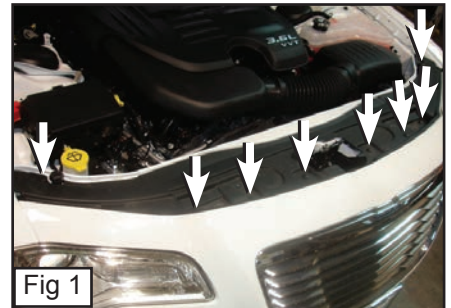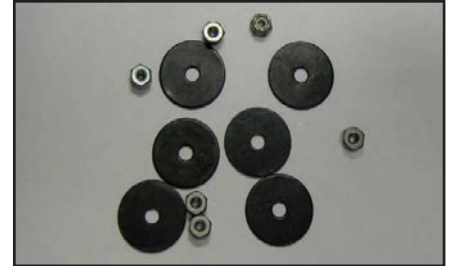

55434
55435
11-13



55434
55435
11-13

Chrysler 300C

Chrysler 300C

11-13 CHRYSLER 300C
2 Pc. Bumper Mesh Grilles

- Mark where the Screws on the Mesh Grille are (Make sure the Grille Fits properly through the Factory Opening).
 - Drill a 3/16 Hole where you marked the Screws. (Fig. 9)
 - Place Bumper Mesh in.
 - Insert Flatwashers on the Threaded Screws, Thread with 6/32 Nylon Lock Nut. (Fig. 10)
- Repeat for remaining Threaded Screws.

Installation Complete



Fig 9

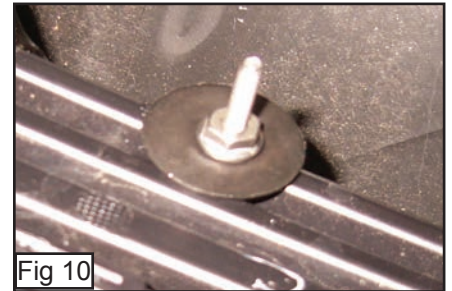


Fig 10