

55807 2008 SATURN AURA 55807 2008 SATURN AURA

SATURN AURA UPPER CLASS SERIES MESH BUMPER

Tools Required:

Small Slotted Screwdriver 8mm Socket or Nut Driver


Part List

- 1 Upper Class Bumper
- 4 6-32 Nylon Lock Nuts
- 4 1/2" X 1/2" L- brackets

Read and understand instructions before attempting installation

Step 1

Center the grille into the opening. From the rear of the grille; use an 8mm wrench to tighten the L-brackets using the nylon nuts provided. Make sure the brackets hold to the grille mesh (1). DO NOT OVERTIGHTEN.

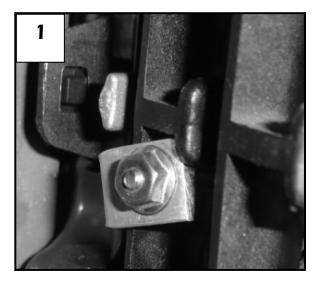

Thank you for purchasing a T-Rex Billet Grille.9/4/07