

6711120/6711121
07-10 CHEVY
SILVERADO
1500/HD



6711120/6711121
07-10 CHEVY
SILVERADO
1500/HD

07-10 CHEVY SILVERADO 1500/HD X-Metal Series Main Grille 2 Pc.

Recommended Tools:

Phillips / Slotted Screwdrivers
10mm Socket & Ratchet
5/16" Wrench or Nut Driver


Parts List / Hardware:

2 Upper Class Inserts (Top and Bottom)
20 6-32 Nylon Lock Nuts
20 1/2" x 1/2" L- Brackets 2-hole

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model. To assure your part is correct; our tech department can be contacted at tech@trexbillet.com to verify fitment or assist with tech questions. All other inquires can be directed to info@trexbillet.com. In the event you do not have internet access please call 1-800-287-5900.


Step 1

Test fit the grilles into the openings. Remove the radiator cover from the vehicle; then the four 10mm bolts along the top of the grille. The grille has metal clips along the bottom and center (1); these secure the grille to the core support. Use a slotted screwdriver to release the clips. Remove the grille. If you have purchased the lower grille part #55112; install grilles now.

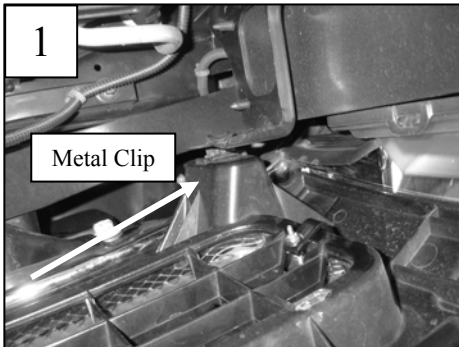

Step 2

Center the top grille into the opening of the grille shell. Install the L- brackets onto the mounting studs. Thread a Nylon lock nut onto each stud. Tighten the nuts until the grille is held in place (**DO NOT TO OVER-TIGHTEN**). (2) Use the remaining 'L- brackets and nylon lock nuts to secure the lower grille in place.

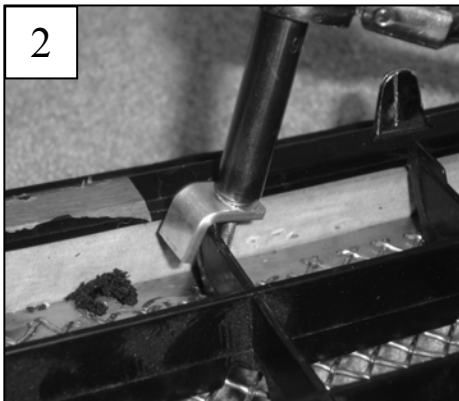

Step 3 Re-install the grille assembly and radiator cover back onto the vehicle. (3)

Thank you for purchasing your X Metal billet grille. 3/18/10

