




INSTALLATION INSTRUCTIONS
CAT BACK STAINLESS DUAL EXTREME EXHAUST
2006 HUMMER H3 3.5L 5CYL 4WD 4DR
PART # 62210

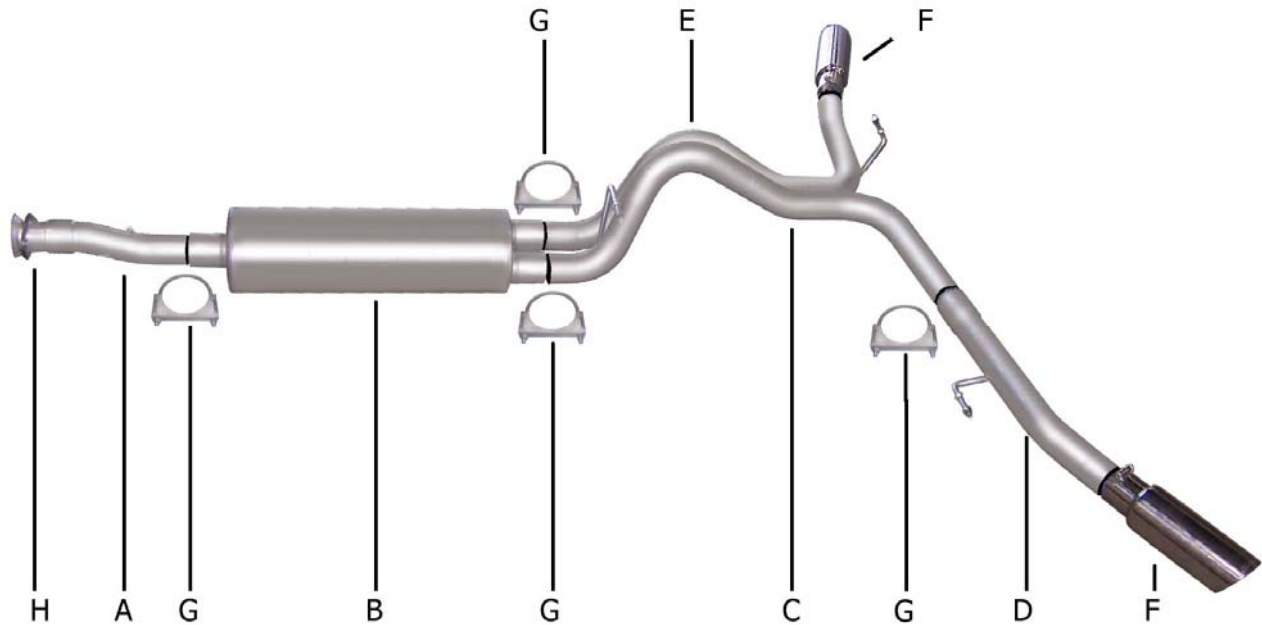

ITEM	PART #	QUANTITY	DESCRIPTION
A	970-700736S	1	2½" STAINLESS HEADPIPE W/WELDED HANGER/GP-102 FLANGE
B	789801S	1	STAINLESS SUPERFLOW MUFFLER
C	1021-700791S	1	2½" SS DRIVER SIDE OVERAXLE TAILPIPE W/WELDED HANGER
D	1022-700792S	1	2½" SS DRIVER SIDE EXIT PIPE W/WELDED HANGER
E	1023-700793S	1	2½" SS PASS. SIDE OVERAXLE TAILPIPE W/WELDED HANGER
F	500374	2	3½" STAINLESS TIPS
G	5757	4	2½" CLAMPS
H	BO-1028	1	BOLT KIT FOR HEADPIPE

Thank you for purchasing our Gibson exhaust system for your vehicle. If you need further assistance, please do not hesitate to call our technical dept at (800) 528-3044 Monday through Friday, 8:00 am to 5:00 pm. 0806

INSTALLATION INSTRUCTIONS # 62210

CAREFULLY READ INSTRUCTIONS BEFORE STARTING INSTALLATION.


When installing this exhaust system make sure to use proper safety precautions. Use jack stands when working under the vehicle, set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

SUGGESTED TOOLS: 1/2", 9/16" 15mm wrenches & sockets, WD-40, hacksaw, jack stands.

.....
• **Disconnect the negative battery cable before removal of OEM exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual.**
•
.....



1. To remove the stock exhaust remove it from the 2-bolt flange in front of the muffler. Disengage the welded hangers using WD-40 from the OEM rubber grommets. Do not damage or remove the rubber grommets as you will re-use them to mount your new system. Now, cut off tailpipe and remove exhaust.

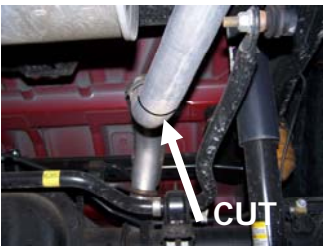

5. Install driver side exit pipe #D onto overaxle pipe, secure using clamp #G. DO NOT TIGHTEN. Insert welded hanger into rubber grommet.



2. Install head pipe #A onto your existing stock flange using bolt kit #H to secure to flange. DO NOT TIGHTEN. Insert welded hanger into rubber grommet.



6. Install passenger side overaxle pipe #E into muffler 1 1/2 -2", secure using clamp #G. DO NOT TIGHTEN. Insert welded hanger into rubber grommet.



3. Install muffler #B onto headpipe 1 1/2-2" with the louvers facing towards the converter. Use a jack stand to support the muffler. Use clamp #G to secure the muffler to the headpipe. DO NOT TIGHTEN.



7. Install stainless steel tips. Clamp down. When you have everything in place, firmly tighten all bolts and clamps down securely. Use stainless steel cleaner and a Scotch Brite pad weekly to prevent tip from discoloration. Inspect all fasteners after 25-50 miles of operation and re-tighten as necessary.



4. Install driver side overaxle pipe #C into muffler 1 1/2-2". Use clamp #G to secure to muffler. DO NOT TIGHTEN.

