




**INSTRUCTION MANUAL
SUPER TRUCK STAINLESS EXHAUST
04-05 DODGE RAM 1500 TRUCK 5.7L HEMI 2/4WD
STANDARD CAB, SHORT BED 2DR
PART # 66527**

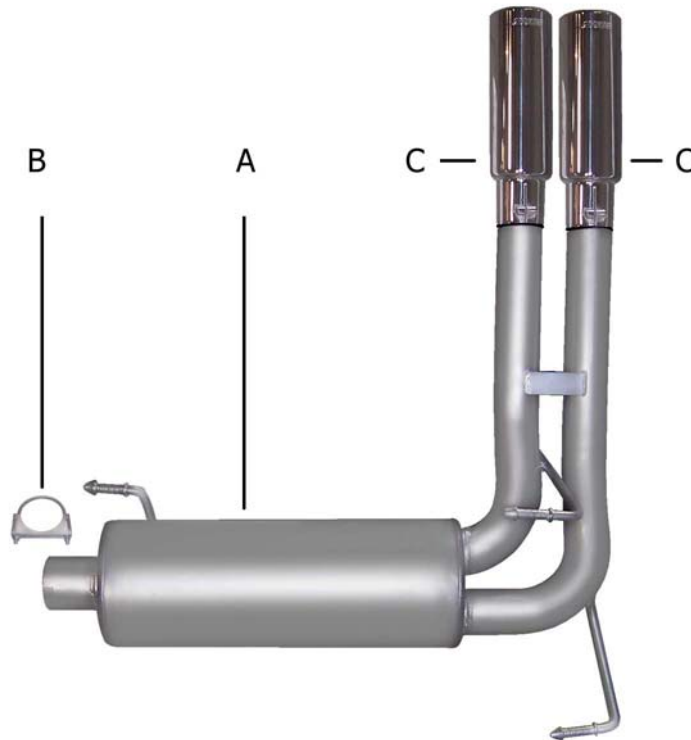

ITEM	PART #	QUANTITY	DESCRIPTION
A	833-700590S	1	MUFFLER ASSEMBLY STAINLESS
B	5758	1	2 3/4" CLAMP
C	500373	2	3 1/2" STAINLESS TIPS

WILL NOT FIT WITH FACTORY GROUND KIT

Thank you very much for purchasing our GIBSON PERFORMANCE EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at 1-800-528-3044, Monday through Friday, 8:00 am to 5:00 pm.0706


EXHAUST INSTALLATION SHEET # 66527

WHEN INSTALLING THIS EXHAUST SYSTEM, MAKE SURE TO USE PROPER SAFETY PRECAUTIONS. USE JACK STANDS WHEN UNDER THE TRUCK, SET PARKING BRAKE, BLOCK TIRES, AND USE SAFETY GLASSES AND GLOVES.

DO NOT WORK WITH HOT PIPES!

SUGGESTED TOOLS:

HACKSAW, 9/16" SOCKET, 1/2" SOCKET, 1/2" WRENCH, JACKSTAND, WD-40

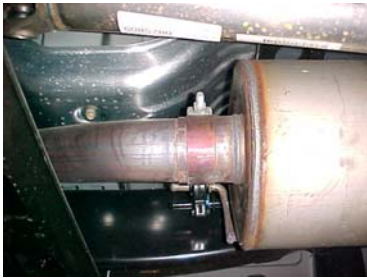

TO REMOVE STOCK EXHAUST REMOVE IT FROM THE CLAMP LOCATED IN FRONT OF YOUR STOCK MUFFLER. NOW CUT OFF YOUR STOCK TAILPIPE JUST BEHIND THE MUFFLER AND REMOVE. LEAVE ALL RUBBER GROMMETS ON THE HANGER. USE WD-40 TO AID IN REMOVAL OF EXHAUST AND HANGERS.



INSTALL MUFFLER ASSEMBLY #A ONTO STOCK PIPE 1-1/2" TO 2". SLIDE WELDED HANGERS INTO RUBBER GROMMETS YOU MAY NEED TO ADJUST WELDED HANGERS TO FIT INTO YOUR GROMMETS. USE A JACKSTAND TO SUPPORT YOUR MUFFLER. USE CLAMP #B TO SECURE IT TO YOUR HEADPIPE. DO NOT TIGHTEN



INSTALL YOUR STAINLESS TIPS. TIGHTEN ALL CLAMPS AFTER YOU MAKE SURE YOUR TAILPIPES ARE LEVEL.

SPECIAL NOTES:

MAKE SURE YOU HAVE A 1" CLEARANCE ON ALL PIPES FROM ALL RUBBER BRAKE LINES, SHOCK BOOTS, TIRES, ETC...