

## INSTALLATION INSTRUCTIONS AND PARTS LIST

### MODELS:

477097, 477101, 477113 (EXTENDED CABS)  
477102, 477108, 477114, 477125 (CREW CABS)  
REGAL 7 OVAL STEPS (BOARDS ONLY)  
UNIVERSAL APPLICATIONS



1. Read instructions completely and check to make sure that all required parts (listed on the service parts list) are on hand before starting the installation.
2. Follow the instructions included with the specific bracket package that you are using to mount the brackets to your vehicle.
3. The step is pre-assembled from the factory. The serial number label is located on the front inside drivers side step assembly.
4. Attaching the step to the mounting bracket:
  - 4.1 Set the step on the mounting brackets, and slide each support mounting plate (item #9) inside the oval step and above each bracket.
  - 4.2 Using the supplied 5/16-18 x 1" black stainless steel hex bolt, washer, and serrated flange nut (items # 10,11&12) attach the step assembly, support mounting plate and mounting bracket.
  - 4.3 Set the step plate in the correct position and tighten all fasteners.  
Torque all 5/16" fasteners to 19 LB FT.



(A LUPERNE Company)

1200 E. Birch St.

Brandon, SD 57005

REV A 31JUL12  
552088 SHEET 1 OF 3 07MAY12

## SERVICE PARTS LIST

| ITEM | PART NO. | QTY | DESCRIPTION                                  |
|------|----------|-----|--|
| 1    | 552074   | 1   | REGAL 7 OVAL STEP, LH,96",477097, EXT CAB    |
| 2    | 552075   | 1   | REGAL 7 OVAL STEP, RH,96",477097, EXT CAB    |
| 1    | 552076   | 1   | REGAL 7 OVAL STEP, LH,100",477101, EXT CAB   |
| 2    | 552077   | 1   | REGAL 7 OVAL STEP, RH,100",477101, EXT CAB   |
| 1    | 552078   | 1   | REGAL 7 OVAL STEP, LH,112",477113, EXT CAB   |
| 2    | 552079   | 1   | REGAL 7 OVAL STEP, RH,112",477113, EXT CAB   |
|      |          |     |  |
| 1    | 552080   | 1   | REGAL 7 OVAL STEP, LH,100",477102, CREW CAB  |
| 2    | 552081   | 1   | REGAL 7 OVAL STEP, RH,100",477102, CREW CAB  |
| 1    | 552501   | 1   | REGAL 7 OVAL STEP, LH, 106",477108, CREW CAB |
| 2    | 552502   | 1   | REGAL 7 OVAL STEP, RH, 106",477108, CREW CAB |
| 1    | 552082   | 1   | REGAL 7 OVAL STEP, LH,112",477114, CREW CAB  |
| 2    | 552083   | 1   | REGAL 7 OVAL STEP, RH,112",477114, CREW CAB  |
| 1    | 552084   | 1   | REGAL 7 OVAL STEP, LH,123",477125, CREW CAB  |
| 2    | 552085   | 1   | REGAL 7 OVAL STEP, RH,123",477125, CREW CAB  |
|      |          |     |  |
| 3    | 109233   | 2   | END CAP LH REAR, RH FRONT,BLK PLASTIC        |
| 4    | 109232   | 2   | END CAP RH REAR, LH FRONT,BLK PLASTIC        |
| 5    | 107863   | 8   | BOLT-CARRAIGE, 10-24 X 0.50,SST, BLACK       |
| 6    | 108909   | 6   | STEP PAD, 25" X 6.5", PLASTIC, BLACK         |
| 7    | 108908   | 36  | BOLT-CARRAIGE, 10-24 X 1.0,SST, BLACK        |
| 8    | 107864   | 44  | NUT-NYLOCK, 10-24, SST                       |
| 9    | 552052   | 10  | SUPPORT MTG PLT, 11 GA, GALV                 |
| 10   | 106997   | 20  | SCREW-HEX HD, 5/16-18X1.0,SST,BLACK          |
| 11   | 106998   | 20  | WSHR-FLAT, 5/16, SST, BLACK                  |
| 12   | 102680   | 20  | NUT-SER FLG, 5/16-18, SST                    |
| 13   | 108913   | 2   | STEP PAD, 15" X 6.5", PLASTIC (IF NEEDED)    |



(A LIVERNE Company)

1200 E. Birch St.

Brandon, SD 57005

REV B 06JUN14


REV A 31JUL12

552088 SHEET 2 OF 3 07MAY12

SERVICE PARTS LIST

|           |        |
|-----------|--------|
| MODEL NO. | 477097 |
|           | 477101 |
|           | 477102 |
|           | 477108 |
|           | 477113 |
|           | 477114 |
|           | 477125 |

NOTE:  
SOME APPLICATIONS WILL  
USE A SMALL STEP PAD  
FOR THE BOX STEP.

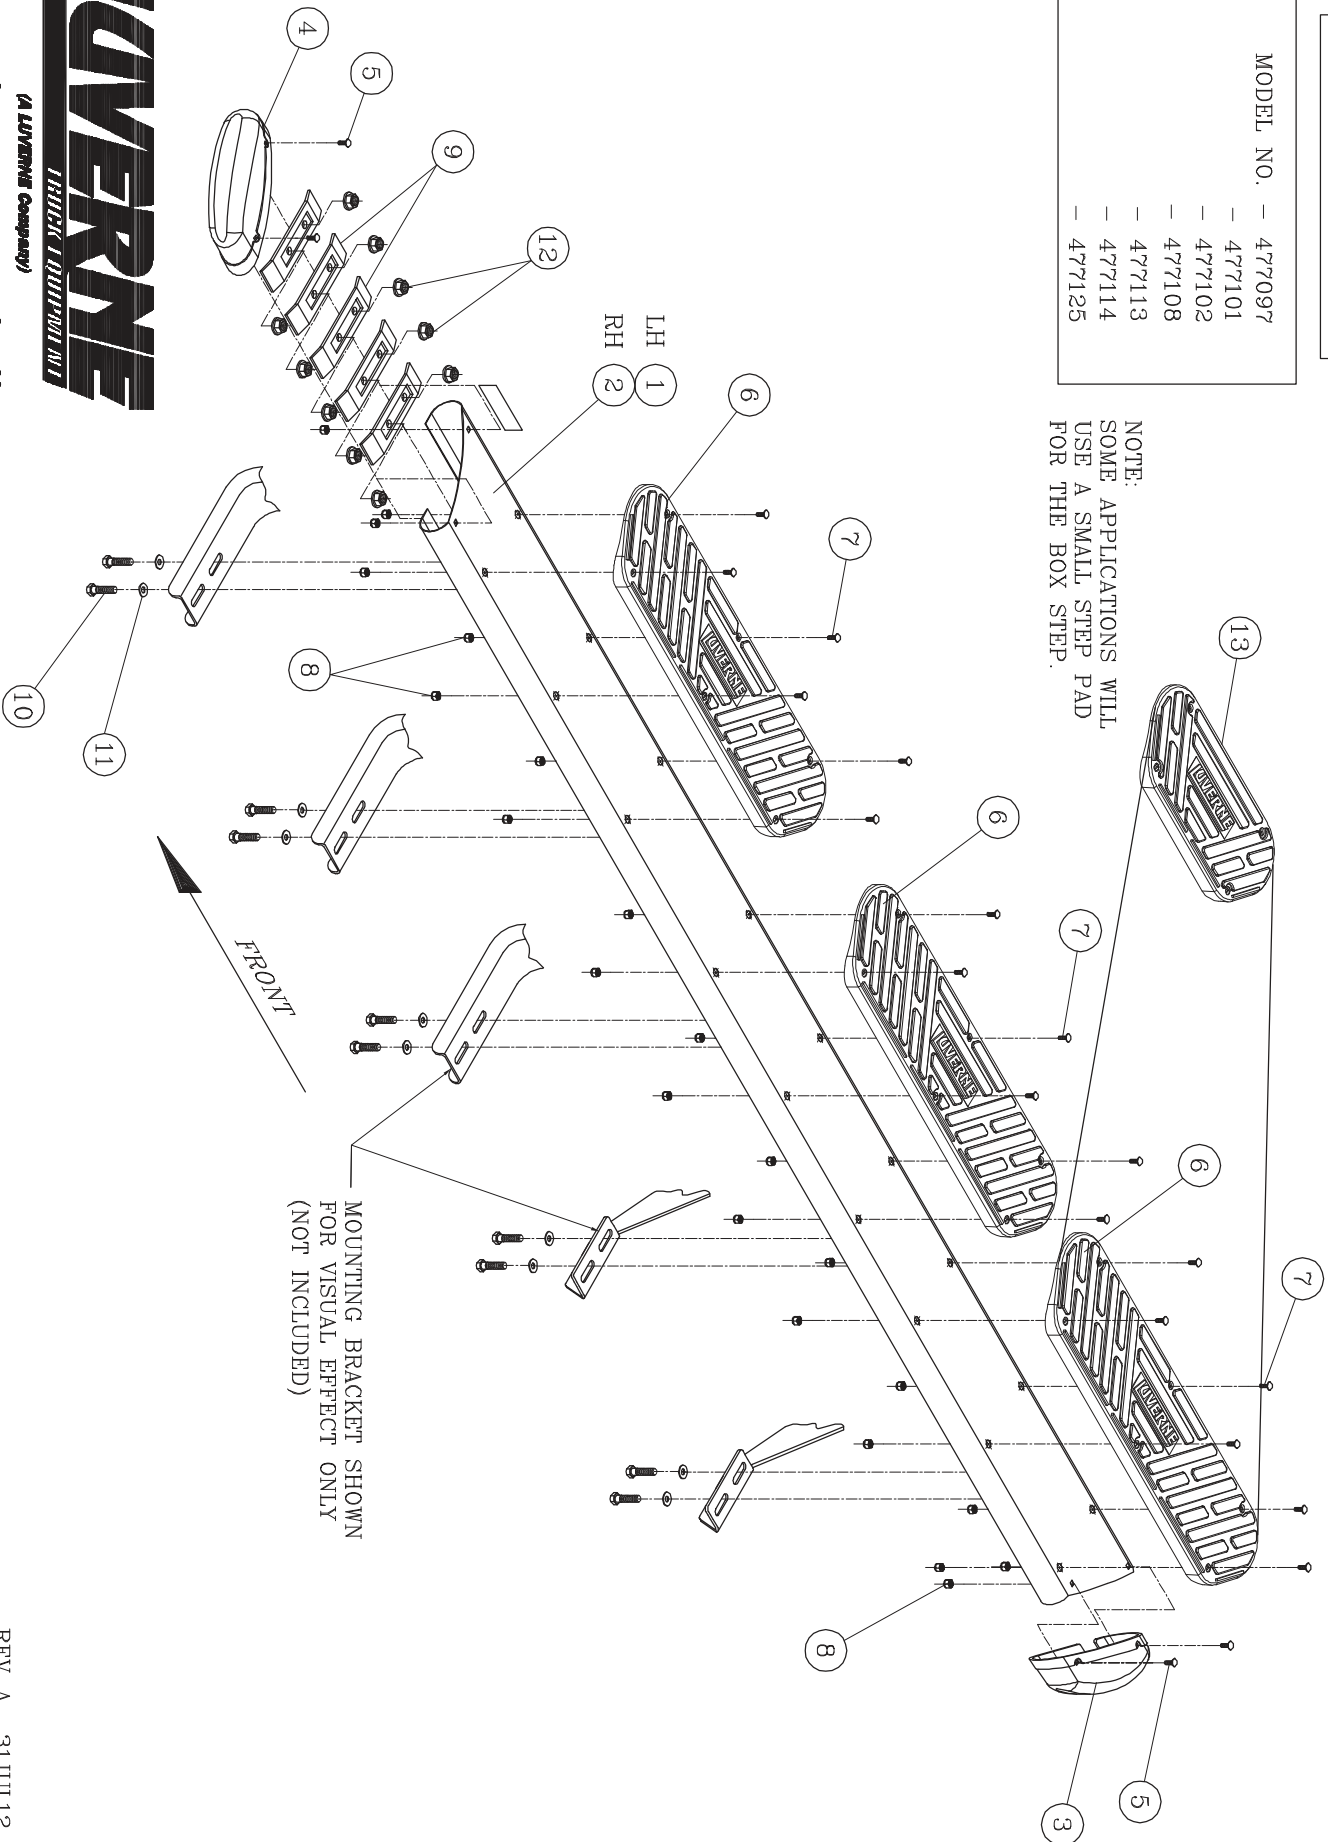

**LAVERNE**  
TRUCK EQUIPMENT  
(A LUYKENS Company)

1200 E. Birch St.

Brandon, SD 57005



## INSTALLATION INSTRUCTIONS AND PARTS LIST

APPLICATION: MODEL 401747 GRIP-STEP/REGAL 7 W2W BRACKETS ON:  
2015+ GM 2500/3500HD REGULAR/DOUBLE/& CREW CAB PICKUPS, GAS/DIESEL  
BODY MOUNT APPLICATION



### NO DRILL APPLICATION

1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.
2. ON THE LEFT SIDE OF THE VEHICLE PREASSEMBLE THE FRONT BRACKET (ITEMS #1, 3, 14) AS SHOWN IN **FIG. 1** USING THREE 3/8"-16 X 1.0" SCREWS, 3/8" FLAT WASHER AND 3/8" FLANGE NUTS (ITEMS #10, 11, 13). TORQUE TO 19 LB. FT.
3. ASSEMBLE THE LOAD REACTION STUDS AND HARDWARE (ITEM #9 THRU #12) AS FOLLOWS.
  - 3.1. ON THE SHORT THREADED END OF THE LOAD REACTION STUD (ITEM #12), INSTALL A 3/8" SERRATED FLANGE NUT (ITEM #11) BACKWARDS TO THE BOTTOM OF THE THREAD. THEN INSTALL A 3/8" FLAT WASHER (ITEM #10) AND RUBBER "CUSHION" WASHER (ITEM #9) TIGHT UP AGAINST THE SERRATED FLANGE NUT. (THE END OF THE STUD MUST BE RECESSED IN THE RUBBER WASHER APPROX. 3/16").
  - 3.2. ON THE LONG THREADED END OF THE STUD, INSTALL A 3/8" SERRATED FLANGE NUT (ITEM #12) BACKWARDS TO NEAR TO THE BOTTOM OF THE THREADS
4. ATTACH THE LOAD REACTION STUD ASSEMBLIES TO THE MOUNTING BRACKETS AS SHOWN IN **FIG. 4**. INSERT THE STUD, FROM WHAT WILL BE THE INBOARD OR FRAME SIDE THRU THE LOWEST HOLE IN THE BENT FLANGE OF THE BRACKET THAT WILL ALLOW THE RUBBER WASHER TO SEAT FIRM AGAINST THE SIDE WALL OF THE FRAME. INSTALL A 3/8" SERRATED FLANGE NUT (ITEM #11) ON THE OUTBOARD END OF THE STUD (FINGER TIGHT ONLY).

#### NOTE:

**DUE TO EXCESSIVE THREAD LOCKER IN THE BODY MOUNT BOLT AREA ON THE 2010+ GM SILVERADO/SIERRA, USE CAUTION WHEN REMOVING THE BODY MOUNT BOLTS.**

5. REMOVE THE FACTORY FRONT, CENTER, AND REAR BODY MOUNT BOLTS AND INSTALL THE MOUNTING BRACKETS PER THE FOLLOWING INSTRUCTIONS:
  - 5.1. INSTALL THE FRONT MOUNTING BRACKET (ITEMS #1, 3) TO THE FRONT BODY MOUNT AS SHOWN (LEAVE THESE FASTENERS FINGER TIGHT).
  - 5.2. INSTALL THE CENTER MOUNTING BRACKET (ITEM #4) TO THE CENTER BODY MOUNT AS SHOWN (LEAVE THESE FASTENERS FINGER TIGHT).

**NOTE: CENTER MOUNTING BRACKET(S) (ITEM #4, 5) ARE USED AS THE REAR BRACKETS ON REGULAR CAB MODELS ONLY.**

- 5.3. INSTALL THE REAR MOUNTING BRACKET (ITEM #8) & WASHER (ITEM #15) TO THE REAR BODY MOUNT AS SHOWN (LEAVE THESE FASTENERS FINGER TIGHT).
- 5.4. ATTACH THE REAR OUTBOARD MTG BRKT (ITEM #6) TO THE REAR INBOARD MTG BRKT (ITEM #8), USING THREE 3/8"-16 X 1.0" SCREWS, 3/8" FLAT WASHERS AND 3/8" FLANGE NUTS. (ITEMS #13, 10, 11). THE REAR OUTBOARD MOUNTING BRACKET MUST BE MOUNTED TO THE BACK SIDE OF THE REAR INBOARD MOUNTING BRACKET (TOWARDS THE REAR OF THE VEHICLE) AS SHOWN IN FIG 2 AND 3. BE SURE TO USE THE CORRECT HOLES AS SHOWN IN FIG. 2 & 3. NOTE THAT THERE IS A DIFFERENCE BETWEEN THE DOUBLE CAB AND CREW CAB APPLICATIONS. TORQUE THE BOLTS TO 19 LB. FT.

6. ATTACH THE SPRING HANGER BRACKETS (ITEM #18) AGAINST THE SIDE OF THE VEHICLE SPRING HANGER AS SHOWN IN **FIG.4**
  - 6.1 LOOSEN THE SPRING HANGER BOLT, OR NUT, JUST ENOUGH TO SLIDE THE INBOARD SPRING HANGER MOUNTING BRACKET (ITEM # 18) BEHIND THE FLANGE OF THE BOLT, OR NUT, POSITION THE INBOARD SPRING HANGER WITH THE CHANNEL OPEN TO THE OUTBOARD SIDE, AS SHOWN.
  - 6.2 INSTALL THE OUTBOARD SPRING HANGER MOUTING BRACKET (ITEM # 19) SO THAT THE INBOARD PORTION OF THE BRACKET FITS INSIDE THE CHANNEL SHAPE OF THE INBOARD SPRING HANGER MOUNTING BRACKET USING THE 3/8-16 X 2 BOLT, 3/8" FLAT WASHER, 1/2" FLAT WASHER & THE 3/8-16 NYLON LOCK NUT (ITEMS # 10, 16, 17, 20) AS SHOWN, LEAVE LOOSE UNTIL THE STEP BOARD IS IN PLACE.
7. INSTALL THE STEP BOARDS AS DESCRIBED BY THE INSTRUCTIONS INCLUDED WITH YOUR STEP BOARDS. (NOTE: INSURE THAT THE MOUNTING BRACKETS DO NOT TOUCH THE INSIDE WALL OF THE BODY MOUNT HOUSING AND TORQUE THE BODY MOUNT FASTENERS TO MANUFACTURES SPECS).
8. POSITION THE LOAD REACTION BOLT ASSEMBLY SO THAT THE RUBBER CUSHION IS SNUG UP AGAINST THE SIDE OF THE FRAME. TIGHTEN THE 3/8" FLANGE NUTS ON EITHER SIDE OF THE BRKT TO 19LB. FT.
9. REPEAT STEPS 1-8 FOR THE RIGHT SIDE OF THE VEHICLE.

## SERVICE PARTS LIST


| ITEM | PART NO. | QTY | DESCRIPTION                                   |
|------|----------|-----|---|
| 1    | 552729   | 1   | BRACKET-MTG, FRONT, LH, SES, 401743           |
| 2    | 552728   | 1   | BRACKET-MTG, FRONT, RH, SES, 401743           |
| 3    | 552718   | 2   | BRACKET-MTG, FRONT, INBOARD, 401743           |
| 4    | 552731   | 1   | BRACKET-MTG, CENTER, LH, SES, 401743          |
| 5    | 552730   | 1   | BRACKET-MTG, CENTER, RH, SES, 401743          |
| 6    | 552733   | 1   | BRACKET-MTG, REAR, LH, SES, 401743            |
| 7    | 552732   | 1   | BRACKET-MTG, REAR, RH, SES, 401743            |
| 8    | 551907   | 2   | BRACKET-MTG, REAR, INBOARD, LH/RH, 401747     |
| 9    | 102592   | 6   | WSHR, RUBBER, .354 ID X 1.00 OD X .75 THK     |
| 10   | 100062   | 22  | WSHR, FL, 3/8", .438 ID X 1.00 OD X .083" THK |
| 11   | 100181   | 30  | NUT, SERR FLG, HEX, 3/8-16 UNC, ZP            |
| 12   | 104686   | 6   | STUD, -DBL ENDED, STL, 3/8-16 X 4.00", ZP     |
| 13   | 100040   | 12  | SCR-HEX HD, 3/8-16 UNC, ZP                    |
| 14   | 551571   | 2   | BRACKET-90 DEGREE, 3 HOLE                     |
| 15   | 108882   | 2   | WSHR, FL, .59 ID X 1.06 OD X .19 THK, ZP      |
| 16   | 101326   | 2   | BOLT, HEX-HEAD, 3/8-16 X 2", ZP               |
| 17   | 102381   | 2   | NUT-NYLOCK, HEX, 3/8-16, ZP                   |
| 18   | 551806   | 2   | BRACKET-MTG, SPRING HANGER, INBOARD, 401117   |
| 19   | 552735   | 2   | BRACKET-MTG, SPRING HANGER, OUTBOARD, 401447  |
| 20   | 100118   | 4   | WSHR, FL, 1/2", ZP                            |

**CURT Group Recommendation:** CURT Group recommends regular inspection and maintenance of the leaf spring attachment point per GM Technical Service Bulletin 09-03-09-001E: Clunking Noise from Rear of Vehicle (Re-torque Leaf Spring Bolts) - 2007-2017 Chevrolet GMC Trucks. Failure to regularly inspect and maintain factory-recommended torque values may result in damage to the vehicle.




SERVICE PARTS LIST

MODEL NO. 401747

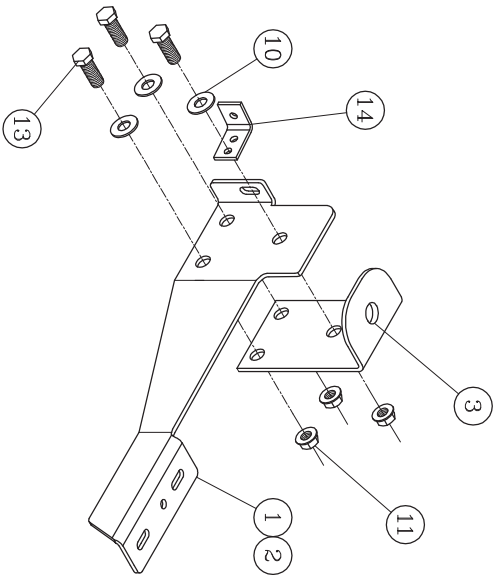

FRONT BRACKET  
ASSEMBLY

FIG. 1

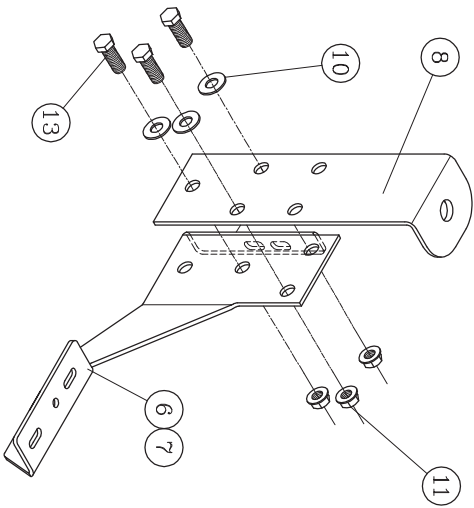

DOUBLE CAB  
REAR BRACKET  
ASSEMBLY


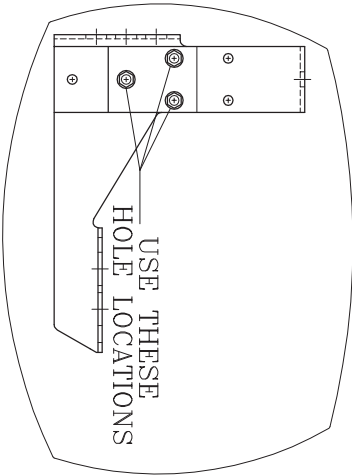


FIG. 2

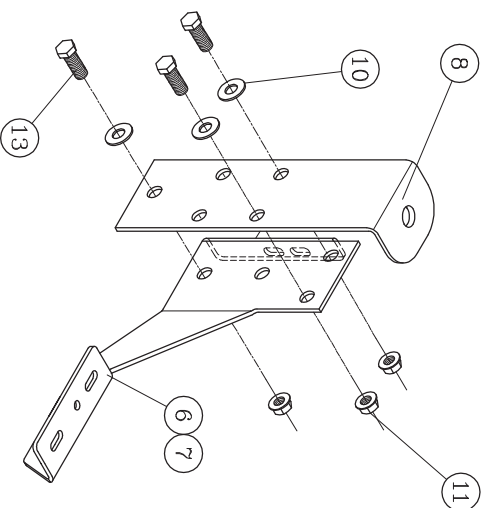

CREW CAB  
REAR BRACKET  
ASSEMBLY


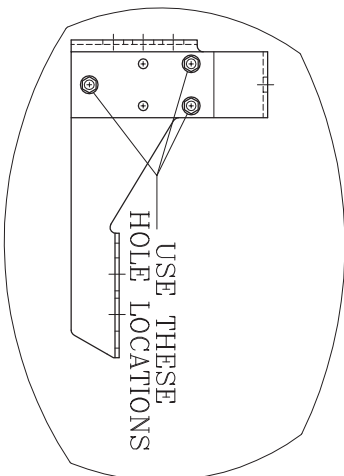


FIG. 3



NOTE:  
THE REAR BODY MOUNT BRACKETS  
(ITEMS 6,7,8) ARE NOT USED ON  
REGULAR CAB INSTALLATIONS.

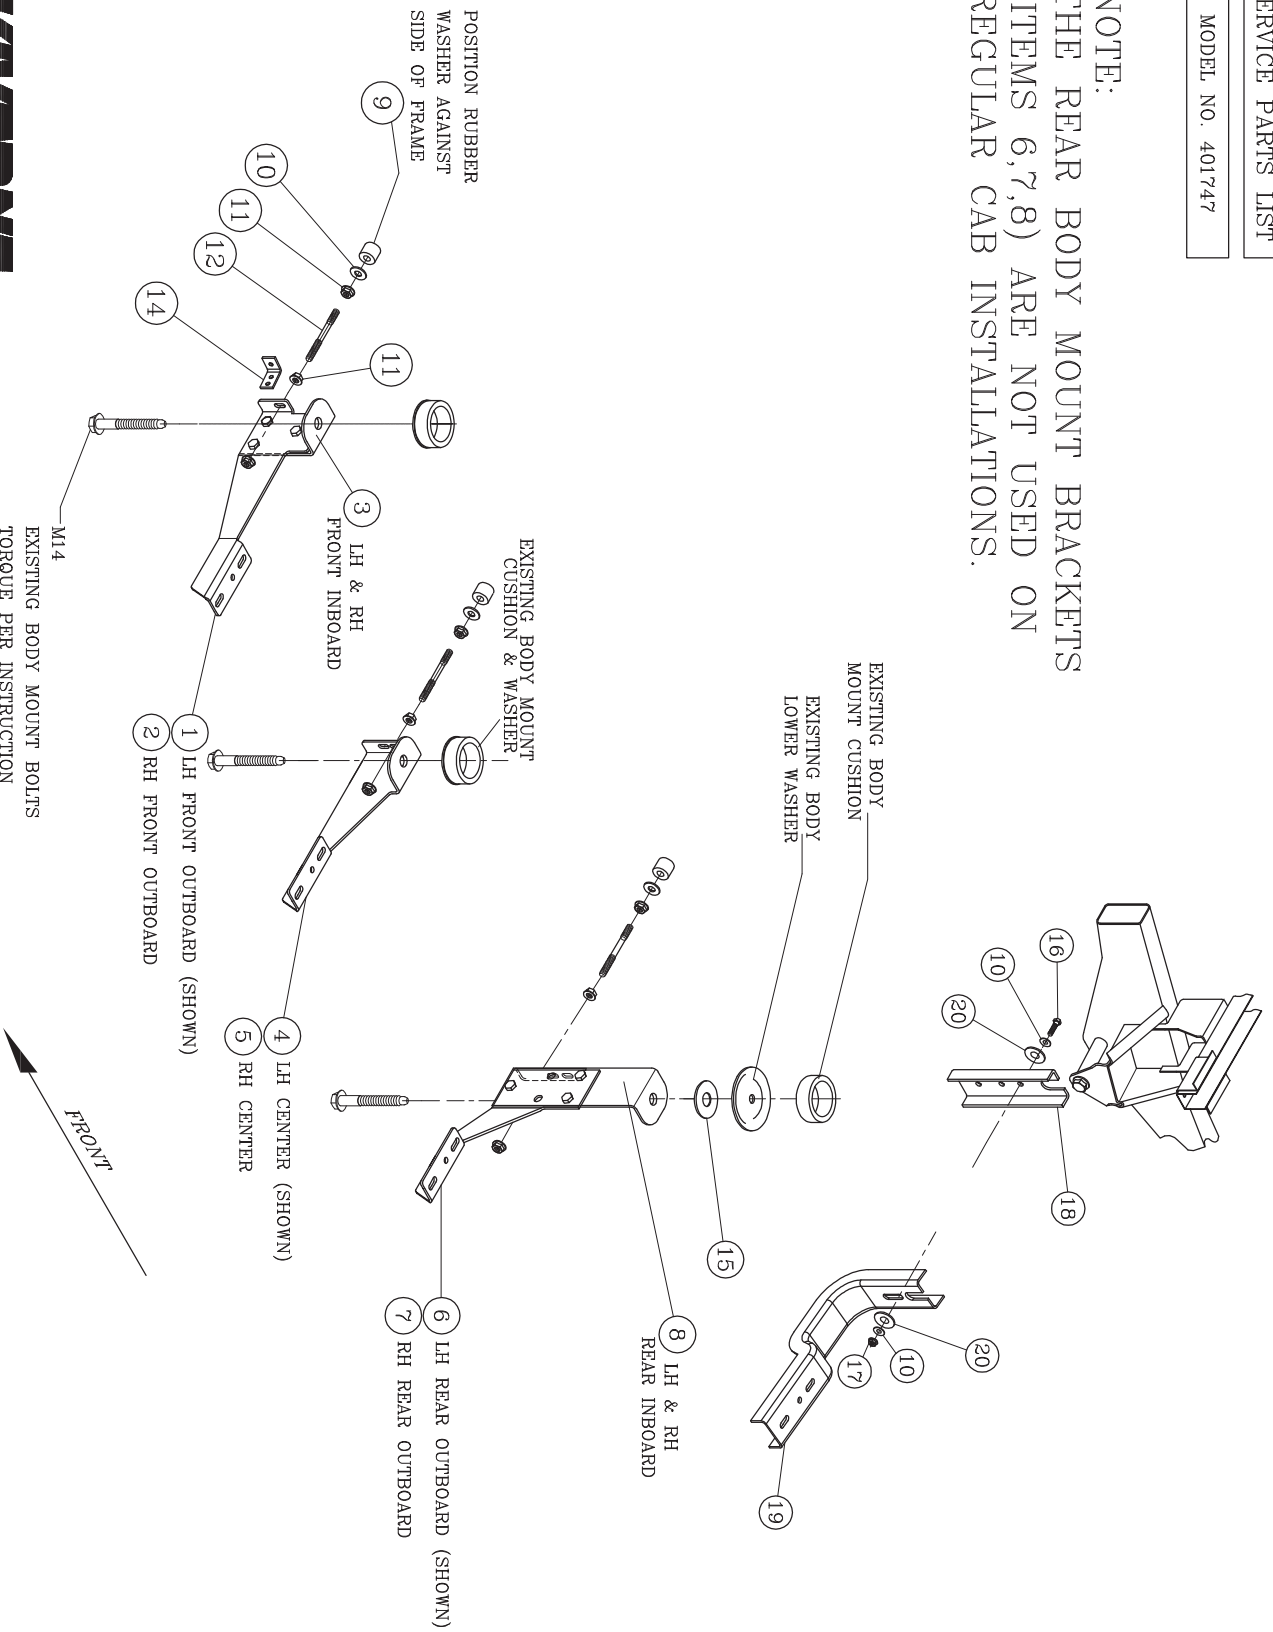

LEFT (DRIVER) SIDE SHOWN  
-RIGHT (PASSENGER) SIDE OPPOSITE-

