



**#3265 TORQUE-CURVE
MPFI SPACER**
2004-08 Ford F-150, F-250, F-350 5.4L
2005-08 Ford Expedition 5.4L
2006-08 Lincoln Mark LT 5.4L

INSTALLATION INSTRUCTIONS

Important! Read all instructions before you begin installation.


THIS KIT CONTAINS

- 1 - Hamburger's Performance Spacer
- 1 - O-ring
- 4 - Air Box Spacers

TOOL LIST

- 8 - 6mm X 45mm Hex Bolts
- 8 - 6mm Flat Washers
- 10mm Deep Socket


1. **DISCONNECT NEGATIVE (-) BATTERY CABLE.**
2. Remove air intake air box assembly.
3. Remove (4) bolts from throttle body. **(Ref. A)**
4. Install O-ring into groove of Hamburger's Spacer.
5. Install Hamburger's Spacer (o-ring side up) using (4) 6mm x 45mm bolts and (4) 6mm flat washers. **(Ref. A and B)**
6. Reinstall air intake air box assembly using (4) Air Box Spacers, (4) 6mm x 45mm bolts, and (4) 6mm flat washers. **(Ref. C)**
7. Inspect and Test throttle linkage for full Open and Closed travel before driving.
8. Reconnect negative (-) battery cable.

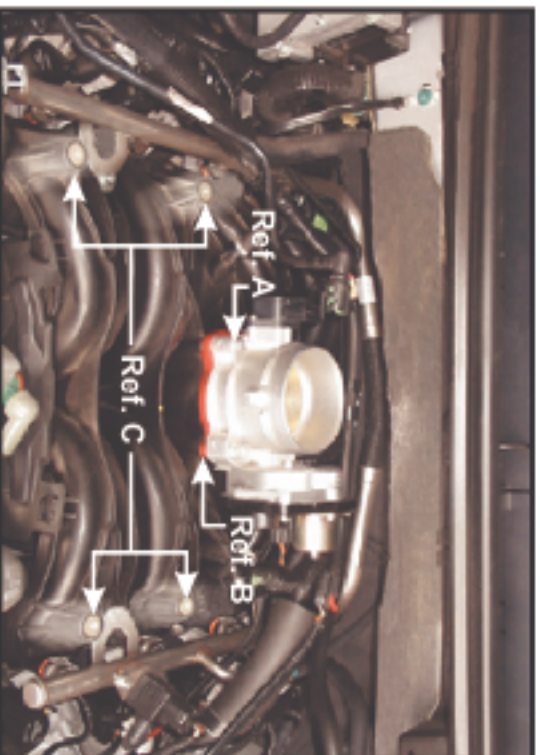

Ref. A- (4) Bolts 6mmx45mm, (4) 6mm Flat Washers

Ref. B- Hamburger's Spacer, O-ring

Ref. C- (4) spacers, (4) Bolts 6mmx45mm, (4) 6mm Flat Washers

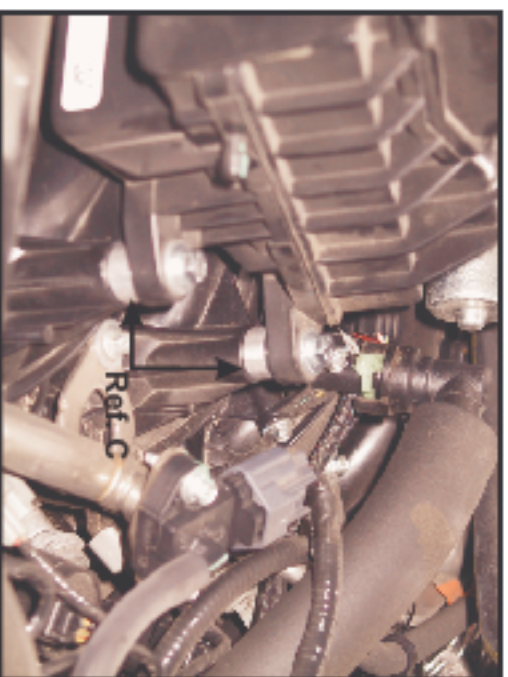

Spacer installed on throttle body and air intake completely assembled with air box spacers in place.