



**PART # 69670, 69676 & 69678**  
**INSTRUCTION SHEET**  
SB CHEVY CONVERSION to ALL 1972-86 JEEP CJ's  
(FITS D-PORT, SQUARE PORT & ROUND PORT)  
(STRAIGHT & ANGLE PLUG HEADS, CHEVY ONLY)

**CAUTION!** This is a custom designed exhaust header system, designed for this particular application (s). Do not bend, bang, cut, dent, drill or heat any portion of this header! Any alteration other than those suggested in this instruction sheet will void the Hedman Lifetime Guarantee!  
To prevent leaks, install your headers using Hedman Hedders exhaust gaskets ONLY and a spray copper gasket sealant.

**BEFORE STARTING INSTALLATION:**

It is necessary to raise the vehicle at least 36 inches from the ground. A floor hoist is recommended, if not available, use a hydraulic floor jack with jack stands. **DO NOT USE A BUMPER JACK!**

**INSTALLATION INSTRUCTIONS:**

1. Disconnect battery cable and wire to temperature sending unit.
2. Remove all spark plugs (Number Wires), factory manifolds, and if necessary, the starter.

**LEFT SIDE:**

1. With gasket in place, install left header. Start all bolts and tighten evenly.

**RIGHT SIDE:**

1. With gasket in place, install right header. Start all bolts. **DO NOT TIGHTEN!**
2. Replace starter if removed.
3. Tighten down all header bolts evenly.
4. Fabricate exhaust and attach to headers.
5. Replace and re-connect all parts that have been removed or disconnected and check for proper clearance between hedders and transmission cooling hoses, brake and fuel lines and electrical wire. Re-route as necessary.
6. Start engine, take vehicle for test drive, allowing engine to reach normal operating temperature. Check for leaks and new or unusual noises. After test drive, re-tighten all header bolts and fasteners.


**ENJOY YOUR HEADERS WHILE COMBINING INCREASED FUEL ECONOMY WITH BETTER PERFORMANCE.**

**SPECIAL INSTRUCTIONS!**

After installing your headers it is very important that your exhaust system be suspended properly. As indicated in the drawing below you must place hangers as close to the header collector as possible. Rubber hangers should be used to allow the front of the system to flex with the engine torque. A hanger is needed before and after the muffler (s). When your exhaust system is unbolted from the header collector, it should remain suspended all by itself. Your Headers Are Not designed to support your exhaust system. Failure to follow these instructions will most likely result in cracks around the area where your primary tubes and collector are welded together, and will nullify your "Lifetime Guarantee".

**DO NOT WRAP YOUR NEW HEADERS!**

The use of thermal wraps will drastically shorten the life of your Headers, and will void the Hedman "Lifetime Guarantee".

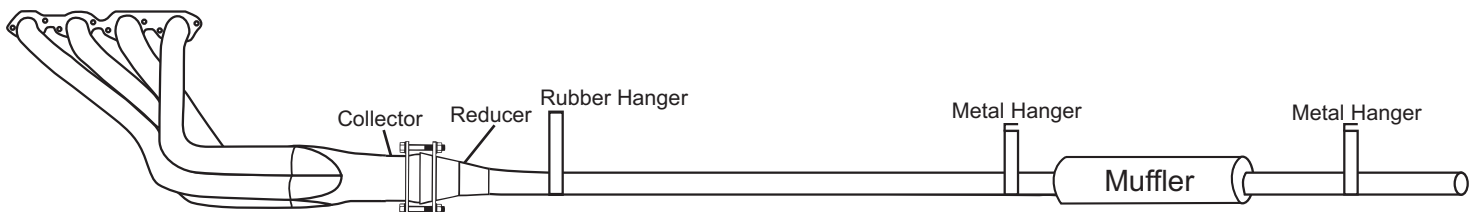

**WARNING:** Removal of catalytic converters and other factory air pollution control devices is illegal. We recommend you adhere to your state's local laws. Our testing indicates performance is not significantly affected by these devices.

12438 Putnam Street • Whittier, CA 90602 • tel (562) 921-0404 • fax (562) 921-7515  
website: [www.hedman.com](http://www.hedman.com) • email: [techsupport@hedman.com](mailto:techsupport@hedman.com)