



WEATHERBEATER™ FLOOR LINERS

PT #1836

CARE AND USE INSTRUCTIONS

Thank you for selecting an WeatherBeater® Floor Liner from Husky Liners. Your new front floor liners are custom molded to fit your vehicle. The liners are made to take the place of your factory floor mat(s). ***For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner.*** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR WEATHERBEATER FRONT FLOOR LINERS



LEFT OR DRIVER'S SIDE



RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR FRONT LINERS, MOVE BOTH FRONT SEATS TO THEIR MOST REARWARD POSITION. NEXT, REMOVE ANY EXISTING FLOOR MATS FROM YOUR VEHICLE AND INSTALL THE LINERS POSITIONED AS SHOWN ABOVE. THE DRIVER'S SIDE LINER WILL ATTACH TO THE FACTORY FLOOR MAT RETENTION POST. SIMPLY ALIGN THE LINER OVER THE POSTS AND PUSH DOWN FIRMLY. AN ADDITIONAL RETENTION POST IS INCLUDED THAT CAN BE INSTALLED IN THE PASSENGER SIDE FLOOR (SEE INSTRUCTIONS ON THE BACK OF THIS PAGE). ONCE THE LINERS ARE INSTALLED, MOVE THE SEATS BACK TO THEIR DESIRED LOCATIONS.



WEATHERBEATER™ FLOOR LINERS

PT #1836

HUSKY FLOOR LINER RETAINING CLIP INSTALLATION INSTRUCTIONS

YOUR LINER SET INCLUDES OUR NEW FLOOR LINER RETAINING CLIP. THIS RETAINING CLIP GIVES THE EXTRA SECURITY WHILE KEEPING SPILLS AND DEBRIS TRAPPED INSIDE THE LINERS. TO INSTALL THE HUSKY® LINER RETAINING CLIPS, SIMPLY FOLLOW THE INSTRUCTIONS BELOW:

- 1) Pre fit your new Xact Contour floor liner in your vehicle (Image 1).
- 2) Insert the carpet retention screw into the bottom of the Xact Contour liner (Image 2).
- 3) Press down on the liner to pre-mark the carpet screw into the carpet (Image 3).
- 4) Install the carpet retention screw into the carpet with a flat blade screwdriver (Image 4).
- 5) Press the Xact Contour liner over the top of the carpet screw post (Image 3).



Image 1.

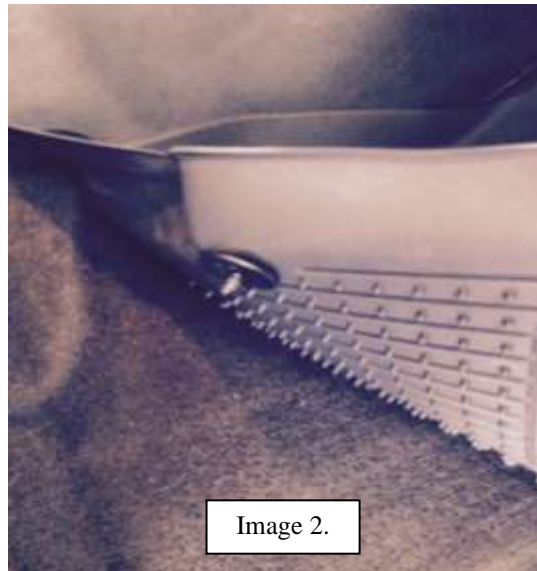


Image 2.



Image 3.



Image 4.