
## THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

## CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting*.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR BUICK ENCLAVE/GMC ACADIA/ CHEVROLET TRAVERSE/SATURN OUTLOOK 2<sup>ND</sup> SEAT FLOOR LINER FOR VEHICLES WITH 2ND ROW BUCKET SEATING WITH OR WITHOUT A FACTORY CONSOLE

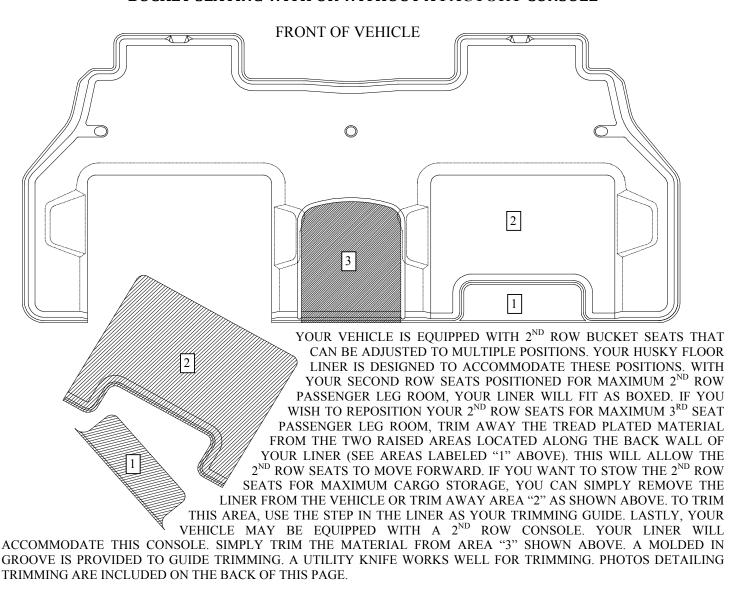

## **INSTALLATION PHOTOS SHOWING TRIMMING DETAILS FOR PART #6102**





PART #6102 SHOWING THE TRIM AREA FOR A SECOND ROW CONSOLE EQUIPPED VEHICLE. NOTE THAT THERE IS A MOLDED IN GROOVE ALONG THE EDGE OF THE RAISED ROUND TO AID IN TRIMMING. THE PHOTO IN THE INSET SHOWS THE LINER TRIMMED.