


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR BUICK ENCLAVE/CHEVROLET TRVERSE/GMC ACADIA/SATURN OUTLOOK SECOND SEAT LINER—FITS VEHICLES WITH SECOND ROW BENCH SEATING

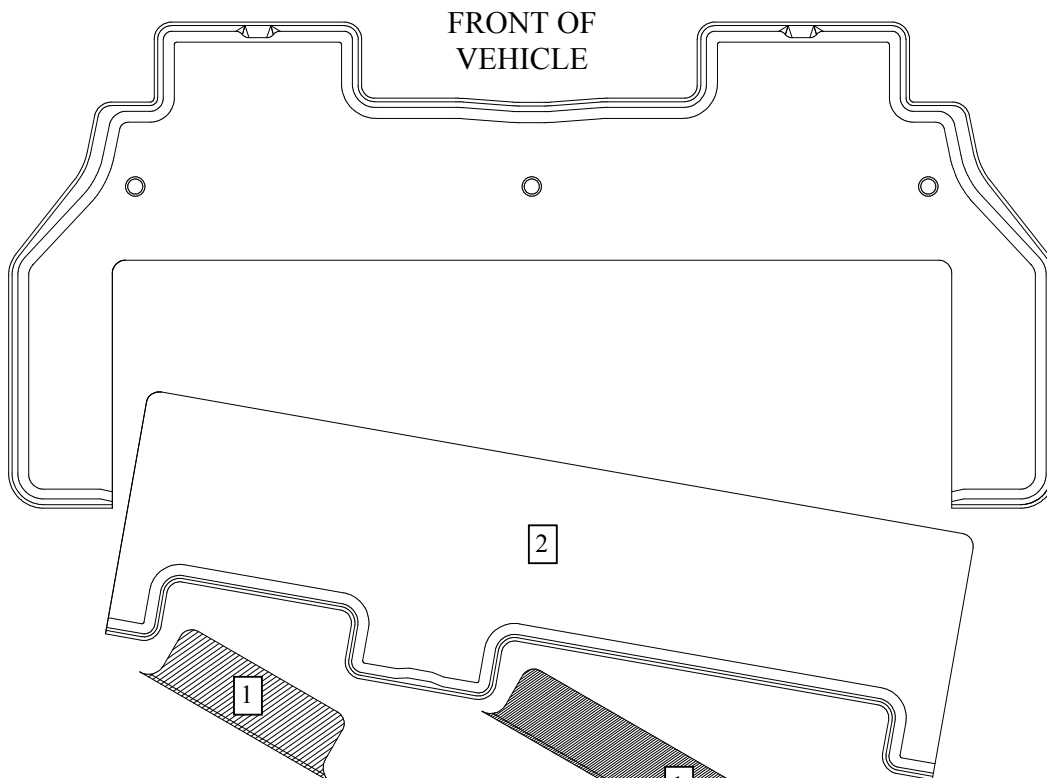

YOUR VEHICLE IS EQUIPPED WITH 2ND ROW BENCH ADJUSTED TO MULTIPLE POSITIONS. YOUR HUSKY TO ACCOMMODATE THESE POSITIONS VIA TRIM OPTIONS. SEATS POSITIONED FOR MAXIMUM 2ND ROW PASSENGER LEG FIT “AS BOXED”. IF YOU WISH TO REPOSITION YOUR 2ND ROW SEAT PASSENGER LEG ROOM, TRIM AWAY THE TREAD PLATED MATERIAL FROM THE TWO RAISED AREAS LOCATED ALONG THE BACK WALL OF YOUR LINER (SEE AREAS LABELED 1 ABOVE). THIS WILL ALLOW THE 2ND ROW SEATS TO MOVE FORWARD. IF YOU WANT TO STOW THE 2ND ROW SEATS FOR MAXIMUM CARGO STORAGE, YOU CAN SIMPLY REMOVE THE LINER OR TRIM AWAY AREA “2” AS SHOWN ABOVE. TO TRIM THIS AREA, USE THE STEP IN THE LINER AS YOUR TRIMMING GUIDE. A UTILITY KNIFE WORKS WELL FOR TRIMMING. PHOTOS DETAILING TRIMMING ARE INCLUDED ON THE BACK OF THIS PAGE.

INSTALLATION PHOTOS SHOWING TRIMMING DETAILS FOR PART #6103

