


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat(s) before installing your new floor liners. *However, do not remove the factory-installed carpeting.*

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET/GMC CREW CAB TRUCK SECOND SEAT FLOOR LINER

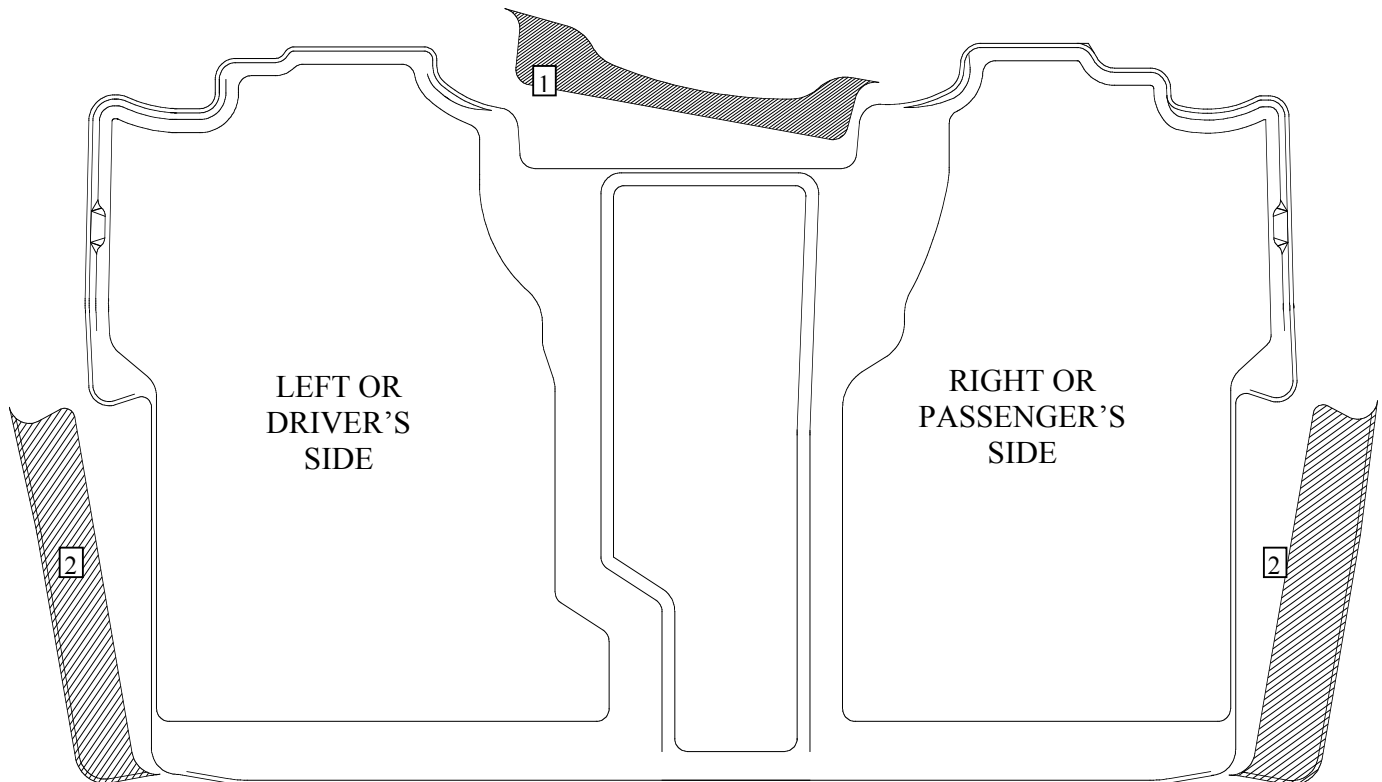

NOTE: IF YOUR TRUCK IS EQUIPPED WITH THE 40/20/40 FRONT BENCH SEAT, YOU WILL NEED TO TRIM AWAY A SECTION OF YOUR LINER. THIS IS EASILY DONE USING A UTILITY KNIFE OR PAIR OF HEAVY SHEARS. SIMPLY USE THE MOLDED IN GROOVE IN THE LINER AS YOUR TRIM GUIDE, REMOVING THE PORTION OF THE LINER ON THE "HUMP" PORTION OF THE LINER AS SHOWN ABOVE (SEE AREA "1"). MORE PHOTOS OF THE PART ARE ATTACHED ON THE BACK OF THIS PAGE.

YOUR HUSKY LINER WILL ALSO WORK WITH THE HUSKY GEAR BOX. TO ALLOW THE LINER TO FIT PROPERLY WITH THE GEAR BOX MOUNTED ON TOP OF IT, YOU WILL FIRST NEED TO TRIM THE AREAS OF THE LINER ABOVE NOTATED WITH A "2". TO TRIM, USE THE MOLDED IN OFFSET AS YOUR TRIMMING GUIDE. SEE PHOTOS ON BACK SIDE OF PAGE TO AID IN TRIMMING.

PART #6152 INSTALLED IN A CREW CAB TRUCK EQUIPPED WITH A 40/20/40 SPLIT BENCH FRONT SEAT. NOTE LINER HAS BEEN TRIMMED.



PART #6152 INSTALLED IN A CREW CAB TRUCK EQUIPPED WITH FRONT ROW CAPTAIN'S CHAIRS. NO TRIMMING IS NEEDED WITH THIS CONFIGURATION.



PHOTOS SHOWING RAISED OFFSET IN PART TO GUIDE TRIMMING NEEDED FOR USE WITH HUSKY GEAR BOX AND LASTLY, A TRIMMED PART.

