
THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit Ford F250 & F350 Super Duty Super Cab trucks. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these will make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD SUPER DUTY SUPER CAB TRUCK SECOND SEAT FLOOR LINER

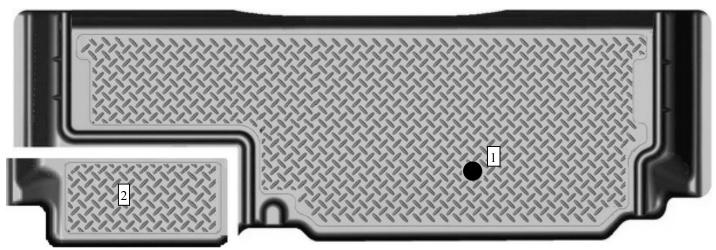

FRONT OF VEHICLE

TO EASE INSTALLATION OF YOUR NEW FLOOR LINER, FIRST MOVE THE FRONT ROW SEATS TO THEIR MOST FORWARD POSITION. WITH THIS DONE, INSTALL YOUR LINER AS SHOW AND READJUST YOUR FRONT ROW SEATS AS DESIRED.

IF YOUR TRUCK HAS A JACK TOOL POUCH LOCATED UNDER THE REAR PASSENGER SEAT, YOU WILL NEED TO TRIM YOUR HUSKY LINER BEFORE INSTALLING IT. TO ACCOMMODATE THE TOOL POUCH RETAING STUD, SIMPLY TRIM AWAY THE RECESSED MATERIAL FROM THE TOP OF THE RAISED LOCATING BOSS MOLDED INTO THE LINER (SEE AREA "1" ON DRAWING ABOVE & PHOTOS ON BACK OF THIS SHEET). NEXT, REMOVE THE JACK TOOL POUCH ASSEMBLY BY REMOVING THE WING NUT RETAINING STUD. WITH THIS DONE, INSTALL YOUR LINER AND REPLACE THE TOOL POUCH ASSEMBLY, SECURING IT IN PLACE WITH THE ORIGINAL BRACKETS AND WING NUT STUD.

IF YOUR TRUCK IS EQUIPPED WITH THE OPTIONAL AUDIOPHILE STEREO SYSTEM, YOUR TRUCK HAS A SUB-WOOFER MOUNTED UNDER THE REAR DRIVER'S SIDE SEAT. YOUR LINER WILL NEED TO BE TRIMMED TO ACCOMMODATE THIS FEATURE. TO TRIM, SIMPLY FOLLOW THE MOLDED IN STEP IN YOUR LINER LOCATED ALONG THE OUTER EDGE OF THE RAISED PROTECTIVE MOAT (SEE AREA "2" ON DRAWING ABOVE AND PHOTOS ON BACK). A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.

HUSKY LINER PART #6384 INSTALLATION PHOTOS

