

## **Installation Instructions for 102000 to 102434 Push-Loc Hose**

Available in: Black, Red, Blue, Grey & Yellow; in a variety of sizes and lengths.

### **WARNING!**


Check for leaks before starting your vehicle. Take precautions when working with gasoline – It is a fire hazard and is potentially explosive.

### **Installation Instructions:**

1. Cut hose to length using a sharp knife or shears.



2. Slide decorative cover over hose (the hex end goes toward the tip of the hose). Liberally oil the inside of the hose and barbed end of the hose end.

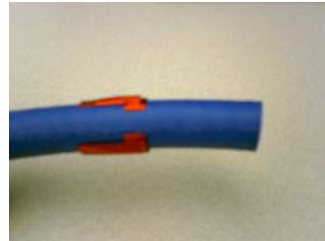

3. Insert the barbed end into hose using a twisting action.



4. Put the swivel end at center hex in a vise. We recommend a vise jaw protector such as JEGS #555-80548 to protect the hose end against scratching. Using a twisting motion, make the bottom of the hex even with the hose edge.



5. Using a flat screwdriver, pry the hex cover open and push up until it bottoms out on the hex. Note: Be sure the slot is positioned to the back of the hose assembly for appearance purposes.



**1-800-345-4545 [jeps.com](http://jeps.com)**