


Installation Instructions for 15797 Universal Hi-Rise Throttle Linkage

Part	Qty.	Part	Qty.
Throttle Linkage Turnbuckle	1	1/4"-28 Angled Threaded Rod RH	1
1/4"-28 Threaded Rod LH	1	Linkage Swivel 1/4"-28 RH	1
Linkage Swivel 1/4"-28 LH	1	1/4"-28 SS Hex Lock Nut	2
1/4"-28 SS Hex Jam Nut RH	2	1/4"-28 SS Hex Jam Nut LH	2
Carburetor Linkage Bushing	4		

NOTE: Left hand threaded end of turnbuckle is marked with an engraved line.

Installation Instructions:

1. Install the Left Hand(LH) Threaded Rod into the Left Hand(LH) Linkage Swivel all the way and tighten with one Left Hand(LH) Jam Nut.
2. Install a second Left Hand(LH) Jam Nut onto the Left Hand(LH) Threaded Rod followed by the Turnbuckle. DO NOT tighten at this time.
3. Install Left Hand(LH) Linkage Swivel onto the vehicles Throttle Lever using the supplied Carburetor Linkage Bushings and one SS Hex Lock Nut.
4. Install the Right Hand(RH) Angled Threaded Rod into the Right Hand(RH) Linkage Swivel all the way and tighten with one Right Hand(RH) Jam Nut.
5. Install a second Right Hand(RH) Jam Nut onto the Right Hand(RH) Threaded Rod.
6. Install the Right Hand(RH) Threaded Rod into the Turnbuckle while aligning the Right Hand(RH) Linkage Swivel up with the carburetor linkage using the supplied Carburetor Linkage Bushings and one SS Hex Lock Nut.
7. Adjust the Turnbuckle to desired length ensuring the Left Hand(LH) and Right Hand(RH) Threaded Rods are of equal distance and tighten Jam Nuts.
8. Check throttle linkage operation before moving/driving vehicle.

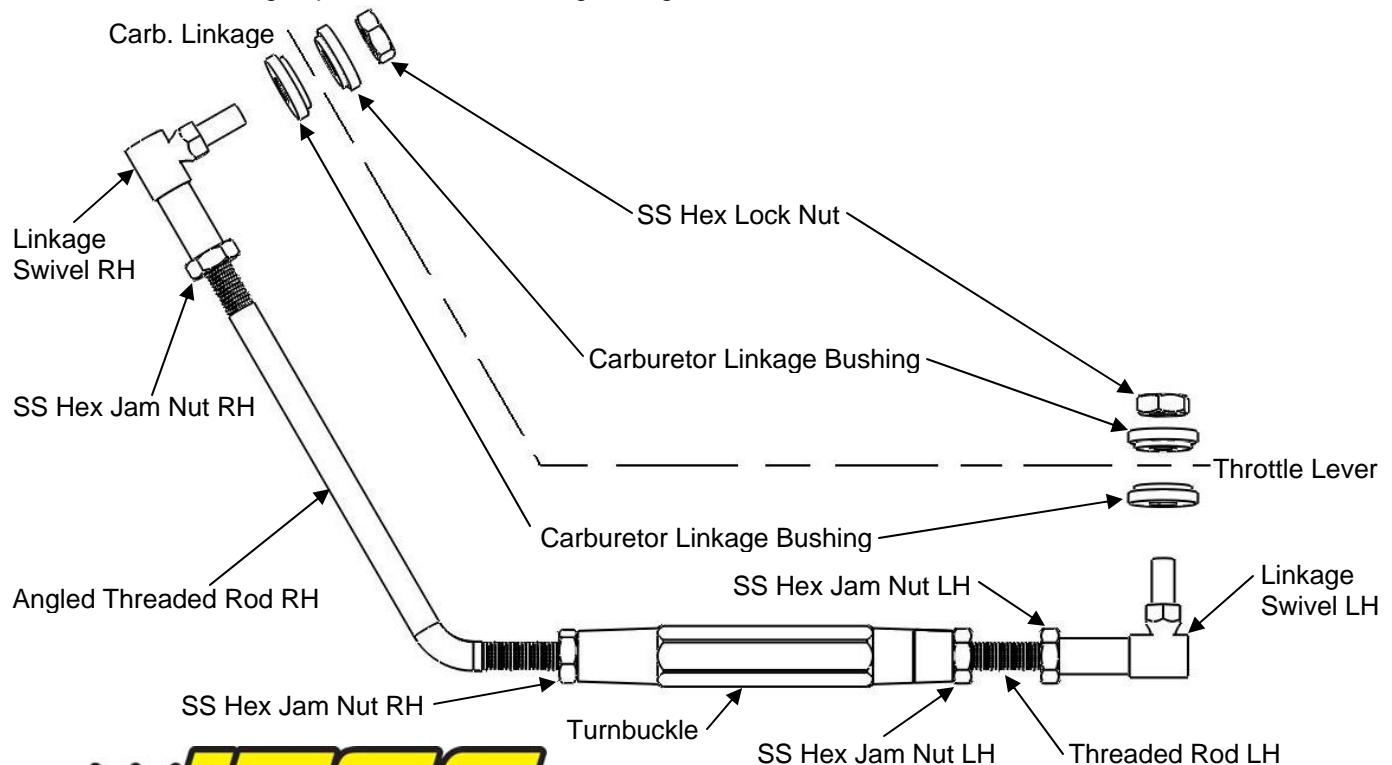

1-800-345-4545 jeps.com