


Installation Instructions for 40202 & 40207 Universal Fit Coil Wire

HEI TERMINAL

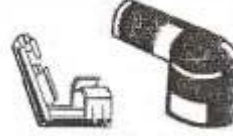

SOCKET STYLE TERMINAL



Installation Instructions:

1. Place distributor boot over unfinished spark plug wire. *Tip: use silicone to make it easier to slide boot onto wire.*
2. Strip away 1/2" of plug wire installation to expose conductor core. **NOTE:** Special car must be taken to avoid damaging the outer coating of the resistor core.
3. Fold the conductor core over the spark plug wire installation.
4. Place metal terminal over folded conductor and spark plug wire installation. **NOTE:** Ensure the conductor core is folded back and in contact with terminal.
5. Slightly bend the crimp terminal inwards. This allows the crimp tool to easily fit over the terminal.
6. Crimp terminal onto spark plug wire. Use JEGS #555-80570 Crimping Tool.
7. Slide distributor boot over terminal.
8. Route new wire through same brackets as old wires. Press terminals and boots firmly onto coil and into distributor cap.

