




Installation Instructions for 80110-12 Door Strip Kits

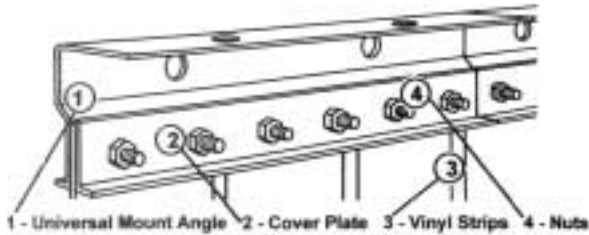

Universal Mounting Hardware: Kits include Heavy-Duty 14 gauge galvanized steel Track Mounts with pre-drilled holes in lengths of 2' or 3' offering flexibility in mounting methods. Permanent 1/4" diameter studs and nuts are included.

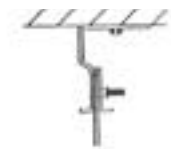

Header Mount
-to overhead surface of Intel inside doorway.

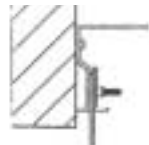


Wall Mount
-to wall surface immediately over doorway.



Threaded Rod
-suspended by clamp & 1/2" rod from overhead beam.

A). Determine the desired type of mounting from the illustrations at left.

B). Attach hardware to surface by using 5/16" diameter minimum fasteners (not included). For the Header Mount style, hardware may have to be cut to fit the opening.

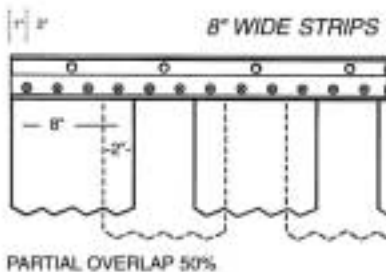

C). For proper spacing a 2" overlap is required as shown in illustration at left.

Concave/Convex Construction
(allows strips to be interlocked when hung, forming an excellent seal)



D). For the best results, unroll the vinyl strips and lie flat in a warm area for a minimum of 24 hours prior to installation.

E). Attach strips to permanent 1/4" studs, making sure concave surfaces face each other as illustrated above. Place 12" long cover plates over strips, use lock nuts to hold in place.

Modifications: If the final strip does not match the standard overlap, we suggest altering the last strip (or strips). The PVC strip material can be trimmed to width using a straight edge and a utility knife. Score the material then tear off the excess.

Replacing Strips

- Remove lock nuts and cover plate.
- Remove strips to be replaced.
- Install new strips, making sure that concave sides face each other.
- Replace cover plate and lock nuts snugly against each strip.

Maintenance: Vinyl strips can be cleaned with a household detergent and water. Rinse thoroughly with water after cleaning. Do not use bleach or ammonia.