

User Guide for 90093

Cargo Carrier

18 Cu.Ft. (510 cm³)



JEGS.com

1-800-345-4545


Table of Contents

Parts List	02
Read Before Installation	03
Caution	03
Installation	04-07
Warning	08
Safety	08


Parts List



②

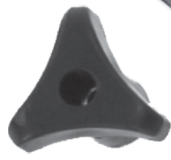

③

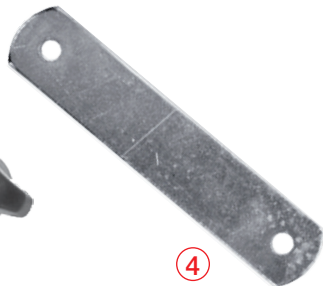

④



⑤



⑥

1	(1) Rooftop Carrier [18 cu-ft]	5	(4) Mounting Brackets
2	(1) Caution Sticker	6	(4) Clip Hooks
3	(8) Threaded Knobs	7	(2) Keys
4	(4) Mounting Back Plates		

Read Before Installation

Thank you for your purchase of this JEGSPORT 18 cu-ft Cargo Carrier.

Before installation, please be sure to verify that all of the kit components have been received. Reference the parts list on the previous page. If any components are missing or damaged please contact customer service at: 1.800.345.4545.

Installation of this carrier can be done without the use of tools. If you are not comfortable performing the installation yourself contact a trusted repair shop.

This carrier requires a roof rack and cross rails for installation. These components are not included with this kit.

If you are having issues, or have questions regarding the installation of this cargo carrier, please contact our technical support department at: 1.800.345.4545.


Return Information: Before modifying any of the parts in this cargo carrier, please trial fit all components. ***Once this cargo carrier has been used, or modified, it will not be accepted for return.***

Caution


- Prior to assembly and installing the cargo carrier carefully read and follow all instructions. Assembly and installation is your responsibility. The manufacturer's warranty is exclusively limited to material and workmanship defects and is exclusively limited to replacement of a defective cargo carrier. Any damage to your vehicle, its contents, or to any person or property is excluded from the warranty.
- Due to the size and structural differences between vehicles, we rely upon your discretion in attaching the cargo carrier to your roof rack cross rails.
- Consult your owner's manual for recommended roof rack load capacity, however in no case should more than 110 lbs. of evenly distributed cargo be transported in the cargo carrier.
- All hardware should be properly attached, tightened and locked prior to all use. Periodically inspect hardware to ensure they are fastened securely.
- The cargo carrier is moisture resistant, not waterproof. Protect the contents accordingly.
- Remove the cargo carrier when not in use and before entering automatic car washes and low clearance areas.
- All latches and locks must be engaged (and key removed) prior to putting vehicle in motion. When locking the cargo carrier, check to make sure lock is fully engaged by attempting to lift top.
- High speed travel with an empty or lightly loaded cargo carrier should be avoided. In these conditions make certain the cargo carrier is properly secured and attached.
- Install CAUTION Low Clearance reminder static cling decal onto your rear view mirror when using cargo carrier to prevent accidents.

Installation

Step 1

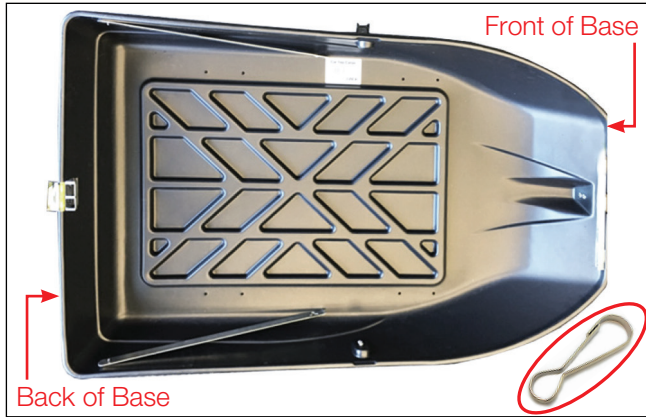


Place the base on the ground. Remove all 4 clips (#6) located on cargo carrier. You will reinstall them on the cargo carrier in later steps.

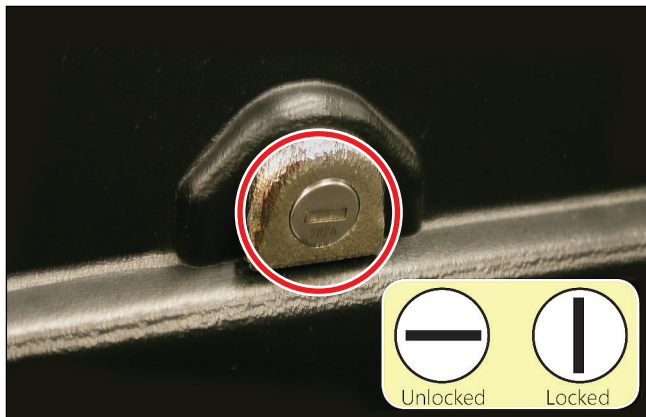


On the back of the lid, locate key and turn it to be parallel with the ground to "unlock" and then remove the key.


Step 2

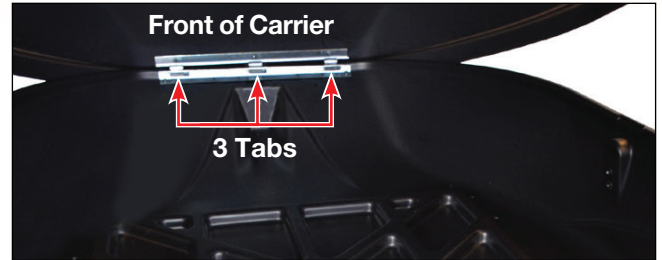


Place the lid onto the base at approximately a 30° angle. Move top lid in an up and down motion until THREE hinge tabs engage with slots.

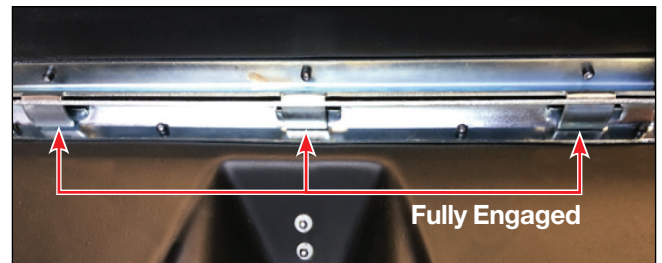

When lid is aligned, all 3 hinge tabs will slide down into the slots as shown above.

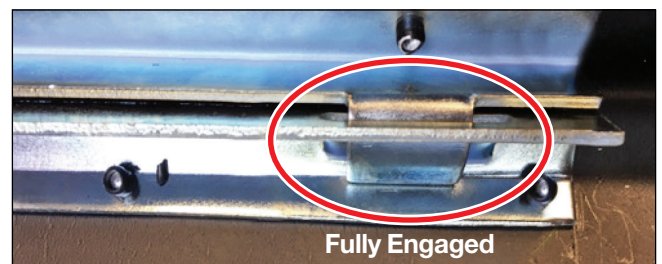

Close up of a hinge tab fully engaged.

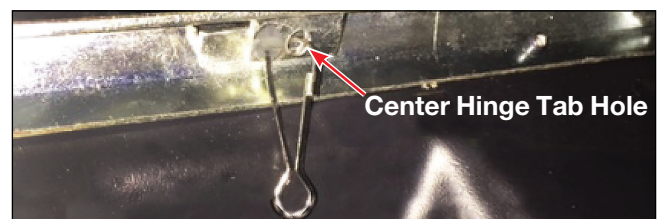

Insert clip (#6) though center hinge tab hole to secure.

Installation Cont.

Step 3




Close the cargo carrier. Pull up on the lid at the front of the carrier to be sure the hinge tabs are engaged.



Engage the bale latch at the front of the carrier. This latch stays in the closed position going forward. Once latched, secure with a clip hook.

Note: Cross rails on some vehicles are not adjustable and may require additional holes drilled into the bottom of the cargo carrier to match the fixed position width. If this is the case, attach the cargo carrier to the rear cross rails first, using the pre-drilled holes. Then drill holes in the front of the cargo carrier using the mounting back plate (#4) as a template for the hole positions


Step 4

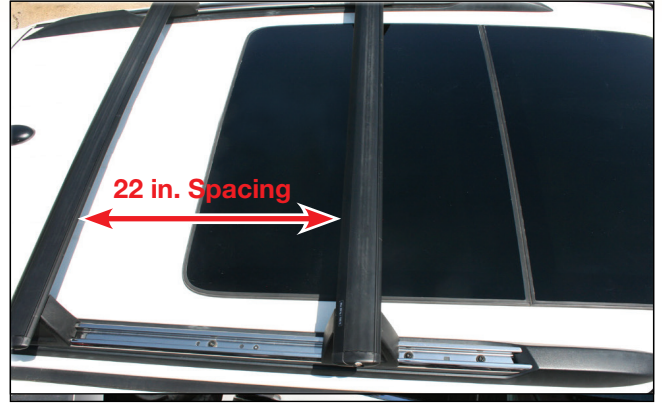

Set cross rails at 22" on center. (See Note)



Carefully place the assembled cargo carrier on the top of roof rack cross rails and center on vehicle. Check for clearance of rear hatch and antennas.

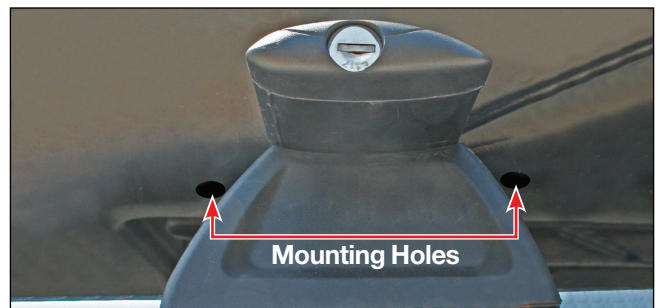

Be sure to align the mounting holes in the box bottom on each side of the cross rails.

Installation Cont.

Step 5



Lift the back of the cargo carrier lid to approximately 30° as shown above.



Raise the two uprights and place into the locked position on the bracket as shown.


Step 6



Place the mounting bracket (#5) through the pre-drilled holes from below the vehicle cross rails as shown above.




Then slide the mounting plate (#4) over the threaded posts inside the cargo carrier.

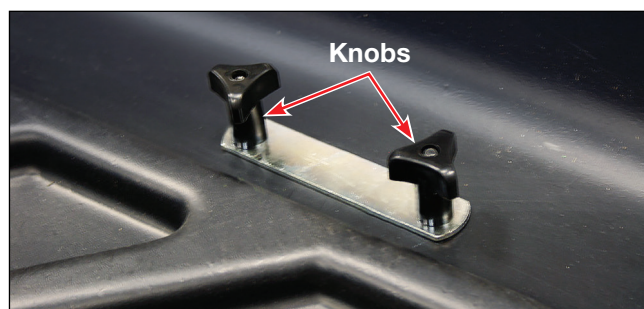

Thread 2 knobs (#3) evenly and loosely – do not tighten all the way at this point. Repeat steps until all 4 mounting brackets (#5), all 4 mounting plates (#4) are in place and the 8 knobs are loosely in place. Make sure cargo carrier is centered on vehicle. Then tighten all 8 knobs evenly and securely.

Installation Cont.


Step 7

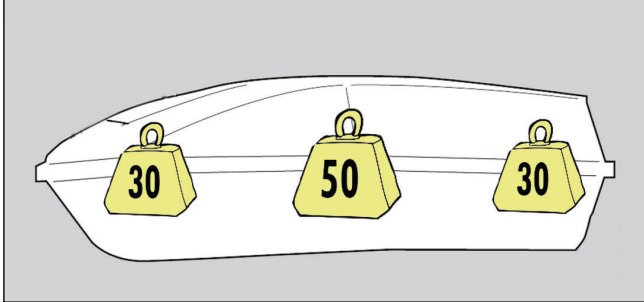

Load cargo carrier paying careful attention to distribute the weight evenly and not exceed the maximum allowed weight of the box or cross rails.



Close the carrier. Be sure that both side alignment brackets are not visible. Close the bale latches on each side, and insert clip hooks to secure.

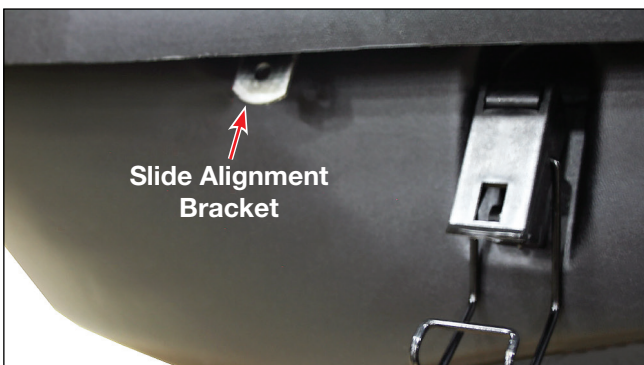

Both side alignment brackets must not be visible.


Step 7



Be sure cargo carrier is fully closed. When this occurs, the yellow warning label will no longer be visible.



Place key in lock and turn to vertical position. Then remove key to prevent lock from allowing box to open. Remove and store key.

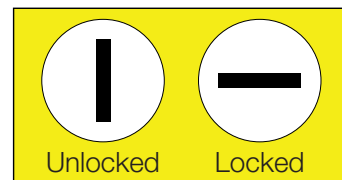

Warning

Check that all three bale latches are closed and secured with three clip hooks. Be sure a fourth clip hook is placed on center hinge tab on the inside front of cargo carrier. Lid will not lift up when pulled. Side alignment brackets must not be visible. All locking devices must be engaged (and keys removed) whenever the vehicle is in motion.

Safety



The three external clip hooks can be replaced by padlocks for greater security.