



# *JET Power-Flo*


## Throttle Body Spacer Installation Instructions 2005-Up Ford Mustang 4.6L

### Part #62137

1. **DISCONNECT NEGATIVE BATTERY TERMINAL!**
2. Remove air intake assembly from the throttle body.
3. Remove the 2 electrical connectors from the throttle body.
4. Remove the 2 bolts and 2 hex nuts that secure the throttle body to the intake manifold. Remove the 2 bottom studs that mount the throttle body to the intake manifold and replace with the provided 2 6mX 70mm threaded studs.
5. Align and install JET TBI Spacer onto manifold making sure the side with the part number engraved is facing away from the motor. Install provided gasket onto JET TBI spacer side that faces throttle body.
6. Reinstall factory throttle body on top of JET TBI spacer using the 2 6mX 50mm hex bolts and flat washers from the top 2 holes and the 2 6m hex nuts and washers on the bottom 2 studs.
7. Reinstall the 2 electrical connectors to the throttle body.
8. Reinstall factory intake assembly. Photo 1 shows completed installation.
9. Reconnect negative battery terminal

#### **PARTS LIST:**

- (1) JET TBI Spacer
- (1) Gasket
- (2) 6mX50mm Hex Head Bolts
- (4) 6m Flat Washers
- (2) 6m Hex Nuts
- (2) 6mX70mm Threaded Rod

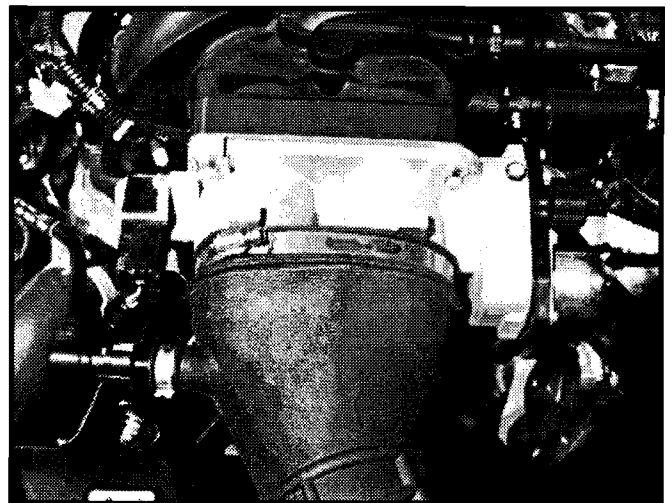

#### **Jet Performance Products**

17491 Apex Circle  
Huntington Beach, CA 92647  
714-848-5515 • Fax: (714) 847-6290 • [www.jetchip.com](http://www.jetchip.com)