



## Installation Instructions

### Cab Top for '87 - 95 Jeep Wrangler

For Soft top Vehicles only(Includes Tonneau Cover)

<u>Included Component</u>	<u>QTY</u>
1. Cab Top	(1)
2. Webbing Strap	(2)
3. Footman loops	(2)
4. Screws	(4)

**Warning:** this top is designed to protect you from the elements only and is not designed to keep you inside the vehicle in the event of an accident. Always fasten your seat belt.

#### Important Information

Installation requires the Original Equipment Soft Top Hardware and a windshield channel. If you do not have the Original Equipment Soft Top Hardware, you may purchase Rampage Products Replacement Hardware (Part# 69999) and Windshield Channel (Part# 901001).

#### Cab Top Preparation

1. All Rampage Products Soft tops are pre-fit at the factory. Please note that in order to provide long term fit, Rampage designs each top to fit very tight on the initial installation. Please make sure it is at least 70 degrees F when you first install this top or it will be very difficult to install. If you use a hair dryer to warm the fabric, the install will be easier.
2. The top may seem wrinkled when first installed; this is caused by the fabric becoming wrinkled during shipping. The fabric and the wrinkles will relax after a few days installed on the vehicle.


#### If equipped with an optional sound bar

1. **For easy Cab Top removal:** If the vehicle is equipped with the optional Sound Bar, you will need to drill a new slotted hole approximately 1/8" from the existing hole on the horizontal (Figure 1).
2. Once the drilling is complete, attach the Sound Bar to the new location and begin the installation.



Slotted Holes are only required if the vehicle is equipped with an optional sound bar.

Screw  
Location

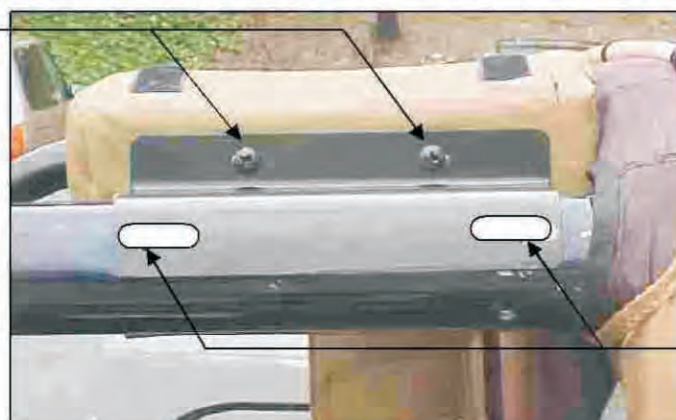

New Slotted  
Hole Locations

Figure 1



**Cab Top Installation**

1. **92-95 Wrangler ONLY:** Secure the factory cross bar (Rear Bow) to the roll bar (Figure 2), using the included strap.  
**NOTE:** The factory cross bar **MUST NOT** be permitted to shift forward (Figure 3).



Figure 2

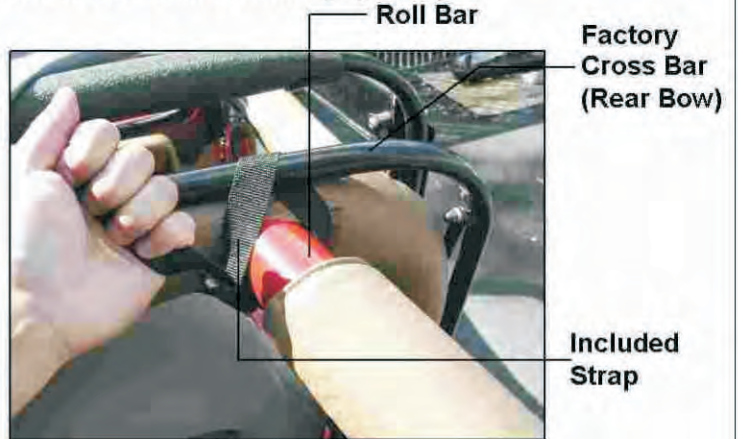


Figure 3

2. **87-91 Wrangler ONLY:** Secure the factory cross bar(Rear Bow) to the perpendicular roll bar, using the included strap as shown in Figure 4.  
**NOTE:** Securely fasten the Strap to the factory cross bar and perpendicular roll bar (Figure 4). The factory cross bar **MUST NOT** be permitted to shift forward.

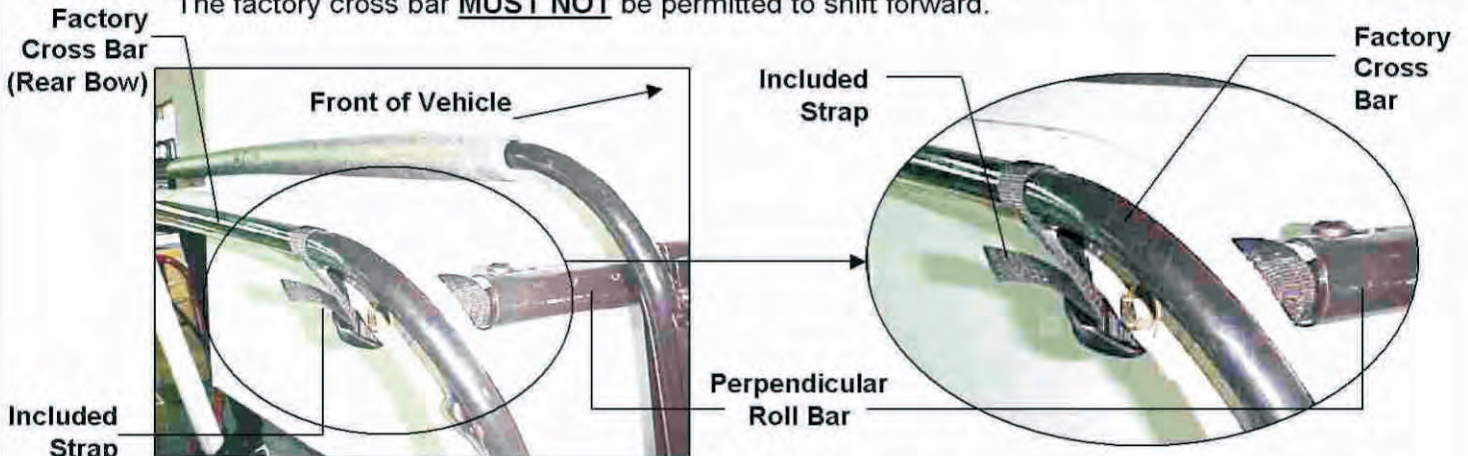


Figure 4

3. Place the Cab Top over the vehicles Roll Cage and Windshield as shown in Figure 5.
4. Attach the Cab Tops Plastic Inserts to the Windshield Channel (Figure 6).



Figure 5



Figure 6



- Securely fasten the (5) roof channel snaps on both sides of the vehicle to the (5) Cab Tops snaps as shown in Figure 7.

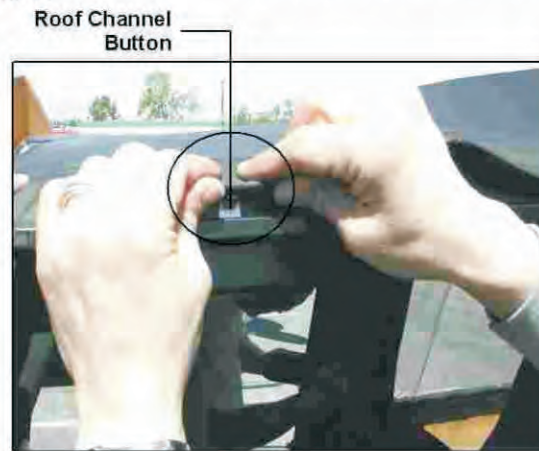


Figure 7

- Slide the Cab Tops plastic insert into the door channels on each side of the vehicle (Figure 8).
- With the Cab Top secure to the door channel, slide the Cab Tops body insert to the body channel (Figure 9).



Figure 8

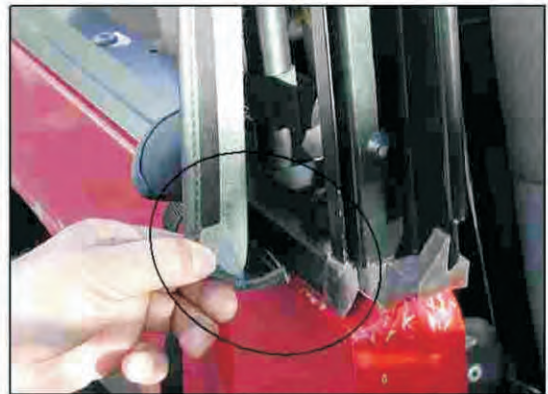


Figure 9

- Secure the rear window of the Cab Top by using the zippers on each side (Figure 10).
- With the rear window secure, fasten the (2) upper corner snaps of the Cab Top.  
**NOTE:** The upper corner snaps are located directly above the (2) rear window zippers.
- Repeat Steps 1-9 for the opposite side of the vehicle.



Figure 10



## Cab Top Connection with Rampage Tonneau Option

1. Secure the Tonneau covers plastic inserts to the rear bed channels and to each side of the vehicle (Figure 11). **NOTE:** Start with the rear corners and work your way forward.



Figure 11

2. Locate the three metal snaps under the flap of the Cab Top as shown in Figure 12.
3. Once located, securely fasten the three metal snaps to the Tonneau. (Figure 13).

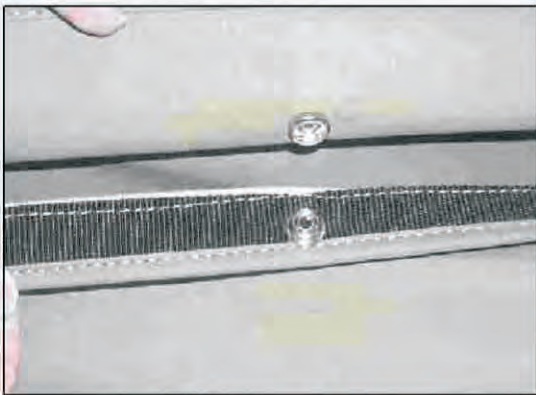


Figure 12



Figure 13

## Roll Bar Mounting Strap Installation

1. Locate the (8) Mounting Straps behind the driver and passenger seat of the vehicle (Figure 14). **NOTE:** There are (4) Mounting Straps behind each seat.
2. Secure each strap around the roll bar and tighten by pulling on the strap ends (Figure 15).

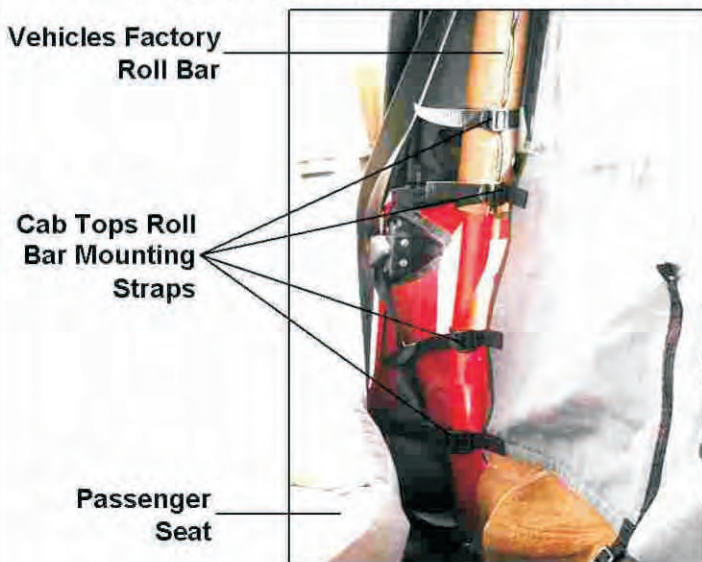


Figure 14

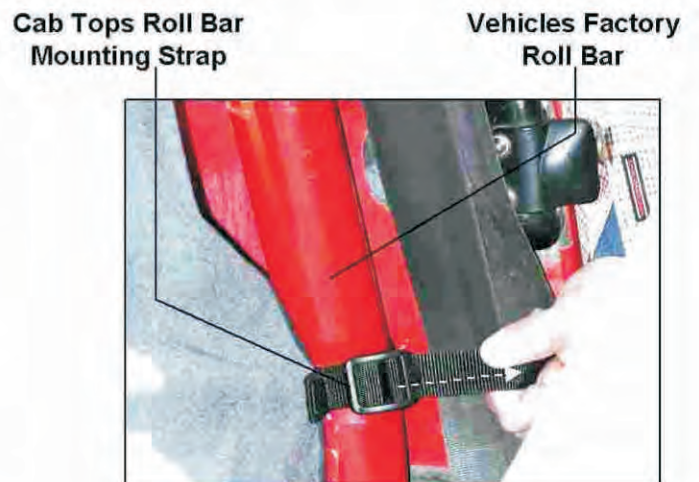


Figure 15



**NOTE: ONLY** 1987-91 Jeeps will come equipped with (2) top straps and will secure the roof of the Cab Top to the roll bar as shown in Figure 16.

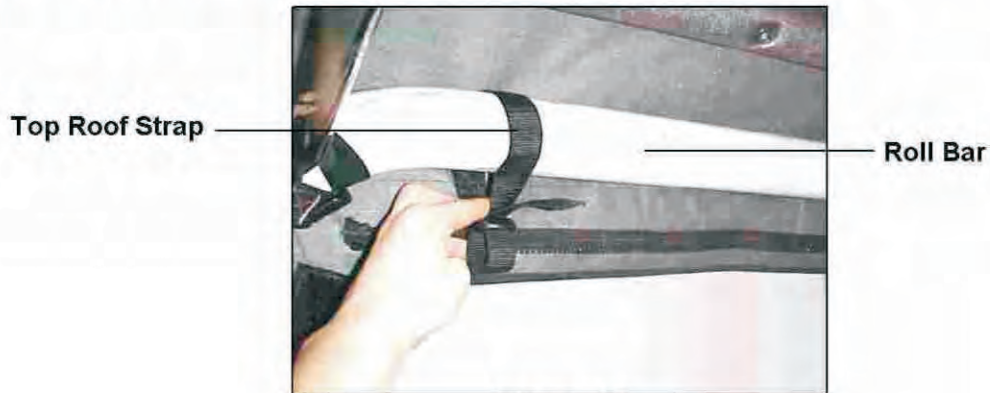


Figure 16

### Floor Mounting Strap Installation

1. Locate (2) Floor Mounting Straps in the center of the Cab Top.
2. Position the included Footman loops directly under the Floor Mounting Straps.
3. Mark (2) drill locations onto the floorboard, using a felt tip pen (Figure 17).
4. Drill through the marked locations, using a 1/4" drill bit.
5. Secure the Footman Loop using the included screws (Figure 18).
6. Insert the Floor Mounting Strap through the Footman Loop as shown in Figure 19.
7. Securely fasten the Floor Mounting Strap to Footman Loop (Figure 20).
8. Repeat Steps 1-7 for the other Center Strap.

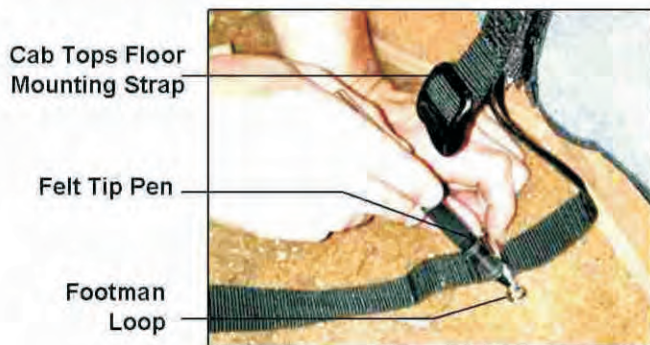


Figure 17



Figure 18

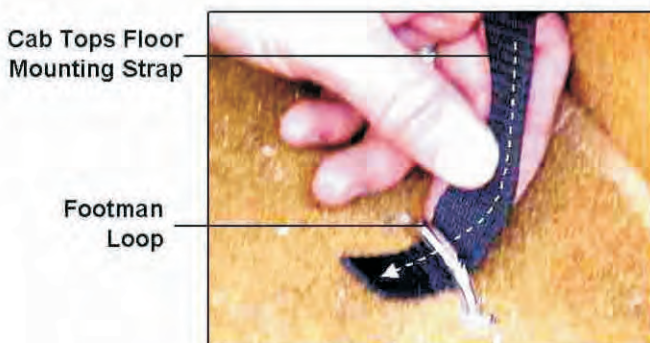


Figure 19



Figure 20



9. Once the (2) Floor Mounting Straps are secure, locate the Center Roof Strap (Figure 21).
10. Insert the Center Roof Strap through the Footman Loop as shown in Figure 22.  
**NOTE:** The Footman Loop is located directly in the center and just above of the windshield.



Figure 21



Figure 22

11. Securely fasten the Center Roof Strap to the Footman Loop as shown in Figure 23.



Figure 23

12. Once the Center Roof Strap is securely tighten, fasten the loose strap using the included Strap Clamp (Figure 24). **NOTE:** Failure to Clamp down the loose Roof Strap may result in obstruction of view during travel.



Figure 24

### Window Removal Option

1. Un-zip both sides of the window and remove from the Cab Top and vehicle.

### Cargo Door Roll Up Option

1. Locate the Cargo Door Strap (Figure 25).  
**NOTE:** The Center Strap is located in between the (2) Floor Mounting Straps
2. Un-zip the Cargo Door and roll up to the Cab Top Window Figure 26.
3. Securely snap the rolled-up Cargo Door using the Cargo Door Strap.

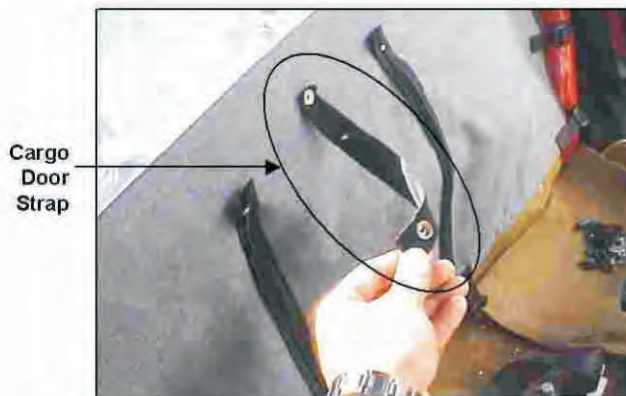


Figure 25

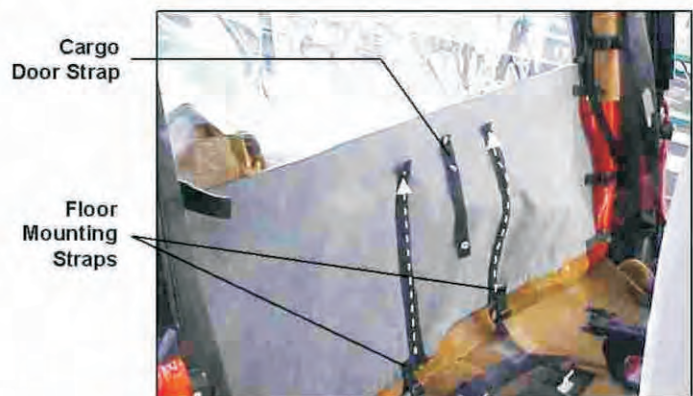


Figure 26

### Installation Complete



### **Warranty Information**

Rampage products, Inc. warrants to the original purchaser of any top it manufactures, that the top will be free of defects in material or workmanship for a period of 1 year from date of purchase. Such obligations under this warranty shall be limited to the repair or replacement, at Rampage products discretion, of any assembly or parts which, upon examination by Rampage products, Inc. proves to be defective. All defective items must be returned with proof of purchase to Rampage products, Inc., freight prepaid. This warranty does not cover damage resulting from abuse, misuse, alteration, accident or damage in transit. Rampage products obligations under this warranty are limited to the aforementioned repair or replacement of warranty defects for which the return authorization has been received during the warranty period, and Rampage products, Inc. shall not be liable for any incidental or consequential damages arising from breach of this or any implied warranty.

**Rampage Products 9225 Stellar Ct. Ste "C", Corona, CA 92883 Phone: (951) 277-4949 Fax: (951) 277-2295  
[www.rampageproducts.net](http://www.rampageproducts.net)**