

## Cab Top, 97-06 Jeep Wrangler For Soft top Vehicles only (Tonneau sold separately)

**Note:** Installation requires an aftermarket Windshield Channel (Rampage Part # 901004) and the Original Equipment Soft Top Surrounds. Cab Top will not fit Wranglers with out the Original Equipment Soft Top hardware.

### Vehicle and Cab Top Preparation

1. Before you begin, the temperature of the Cab Top should be above 70 degrees Fahrenheit. We suggest laying the Cab Top in the sunlight for 1 hour before installation.
2. **For easy Cab Top removal** If the vehicle is equipped with the optional Sound Bar, you will need to drill a new slotted hole approximately 1/8" from the existing hole (Figure 1).
3. Once the drilling is complete, attach the Sound Bar to the new location and begin the installation.
4. **For a permanent Cab Top fit** Remove the two screws on the driver and passenger side that secure the Sound Bar to the Roll Cage and commence with the installation.
5. Once the installation of the Cab Top is complete, re-attach the Sound Bar using the screws removed earlier.

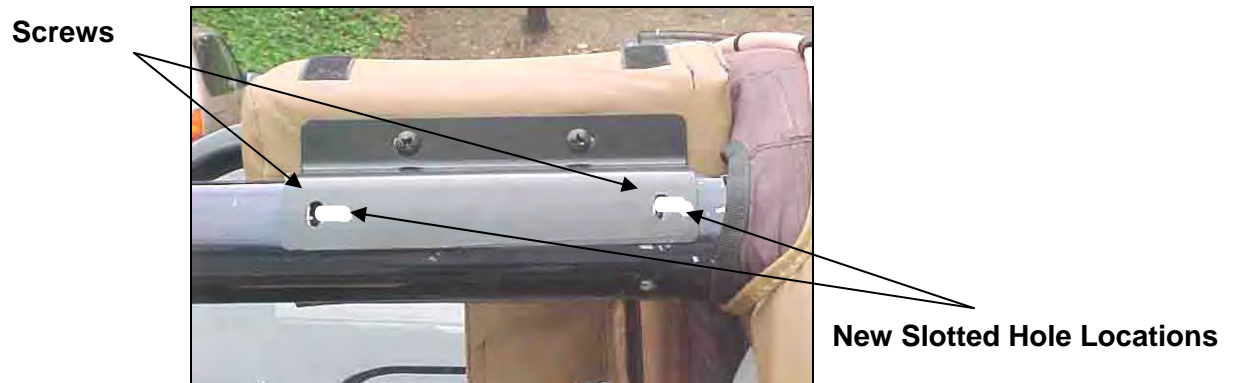
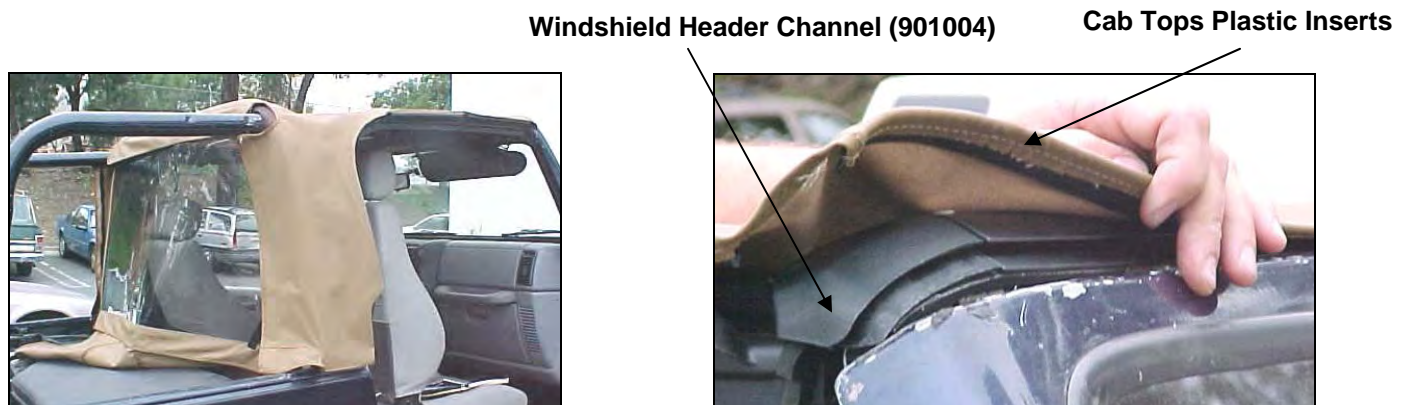


Figure 1

### Cab Top Installation

1. Install aftermarket Windshield Channel to vehicle (Not Included).
2. Place the Cab Top over the vehicles Roll Cage and Windshield as shown in Figure 2.
3. Attach the Cab Tops Plastic Inserts to the Windshield Channel (Figure 3).



**Figure 2**

**Figure 3**

4. Insert all plastic inserts to the door channels on each side of the vehicle (Figure 4 and 5).



**Figure 4**



**Figure 5**

5. Secure the back window to the Cab Top by using the zippers on each side (Figure 6 and 7).



**Figure 6**



**Figure 7**

6. Once the window's zipper is secure, snap the buttons located directly above (Figure 8). If you have difficulty snapping the buttons, un-do the Cab Top's bottom plastic insert. Snap the button, and then re-install the bottom plastic insert.



**Figure 8**

7. Repeat Steps 1-5 for the opposite side of the vehicle.
8. Secure and tighten all (11) mounting straps to the vehicles Roll Cage as shown in Figure 9. There are (4) mounting straps on each side and (3) on the top Roll Cage.  
**Note: Always tighten and secure all straps prior to every departure.**
9. Tighten and secure the mounting straps by firmly pulling on the ends (Figure 9).

Center Strap of  
the Vehicle



Figure 9

### Window Roll Up Option

1. Un-zip both sides of the window and roll the window up to the roll bar.
2. Securely fasten the window using the side mounting straps located at each side.

**Note: Ensure all mounting straps are secure prior departure.**



Figure 10

### Cab Top Connection with Tonneau Top Boot

1. Locate the three metal snaps under the flap of the Cab Top as shown in Figure 11.
2. Once located, securely fasten the three metal snaps to the Tonneau Top Boot (Figure 12).



Figure 11



Figure 12

## Installation Complete



Rampage Products  
9225 Stellar Court Unit C, Corona, CA 92883-4919, U.S.A.  
Phone: (951) 277-4949 Fax: (951) 277-2295  
e-mail: [info@rampageproducts.net](mailto:info@rampageproducts.net)  
Web: [www.rampageproducts.net](http://www.rampageproducts.net)  
*Made in China*