


INSTALLATION INSTRUCTIONS

77-1561KP DODGE 2009-11 Ram 1500 V8-5.7L

NOTE: This kit was not designed to fit vehicles with a body lift.

TOOLS NEEDED:

Ratchet
Extension
13mm socket
10mm socket
5/16" socket
10mm wrench
3/4" wrench
4mm allen wrench
Flat blade screw driver.

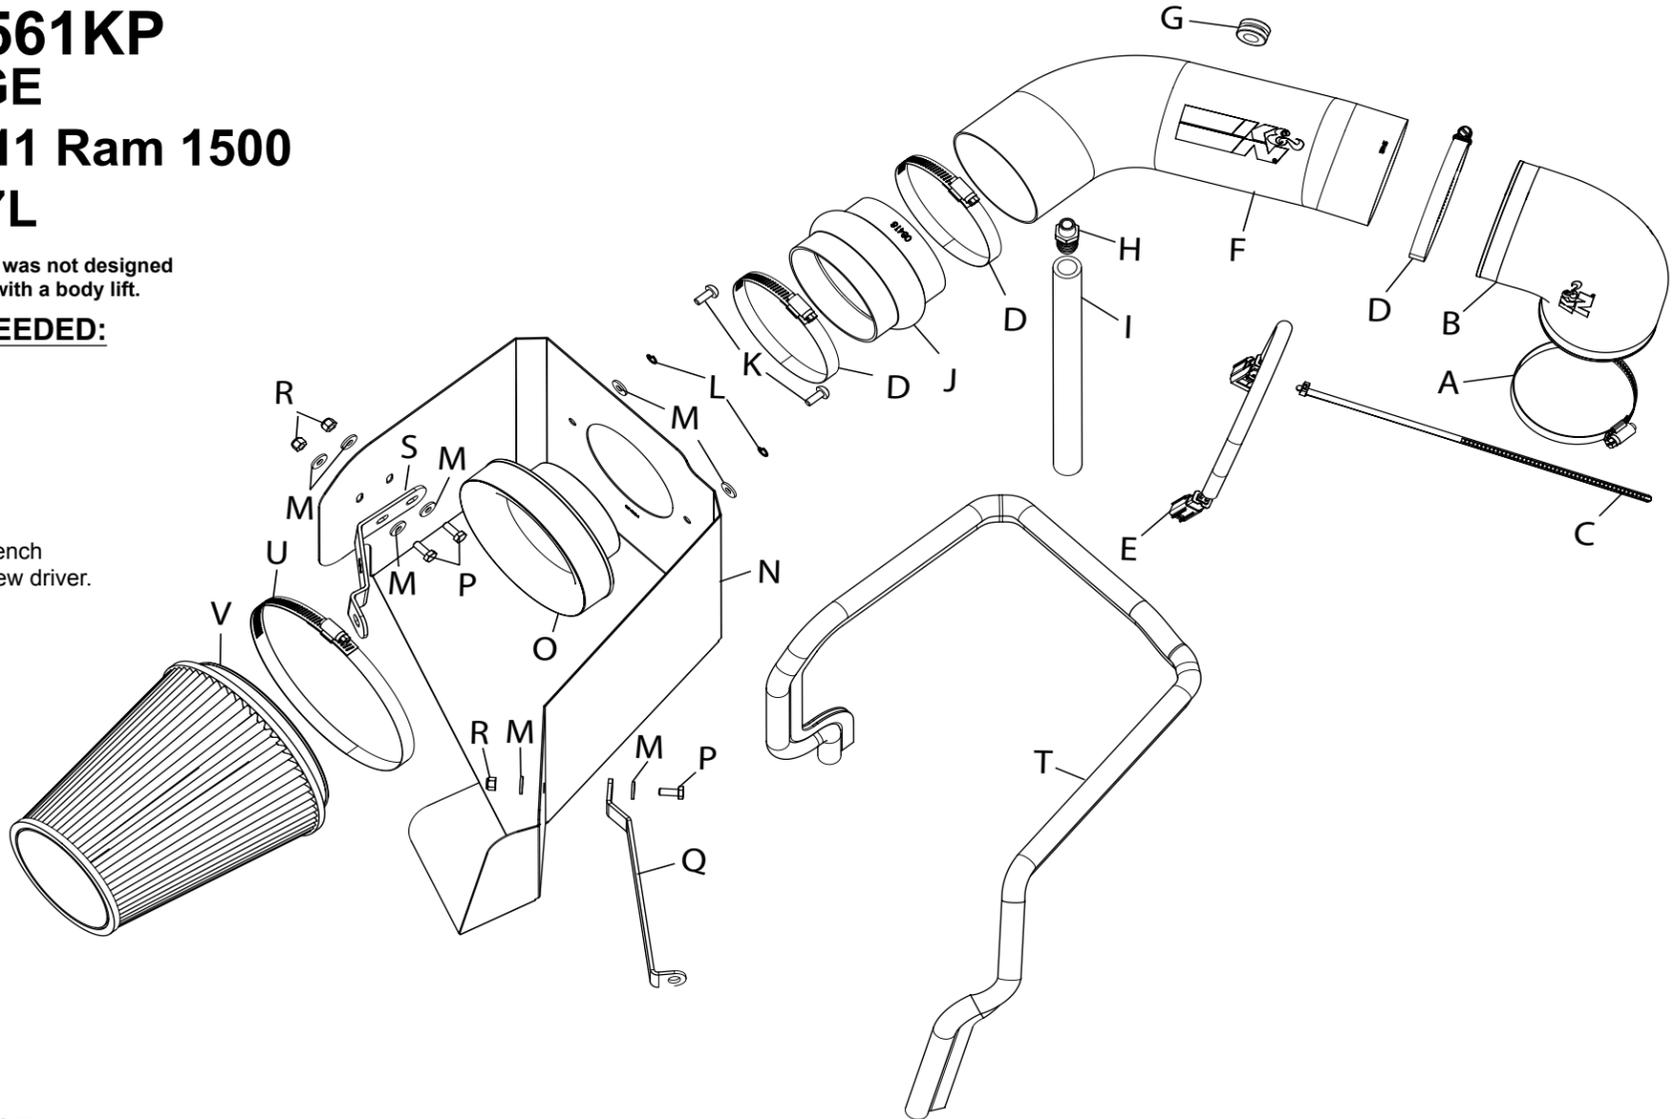

PARTS LIST:


Description	Qty.	Part #	Description	Qty.	Part #	Description	Qty.	Part #
A Hose Clamp #56	1	08620	I Hose; 5/8"ID X 14"L, Silicone	1	084083	Q Bracket; "Z", STL, TK/PC	1	083103-1
B Hose; 4" TO 3-1/2" ID 90DEG	1	084086	J Hose; 4" ID X 3" L Hump	1	08418	R Nut; 6MM Nylock, Hexhead, SS	3	07512
C Cable Ties; 11" Black	1	21590	K Bolt; M6 X 1.00 X 16MM, Bttnhd	2	07730	S Bracket; "L", STL, TK/PC	1	083127
D Hose Clamp #64 Stainless	3	08645	L Washer; 1/4" Lock, ZN	2	08198	T Edge Trim (55")	1	102480
E Extension Harness; Dodge IAT	1	21681	M Washer; 1/4"ID X 5/8"OD - SAE	8	08275	U Hose Clamp # 104	1	08697
F Intake Tube	1	27462	N Heat Shield	1	074054	V Air Filter	1	RF-1044
G Grommet; 1"OD, 1/2"ID, 1/2"THK	1	08064	O Adaptor; #454	1	27300			
H Vent; Strt, 5/8 Barbed 1/4 NPT	1	08911	P Bolt; 6MM-1.00 X 16MM, SS	3	07812			

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.

NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicles' anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.

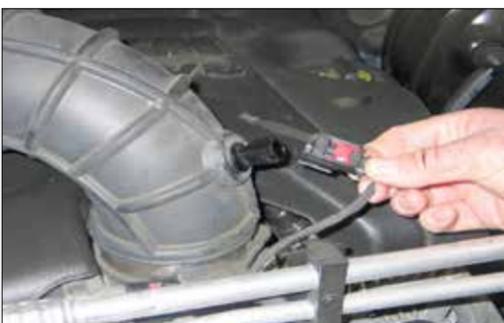

2. Release the red locking tab and then disconnect the Inlet air temperature electrical connection.



3. Loosen the hose clamp which secures the intake tube to the throttle body.



4. Disconnect the crank case vent hose from the air box.




5. Disconnect the factory intake hose from the throttle body, then lift up the air box assembly and then remove it from the vehicle.


NOTE: K&N Engineering, Inc., recommends that customers do not discard factory air intake.




6. Lift up the engine cover to dislodge it from the mounting posts and then remove it from the vehicle.

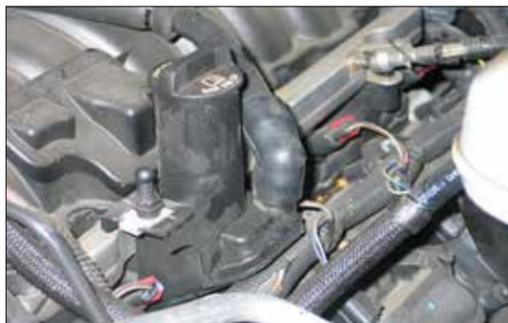


7. Disconnect the crank case vent hose from the valve cover port.

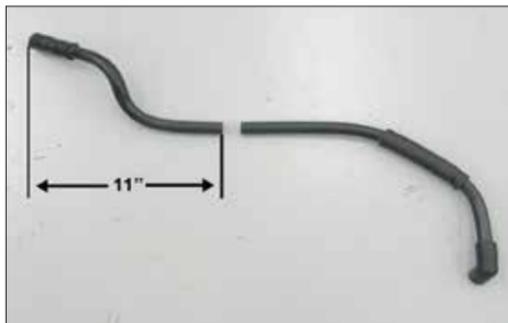


8. Measure 11" from the air filter end of the crank case vent tube and then trim the crank case vent tube as shown.

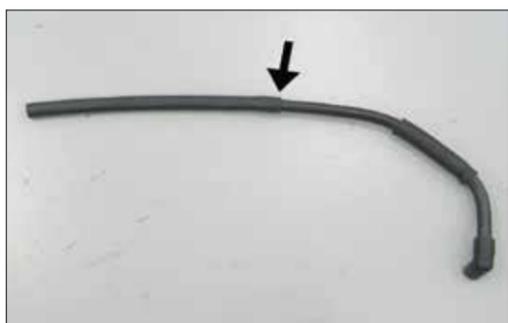

9. Install the provided silicone crank case vent hose onto the cut end of the factory crank case vent tube as shown.

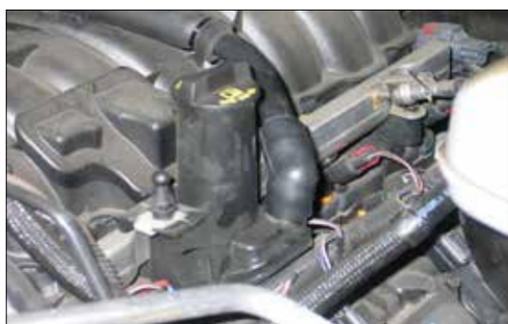

10. Install the crank case vent assembly onto the valve cover port.

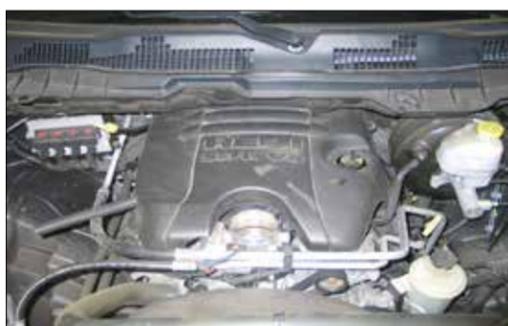

11. Reinstall the engine cover onto the mounting studs and route the crank case vent hose through the opening.



12. Install the provided edge trim onto the heat shield as shown.
NOTE: Some trimming of the edge trim will be necessary.



13. Install the provided filter adapter onto the heat shield as shown and secure with the provided hardware.




14. Install the silicone hump hose (08418) onto the filter adapter and secure with the provided hose clamp.



15. Install the heat shield mounting bracket (083127) onto the heat shield using the provided hardware.

NOTE: Do not completely tighten at this time.

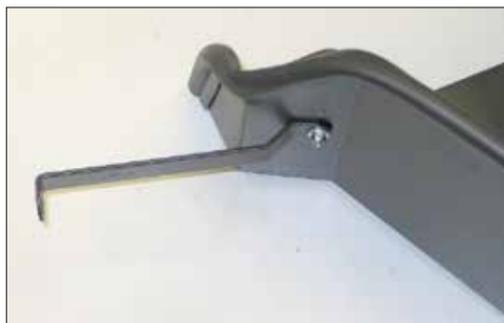


16. Install the heat shield mounting bracket (083103-1) onto the heat shield using the provided hardware.

NOTE: Do not completely tighten at this time.



17. Remove the front air box mounting bracket bolt shown.

NOTE: This bolt will be used in a later step.

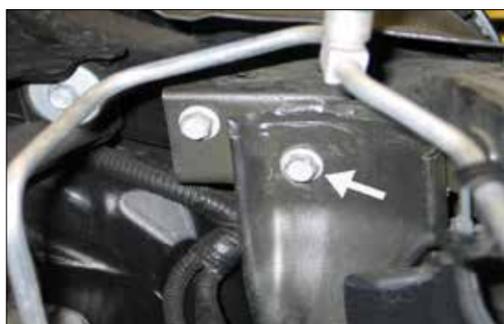

18. Remove the front fender mounting bolt shown.
NOTE: This bolt will be used in a later step.



19. Install the heat shield assembly into the vehicle and secure with the bolts removed in steps #17 and 18. Do not completely tighten at this time.



20. Install the provided silicone hose (084086) onto the throttle body and secure with the provided hose clamp.



21. Install the provided grommet into the K&N® intake tube as shown.



22. Install the 1/4npt vent fitting into the K&N® intake tube as shown.



23. Remove the inlet air temperature sensor from the stock intake tube.

NOTE: Take care removing the sensor as it is very fragile.



24. Install the inlet air temperature sensor into the grommet installed into the K&N® intake tube as shown.

NOTE: Take care while installing the inlet air temperature sensor as it is very fragile.



25. Install the K&N® intake tube into the silicone hump hose and then into the silicone hose at the throttle body. Align the heat shield assembly for proper fit and then tighten the heat shield mounting bolts then tighten the hose clamps securing the intake tube.



26. Connect the crank case vent hose to the vent fitting installed into the K&N® intake tube. Secure with the provided tie wrap.

NOTE: Some trimming of the vent hose will be necessary.



27. Connect the provided inlet temperature sensor extension into the factory wiring harness and then connect the other end to the inlet temperature sensor.



28. Install the K&N® air filter and secure with the provided hose clamp.



29. Reconnect the vehicle's negative battery cable. Double check to make sure everything is tight and properly positioned before starting the vehicle.

30. The C.A.R.B. exemption sticker, (attached), must be visible under the hood so that an emissions inspector can see it when the vehicle is required to be tested for emissions. California requires testing every two years, other states may vary.

31. It will be necessary for all K&N® high flow intake systems to be checked periodically for realignment, clearance and tightening of all connections. Failure to follow the above instructions or proper maintenance may void warranty.

ROAD TESTING:

1. Start the engine with the transmission in neutral or park, and the parking brake engaged. Listen for air leaks or odd noises. For air leaks secure hoses and connections. For odd noises, find cause and repair before proceeding. This kit will function identically to the factory system except for being louder and much more responsive.

2. Test drive the vehicle. Listen for odd noises or rattles and fix as necessary.

3. If road test is fine, you can now enjoy the added power and performance from your kit.

4. K&N Engineering, Inc., suggests checking the air filter element periodically for excessive dirt build-up. When the element becomes covered in dirt (or once a year), service it according to the instructions on the Recharger® service kit, part number 99-5050 or 99-5000.

50-STATE STREET LEGAL
K&N CARB EXEMPT K&N

* FREE K&N® decal To register your warranty, please see us online at knfilters.com/register. FREE K&N® decal *

• 1455 CITRUS ST., P.O. BOX 1329, RIVERSIDE, CA., U.S.A. 92502 • TECH SERVICE 800-858-3333 • FAX 951-826-4001
 • e-mail: tech@knfilters.com • WWW: <http://www.knfilters.com>