



# INSTALLATION INSTRUCTIONS

Part Number: RK-3909


NOTE: C.A.R.B. E.O.# D-269-33  
applies to fuel injected models  
ONLY

This assembly fits: SEE CATALOG FOR CURRENT APPLICATIONS

Congratulations, you have purchased the finest Custom Air Cleaner that money can buy. With proper care, this filter will last 1 million miles or more. This Custom Air Cleaner replaces the stock air cleaner assembly. The following procedure MUST be followed to ensure a proper fit and seal of the Custom Air Cleaner.

## PARTS LIST:

Description	Qty.
A Air Cleaner Cover Screw	Not Included
B Air Cleaner Cover	Not Included
C Breather Bolts	Not Included
D Filter Element	1
E Back Plate	1
(KRK3909)	
F Screw; 1/4-20 x 3/4 Socket HD	3
G Bolt; 1/4-20 x 1/2 Button Socket	6
H Breather Bolt Extension	2
I Spacer; .380"ODx.80"IDx1.5"L	3
J H/D Velocity Stack	1
K Washer; .750"ODx.379"IDx.040"	4
(Not shown)	
Loctite	1
C.A.R.B. Exemption Decal	1
<b>Product Available Separately</b>	
Replacement Element; part number E-3014	

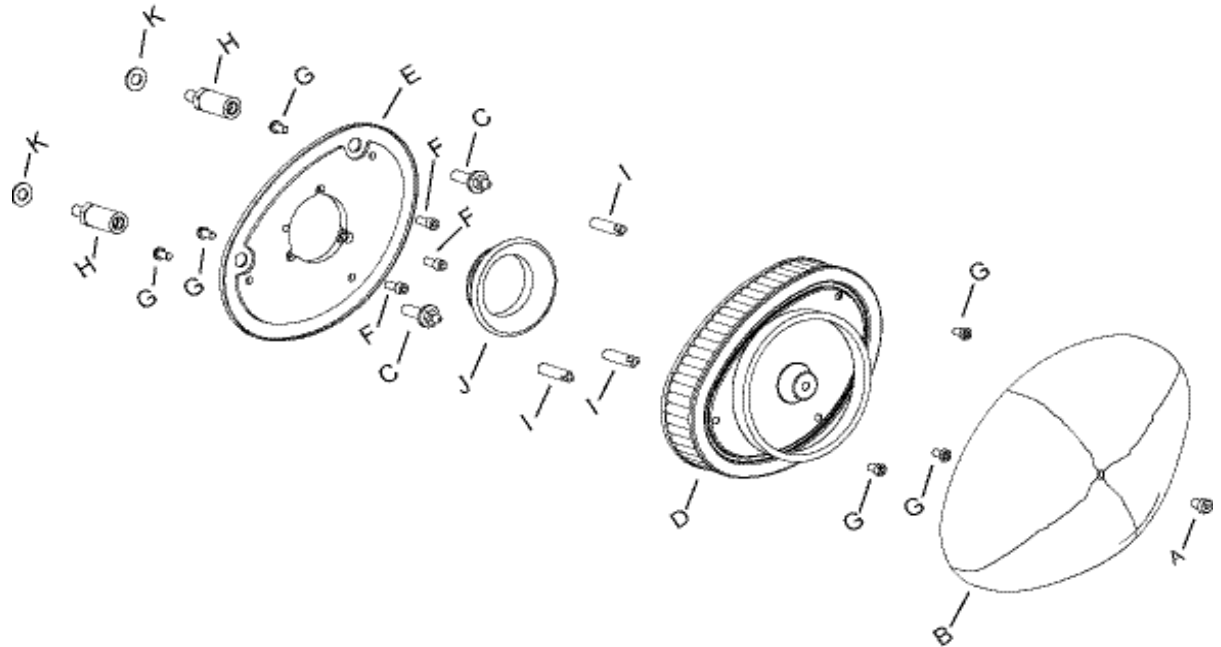

1. Remove air cleaner cover.



6. Install the velocity stack onto the supplied back plate.




11. Install the provided breather bolt extensions into the stock breather bolt location.



17. Install the air filter element onto the base plate.



2. Remove the three torx bolts.

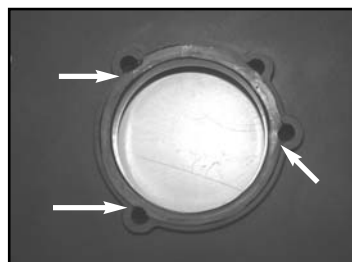

7. Align the notches on the velocity stack with the bolt holes in the back plate.


12. Reinstall the stock air cleaner gasket removed in step 5.



18. Install the three provided button socket bolts. Item G on the parts list. Do not completely tighten.



3. Remove the stock air filter element.

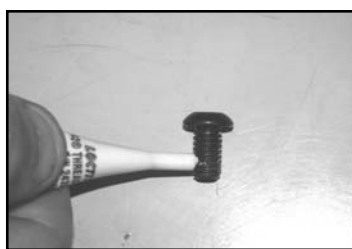


8. Apply Loctite to the threads of three of the button socket bolts. Item G on the parts list




13. Install the back plate and thread the stock breather bolts into the breather bolt extensions. Do not tighten at this time. **Note: For 2006-2007 fuel injected models, install a washer in between the back plate and each of the provided breather bolt extensions. Thread the stock breather bolts into the breather bolt extensions. There should be a washer on each side of the provided breather bolt.**




19. Check the perimeter of the back plate to ensure the air filter element is completely seated.

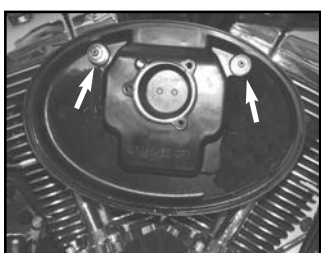


4. Remove the two stock breather bolts.

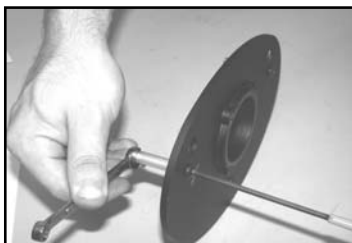

9. Install the three bolts from step 8 into the back plate and thread the bolts through the provided spacers.

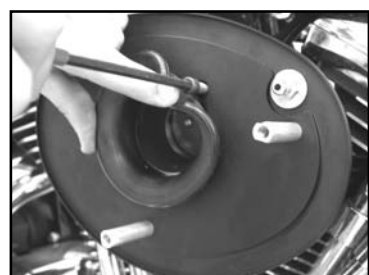


14. Install the three socket head screws into the carburetor or throttle body. Item F on the parts list. **Note:** It is necessary to pull the velocity stack back for access.

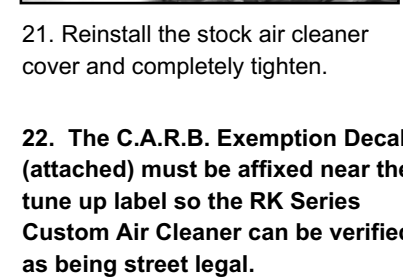

21. Reinstall the stock air cleaner cover and completely tighten.



5. Remove the stock back plate. **Note:** Retain the stock air cleaner gasket, it will be reinstalled in a later step.

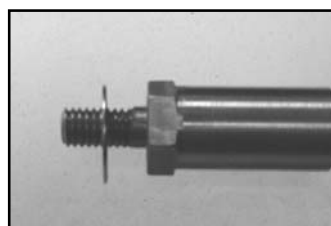

10. Install a washer on each of the provided breather bolt extensions.

15. Recheck the velocity stack to make sure that it is properly seated.

16. Completely tighten the stock breather bolts.

22. The C.A.R.B. Exemption Decal (attached) must be affixed near the tune up label so the RK Series Custom Air Cleaner can be verified as being street legal.