


1996-2004 JEEP CHEROKEE - 2.5L 4cyl. / 4.0L 6cyl.

DIAGRAM 1

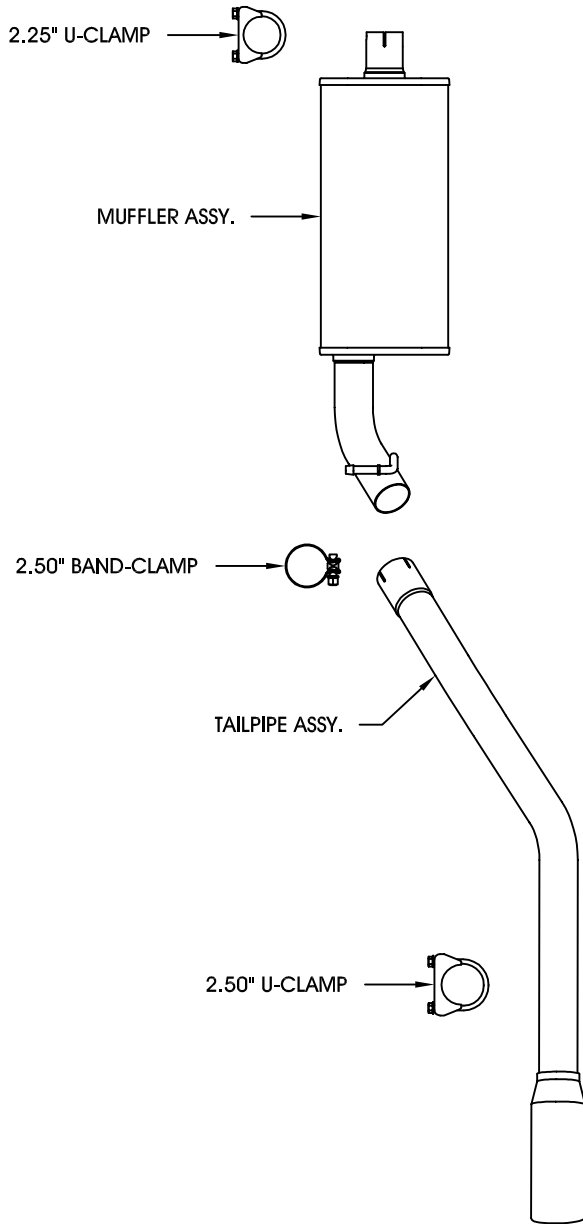

Warning: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

Step 1: (Carefully read all instructions before installation) Disconnect the vehicle's battery before removal of the OEM exhaust. This will allow the computer to reset itself with the new system, and prevent electrical accidents. To remove the OEM exhaust system, you will need to cut the tailpipe just behind the muffler. You can then remove the OEM clamp fastening the muffler to catalytic converter, disengage the welded hangers from the OEM rubber insulators, and remove the system from the vehicle. Do not damage the OEM rubber insulators, as they will be reused to mount the new system.

Step 2: Install the new system by fastening the new muffler to the catalytic converter using the supplied 2.25" U-Clamp, and by fitting the welded hanger into the OEM rubber insulator. Be sure to line up the peg into the alignment notch on the inlet pipe or the system will not fit (Leave all clamps and fasteners loose for final adjustment of the complete system.) Install the new tailpipe by fastening it to the muffler using the supplied 2.50" band clamp. The 2.50" U-Clamp is supplied to fasten the tailpipe to the OEM hanger assembly as shown in Diagram 2.

*MAGNAFLOW Performance Exhaust recommends professional installation on all their products

Technical support: 1-800-959-9226 ext. 4500

MAGNAFLOW Performance Exhaust - 22961 Arroyo Vista - Rancho Santa Margarita, CA 92688

1996-2004 JEEP CHEROKEE - 2.5L 4cyl. / 4.0L 6cyl.

DIAGRAM 2



Warning: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

Step 3: With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust system and any body panels to prevent heat-related body damage or fire.)

Step 4: Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear. The supplied band clamp must be VERY tight to properly align the pipes and prevent leaks (Approximately 65 ft-lbs.) You can now connect the battery, start the vehicle, and check for leaks. Inspect all fasteners after 25-50 miles of operation and retighten if necessary.