




INSTALLATION INSTRUCTIONS FOR 15884/15885

2005- CHEVROLET CORVETTE 6.0L V8

Warning: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

Installation sheet update: The Tru-X cross-over pipe assembly was designed to fit vehicles within OEM build tolerances. However, due to minor production variations, more exhaust clearance may be created by flipping the Tru-X assembly. This is particularly helpful on automatic transmission equipped vehicles.

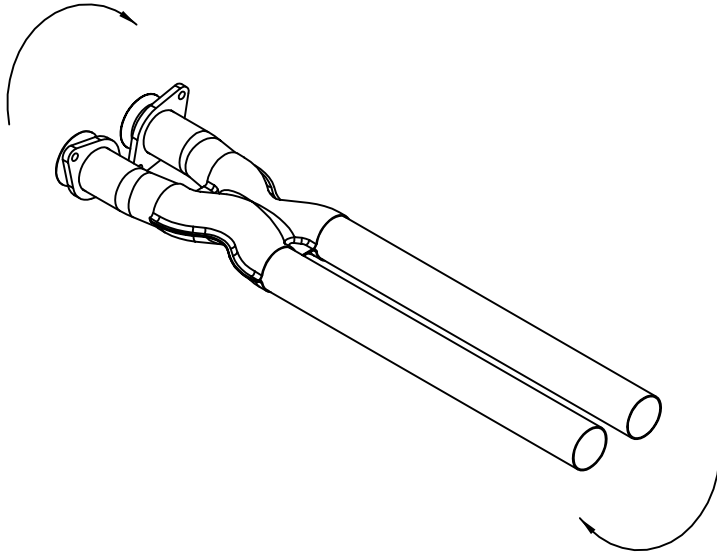

Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear, and connect the battery. The supplied band clamps must be VERY tight to properly align the pipes and prevent leaks (Approximately 65ft-lbs). Inspect all fasteners after 25-50 miles of operation and retighten if necessary.

*MAGNAFLOW Performance Exhaust recommends professional installation on all their products

Technical support: 1-800-959-9226 ext. 4500

MAGNAFLOW Performance Exhaust - 22961 Arroyo Vista - Rancho Santa Margarita, CA 92688