


2006-2007 Audi A8 Quattro AWD V8 4.2L

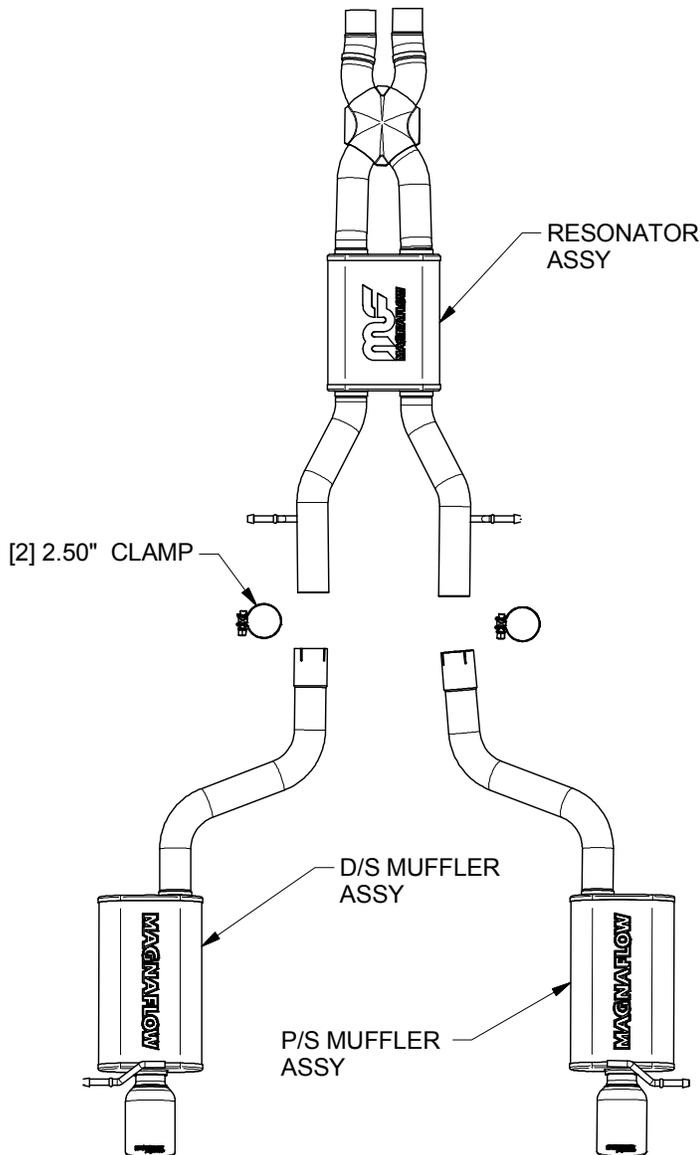

Warning: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

Step 1: Remove the OEM exhaust system by first loosening the clamps attaching the inlet pipes to the catalytic converter. Working front to rear loosen all clamps. Remove the hangers from the rubber insulators, Be sure to retain all mounting hardware and rubber insulators as they will be used to install your new MAGNAFLOW performance exhaust system.

Step 2: Begin the installation process by first loosely attaching the inlet pipes of the Resonator Assembly to the catalytic converter using the OEM clamps and fit the hangers into the OEM rubber insulators. (Leave all clamps loose until system is completely installed) Mount the Driver and Passenger side Muffler Assemblies to the Resonator Assembly using the supplied 2.50" clamps and fit hangers into insulators.

Step 3: With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust system and any body panels to prevent heat-related body damage or fire.)

Step 4: Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear. The supplied band clamps must be VERY tight to properly align the pipes and prevent leaks (Approximately 40ft-lbs). Inspect all fasteners after 25-50 miles of operation and retighten if necessary.

**** Magnaflow Performance Exhaust recommends professional installation on all their products**