


Installation Instructions For 17133

2003-07 FORD F-SERIES - V8 6.0L, OFF ROAD

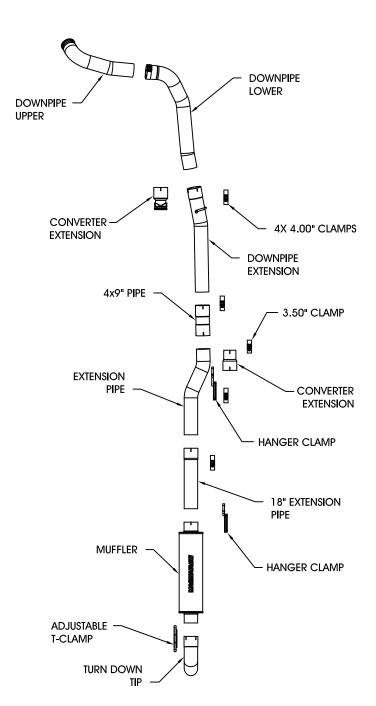

Note: MAGNAFLOW advises against the removal of catalytic converters. If the vehicle was originally equipped with a catalytic converter, this exhaust system is intended for off-road and racing applications only.

Warning: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

Step 1: (Carefully read all instructions before installation) To begin you will

temporarily need to remove the passenger's side upper stabilizer bar mount, and loosen the lower mount as shown in Fig.1. This will allow the bar to swing out of the way. The next step is to remove the lower mounting bolt of the passenger's side rear shock as shown in Fig. 2 to allow the shock to swing out of the way. Unbolt the rear half of the exhaust system from the catalytic converter, disengage the welded hangers from the rubber insulators, and remove the muffler/tailpipe assembly from the vehicle. Loosen the V-band clamp that fastens the downpipe to the turbo housing, but do not remove it. Once the clamp is loose, slip the V-band clamp off of the downpipe and allow it to rest on the turbo housing. The downpipe and catalytic converter can now be removed from underneath the vehicle.

Step 2: Begin installation of the new system by fitting the new downpipe into position from under the vehicle. Fasten the Upper Downpipe to the turbo housing using the OEM V-band clamp, but leave it loose for final adjustment of the complete system. Fit the Lower Downpipe into position and fasten it to the upper downpipe using the pre-welded band clamp. You can now reinstall the stabilizer bar. Refer to Ford's shop manual for proper torque specifications of all suspension mounts.

Technical support: 1-800-959-9226 ext. 4500

^{*}MAGNAFLOW Performance Exhaust recommends professional installation on all their products