

# PLEASE READ BEFORE STARTING INSTALLATION

While MBRPinc. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:


- that ALL components shown in the illustration on page 2 are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed.
- that you have read and understand these instructions.

If you have any questions or uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

## Installation Instructions for Systems; S6014304, S6014409, S6014AL

### **06-07 Chev/GMC 6.6L Duramax Diesel** **Extended Cab Short & Long Bed** **Crew Cab Short & Long Bed**

*"COOL DUALS"*™

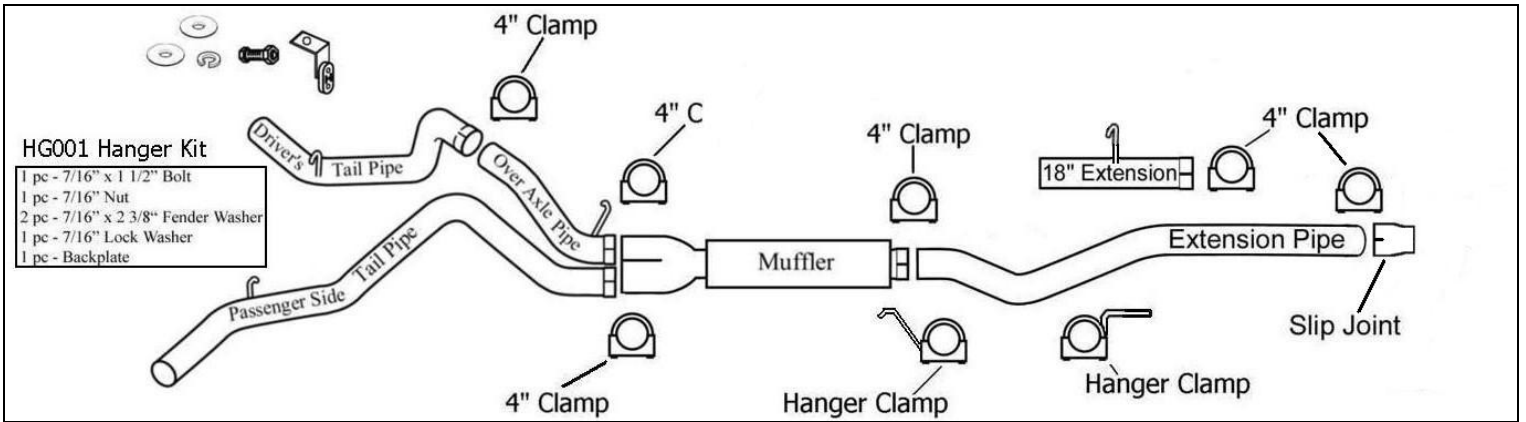

**S6014304 "PRO SERIES"**

- 1 PC - Passenger Side Tail Pipe
- 1 PC - Driver Side Tail Pipe
- 1 PC - Over Axle Pipe
- 1 PC - Extension Pipe
- 1 PC - 18" Extension Pipe
- 1 PC - High Flow Dual Outlet Muffler
- 1 PC - Slip Joint
- 6 PCS - 4" Clamps
- 2 PCS - Hanger Clamps
- 1 PC - Rubber Hanger Kit (HG001)
- 2 PCS - 5" Stainless Steel Tip

**S6014AL "Installer Series"**  
**S6014409 "XP SERIES"**

- 1 PC - Passenger Side Tail Pipe
- 1 PC - Driver Side Tail Pipe
- 1 PC - Over Axle Pipe
- 1 PC - Extension Pipe
- 1 PC - 18" Extension Pipe
- 1 PC - High Flow Dual Outlet Muffler
- 1 PC - Slip Joint
- 6 PCS - 4" Clamps
- 2 PCS - Hanger Clamps
- 1 PC - Rubber Hanger Kit (HG001)

**Tips Sold Separately**

**Removal of Stock System:**

1. Apply a penetrating lubricant liberally to all exhaust fasteners, hangers and rubber insulators.
2. Loosen the band clamp located behind the catalytic converter and disconnect the factory exhaust system.
3. Remove the exhaust system from the rubber insulators and remove from under the vehicle. If a hoist is not available for use, it may be necessary to cut the tail pipe behind the muffler for removal of the system.

**Installation of MBRP Inc. Performance Exhaust:**



Figure 1

1. Place the **Slip Joint** provided into the factory band clamp located behind the catalytic converter. Install the **Extension Pipe** into the **Slip Joint** placing the bend under and around the cross member. Rotate the pipe to position the bend towards the driveshaft Refer to Figure 1. The **Extension Pipe** does not require cutting to fit crew cab trucks. For extended cab trucks, approximately 9½" needs to be cut off the end with the longest straight section of pipe. **Installation tip:** Temporarily hang the **Muffler** and the **Tail Pipe** in place and measure to the **Slip Joint** to verify the length required.

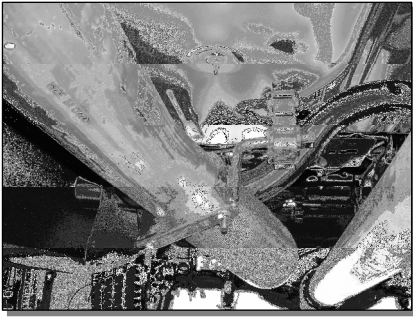


Figure 2

2. Position **Extension Pipe** as shown and loosely install the **Hanger Clamp** with the shortest hanger. Refer to Figure 2. This will support the **Extension Pipe** during the **Muffler** installation.

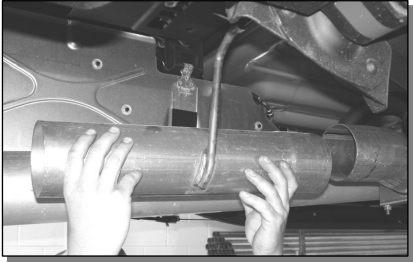


Figure 3

3. Crew cab & extended cab long bed trucks require the use of the **18" Extension Pipe** provided. This is to be positioned between the **Muffler** and the **Extension Pipe**. Refer to Figure 3. The **18" Extension Pipe** is not required with short box trucks.



Figure 4

4. Install the **Muffler** onto the **Extension Pipe**. The **Muffler Outlets** will be positioned vertically when installed. Refer to Figure 4.

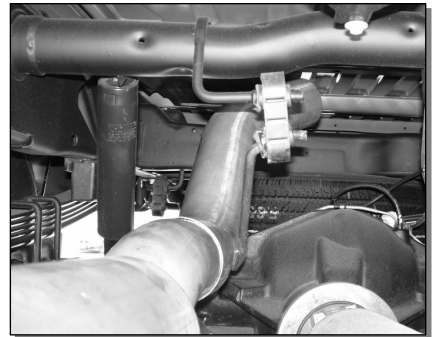


Figure 5

6. Install the **Over Axle Pipe** onto the top outlet of the **Muffler** and install the hanger into the OEM rubber hanger located above the **Muffler**. Adjust for maximum axle clearance. Refer to Figure 5.



Figure 6

7. Install the **Driver's Side Tail Pipe** by feeding it around the outside of the shock absorber and connecting it to the **Over Axle Pipe**. Adjust for maximum clearance around the shock absorber. Refer to Figure 6.



Figure 7

8. Using the factory hole located in the frame, found directly above the tail pipe hanger, attach the **Rubber Hanger** provided using the supplied hardware. Refer to Figure 7. Hang the **Driver Side Tail Pipe** from the installed **Rubber Hanger**.



Figure 8

9. Install the **Passenger Side Tail Pipe** from the rear of the truck, over the axle and attach to the lower outlet of the **Muffler**. Install the tail pipe hanger into the OEM hanger and adjust for maximum axle clearance to complete. Refer to Figure 8.
10. Install the provided clamps around pipes where needed. Adjust tail pipes and check along the whole length of the exhaust system to ensure that there is adequate clearance around the spare tire, fuel and brake lines or any wiring. If any interference is detected relocate or adjust.
11. Make sure the exhaust is in place before tightening the clamps. Start at the front of the exhaust system and begin tightening all the connections.
12. Install and adjust the **Tips** to suit. Using a 17mm wrench tighten lock bolt located on the **Tip**. **Tips are not included with "INSTALLER SERIES" or "XP SERIES" kits.** Tips may be purchased separately, check with your dealer.



"PRO SERIES" exhaust shown. Tips are not included with "INSTALLER SERIES" or "XP SERIES" kits.

**Congratulations!** You are ready to begin enjoying the improved performance and driving experience of your MBRP Inc. Cool Duals™ System. We hope you enjoy your purchase.