




## Ford Windage Tray P/N 22930

This Windage Tray is designed to fit Ford 302 c.i. engines and will need to be secured with Moroso Stud Kit P/N 38191.

See drawing below for reference.

1. After removing the oil pan and oil pump pickup, remove the #2 and #4 main cap bolts and replace with studs from Moroso Stud Kit P/N 38191.
2. Remove the #3 passenger side main cap bolt and replace with the new stud supplied with the oil pump pickup.
3. Torque the new main cap studs to factory recommended specification.
4. Place tray on new studs as shown in diagram. Fasten using the nuts supplied with the studs.
5. Attach new oil pump pickup to the oil pump and #3 main cap stud.
6. Check that all hardware is tight. Replace gasket and oil pan.

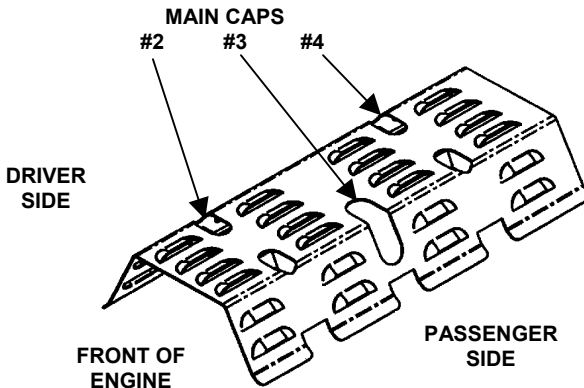

*For Technical Assistance, Call Moroso's Tech Line at  
(203) 458-0542, 8:30am – 5:00pm Eastern Time*

**MOROSO PERFORMANCE PRODUCTS, INC**  
80 CARTER DR • P.O. Box 1470 • GUILFORD, CT 06437  
Phone: (203) 453-6571 • FAX (203) 453-6906