



## INSTALLATION INSTRUCTIONS

### P/N 46140 WHEEL STUDS


These Wheel Studs should be installed as shown in the diagram below with the tapered end of the shank towards the wheel.

Whether you use a thick or a thin wheel spacer depends on the type and thickness of the disc brake that you are using. Install wheel, then the correct spacer and the flange nut.

**NOTE:** Use thread Loctite on end that is threaded into flange.

#### PARTS LIST

5	STUDS
5	FLANGE NUTS
5	SHORT SPACERS
5	LONG SPACERS
5	CRIMP NUTS

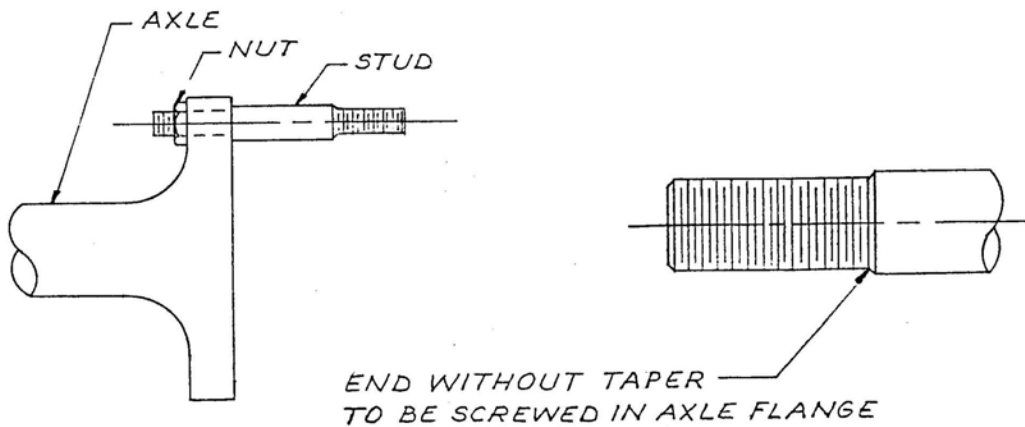

**For Technical Assistance, Call Moroso's Tech Line at  
(203) 458-0542, 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC  
80 CARTER DR • GUILFORD, CT 06437-2116  
Phone: (203) 453-6571 • Fax: (203) 453-6906