




## INSTALLATION INSTRUCTIONS

### **P/N 65226 - CLEAR FLOAT LEVEL SIGHT SCREW FOR HOLLEY CARBURETORS**

1. Install O-ring on screw as shown.

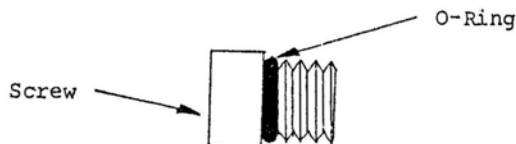

2. Remove float bowl level screw from Holley carb and adjust float level per Holley instructions.
3. Install Clear Float Level Sight Screw as tightly as possible, using only your fingers. The O-ring will lock the screw into place and prevent the screw from backing out.
4. Look into the float bowl and note where the fuel level is through the clear screw. To check the float level in the future, just look through the clear screw and you are done.
5. Due to exposure to fuel, heat and sunlight, the plastic screw will begin to haze over. To remove this haze, simply polish the screw using 600 grit or finer sandpaper.

### **PARTS LIST**

- |   |                              |
|---|------------------------------|
| 2 | HOLLEY CLEAR VIEW SIGHT PLUG |
| 2 | O-RING, VITON 2-902 70 DUR   |

**For Technical Assistance, Call Moroso's Tech Line at  
(203) 458-0542, 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC  
80 CARTER DR • GUILFORD, CT 06437-2116  
Phone: (203) 453-6571 • Fax: (203) 453-6906