


INSTRUCTION SHEET

XSTORQUE STARTERS 9530

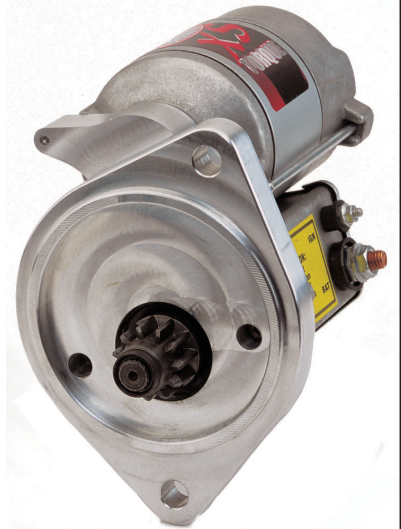

ELECTRICAL WIRING INSTRUCTIONS

1. Install a jumper wire from the "Bat" terminal connection on the starter solenoid to the "IGN" terminal.
[OPTIONAL: Run the "switch" wire from the starter relay to the "IGN" terminal on the starter solenoid.]
2. Connect the positive battery wire to the "BAT" terminal on the starter solenoid.



1833 Downs Drive, West Chicago IL 60185


Tech: (630) 849-7754

Sales: (630) 957-4019

Tech Email: tech@powermasterperformance.com

INSTRUCTION SHEET

XSTORQUE STARTERS 9530

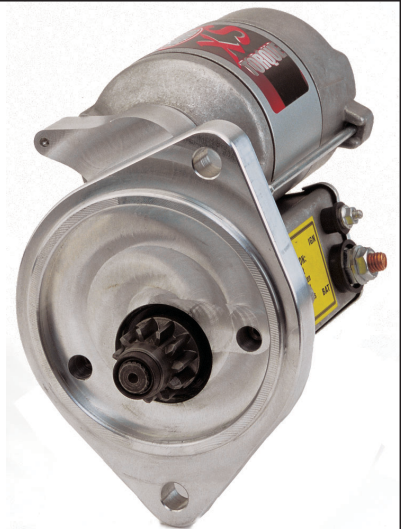

ELECTRICAL WIRING INSTRUCTIONS

1. Install a jumper wire from the "Bat" terminal connection on the starter solenoid to the "IGN" terminal.
[OPTIONAL: Run the "switch" wire from the starter relay to the "IGN" terminal on the starter solenoid.]
2. Connect the positive battery wire to the "BAT" terminal on the starter solenoid.



1833 Downs Drive, West Chicago IL 60185

Tech: (630) 849-7754

Sales: (630) 957-4019

Tech Email: tech@powermasterperformance.com