

2014+ Toyota Tundra Grille Light Brackets

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974

Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.

KIT CONTENTS:	
Description	Qty.
Driver Side Bracket	1
Passenger Side Bracket	1

Tools Needed:

- Socket set
- 10mm, 12mm socket
- 5/32 Allen wrench

Installation Instructions:

1. Begin by removing the four 10mm bolts from the top of the grille and the two pop clips on each side of the grille.

Figure 1.

2. Open the access panel on the right side of the grille and unplug the connector beneath if you vehicle is equipped as shown in **Figure 2.**

3. Remove the grill by pulling out and away from the front of the vehicle to release the clips. This may take some force.

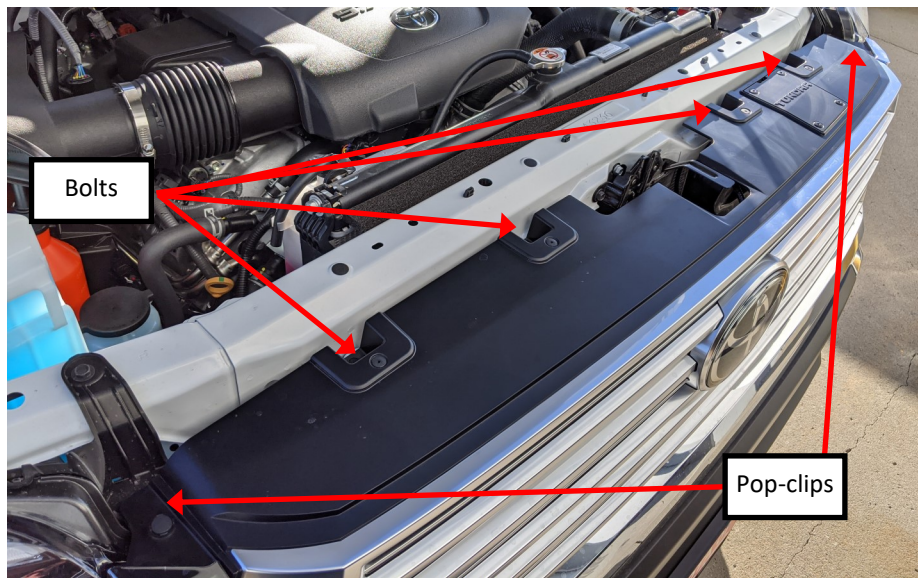


Figure 1: Bolt Locations



Figure 2: Plug Location

Installation Instructions Cont.

1. This kit is designed to utilize the factory horn mounting locations shown in **Figure 3**. Remove the 12mm bolts and horns from the vehicle.
2. Reinstall the brackets with the horns flipped in the opposite orientation shown in **Figure 4**. Do not tighten the bolts all the way at this point.
3. Install the light bar onto the brackets using the bolts included with the light bar and a 5/32" Allen wrench. **Figure 5** (this kit is designed for Putco 10020 or 11020 20" LED Light Bars)
4. Make sure the light bar is level and then tighten the 12mm bolts from step 4.
5. Refer to instructions included with light bar for wiring details.

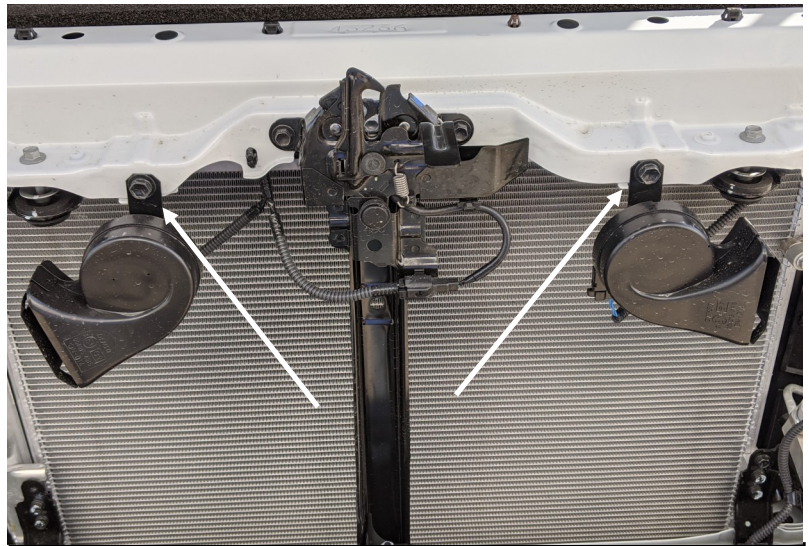


Figure 3: Bracket Locations.

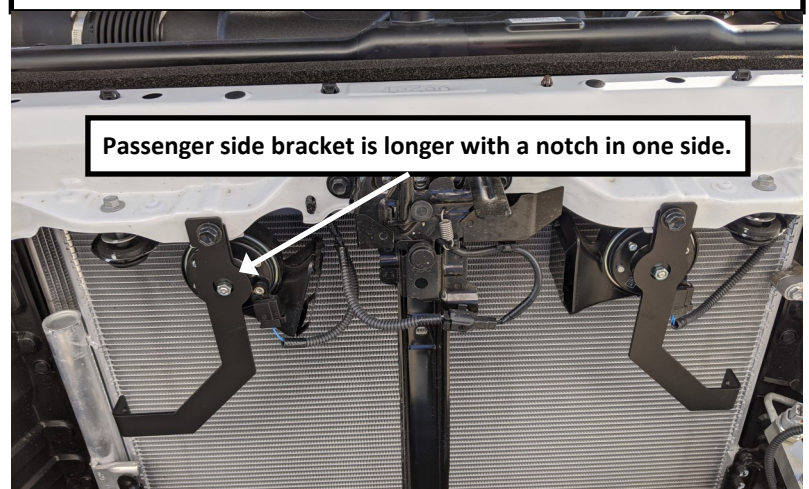


Figure 4: Bracket Orientation.

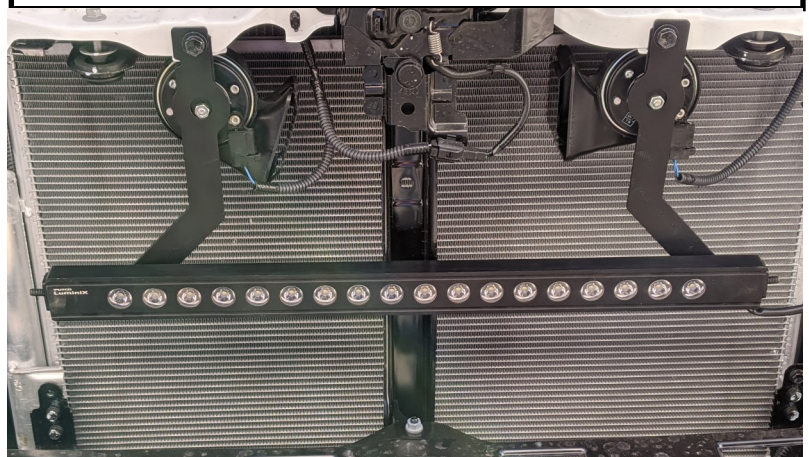


Figure 4: Light Bar Installation.