

2015+ Chevy Silverado HD Bumper Grille Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-357-9261
Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)
Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.


KIT CONTENTS:	
Description	Qty.
Bumper Grille	1
Alcohol Pad	1
Only for Lighted Grille (below)	
Light Bar (Installed)	1
Wiring Harness	1
Switch	1
Light Bar Installation Instructions	1

Tools Needed

- 10mm Socket

Bumper Grille Installation


1. Remove bumper grille from packaging. Check to see if all parts from above table are included.
2. On back side of bumper, remove 2 factory bolts with 10mm socket and set aside for later use. Refer to Figure 1 for bolt location.

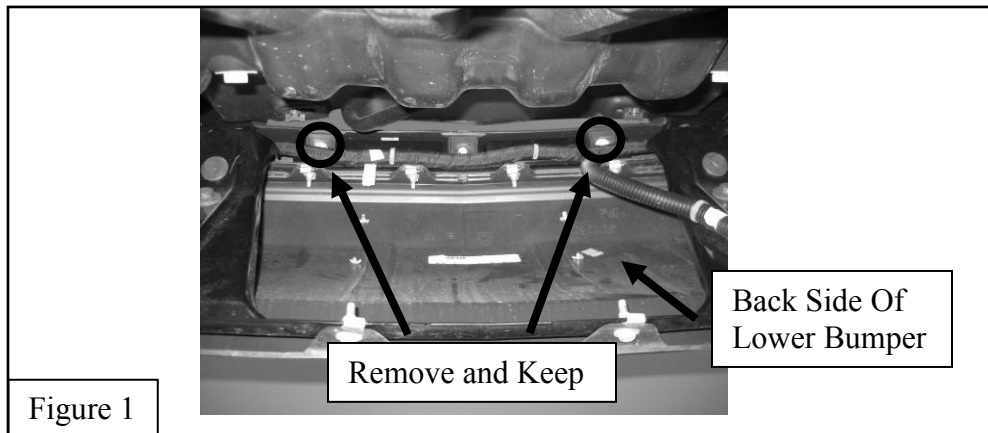


LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.


3. Clean behind the upper part of the bumper. Clear all dirt away and wipe of with alcohol pad. Refer to Figure 2.

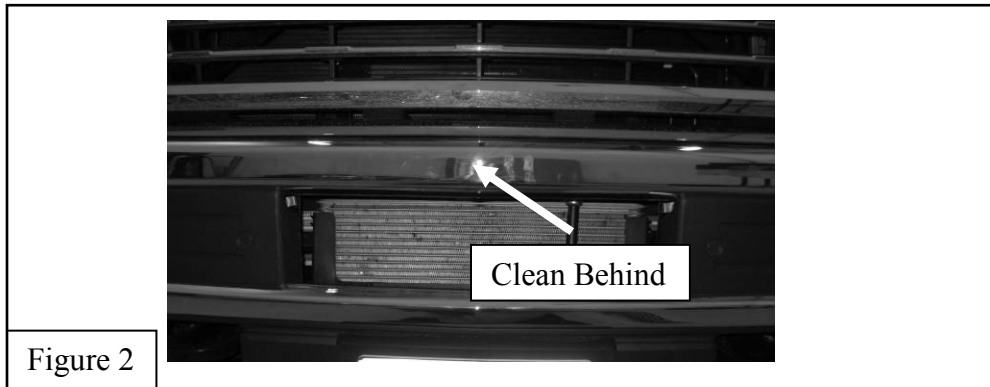

4. Peel tape backing on Putco grille, refer to Figure 3

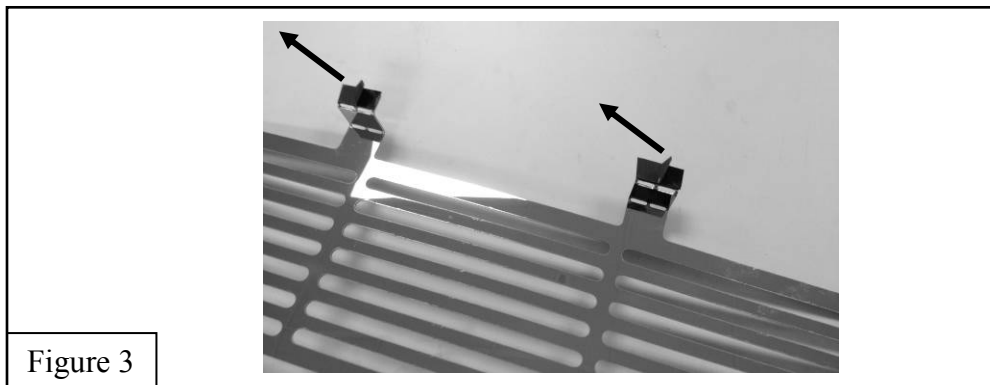

5. Tilt grille into bumper opening, bottom first, tabs on the top go behind upper bumper. On some trucks these tabs will go between a black bracket and the upper bumper, refer to Figure 4.

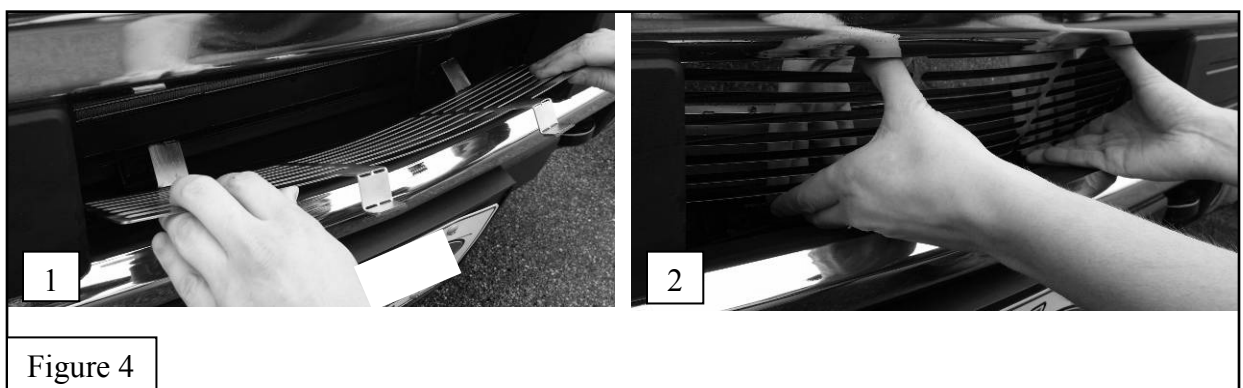

LIMITED 90 DAY WARRANTY

Putco guarantees it's Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

6. Reinstall factory bolts (bolts removed in Step 2) through the holes in the grille's lower tabs and into the original threaded holes. Tighten down with 10mm socket.
7. Once bolts have been tightened, pull the top of the grille toward the front of the truck and hold for 30sec. Refer to Figure 5. This will set the tape to the back of the bumper. Wait 2 hours for tape to completely set before driving. Allow 24 hours before washing bumper grille.



For lighted bumper grilles, refer to Light Bar Installation Instructions for wiring installation instructions.

LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.