



Rocker Arm Stud Remover  
& Tap Alignment Tool  
(P/N 66783)

**\*\*This tool has two separate functions\*\***



At no point is the tool placed over two studs as shown in Figure 1.

Figure 1.

## How to use the tool correctly.

### Rocker Arm Stud Removal:




**Step 1.** Place non-threaded hole over the stud to be removed.

**Step 2.** Screw a nut or polylock onto the stud.

**Step 3.** Twist the nut to remove the pressed in stud.

See page 2 for Mounting Boss Tap Alignment Instructions.


## Mounting Boss Tap Alignment:

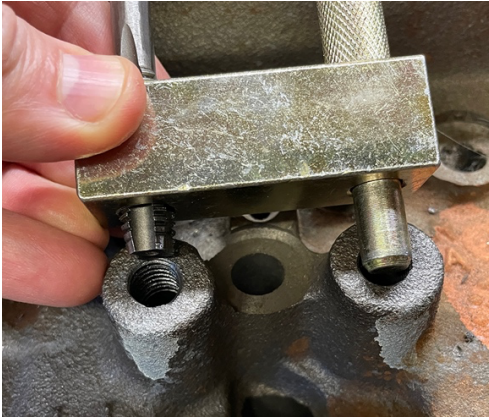

**Step 1:** Place the guide into the smooth hole, and thread the tap into the threaded hole.



**Step 2:** Square the tool up on each boss as shown above.

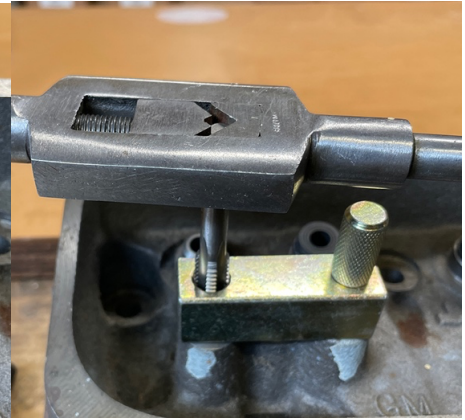

**Step 3:** Spin the tap to thread the new hole for a screw in stud.

© 2024 Specialty Auto Parts U.S.A., Inc. All Rights Reserved. For technical support, call PROFORM directly at 586-774-2500 9am-5pm ET, Mon-Fri; or email [tech@proformparts.com](mailto:tech@proformparts.com)