




INSTRUCTIONS FOR CHEVY SMALL BLOCK ROD BALANCER
PART # 67596

1. PLACE RODS TOGETHER LIKE PICTURE A. SNUG NUT.
2. PUT BLACK FIXTURE ON A FLAT LEVEL SURFACE. CHAMFER KINIFE END IS UP.
3. PLACE ROD ASSEMBLY ON FIXTURE SO UNIT FLOATS FREELY. THE LIGHT SET ROD WILL TILT UPWARD LIKE PICTURE B.
4. REPEAT STEP 3 UNTIL YOU FIND LIGHTEST ROD IN SET & THEN USE THIS AS BASELINE.
5. THEN GRIND THE HEAVIEST RODS SMALL END BALANCE PADS TO LIGHT THE ROD & BRING IT INTO BALANCE. TAKE OFF A LITTLE AT A TIME. WHEN BOTH RODS ARE PERPENDICULAR TO (PICTURE A), THEY ARE THEN BALANCED.
6. REPEAT PROCEDURE UNTIL FINISHED, USING LIGHTEST ROD AS BASELINE.
7. USING SHAFT & NUT WITHOUT RED MANUALS BALANCE SMALL ENDS (PICTURE C), EXCEPT THIS TIME TAKING METAL OFF ROD'S BIG END PAD.

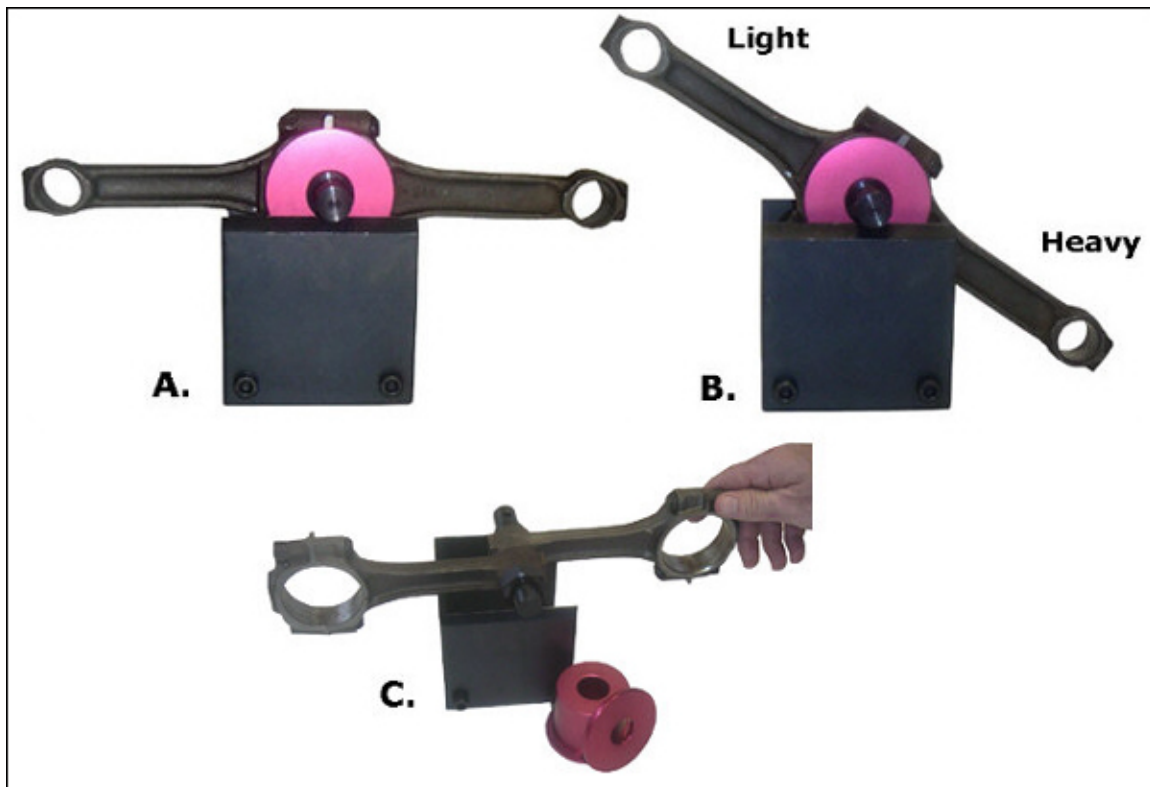

For More information please visit www.proformparts.com/TECH/ today or call our Tech Team (586) 774-2500 9:00 a.m. to 5:00 p.m. EST.

Specialty Auto Parts USA, Inc. | 26708 Groesbeck Hwy | Warren, MI 48089

© 2003 Specialty Auto Parts USA, Inc. All Rights Reserved