



**1967-1987 GM 4x4
OEM Replacement Steering
Stabilizer
Part # 7055**

Contents:


Part #	Description	Qty
7000	WHITE STEERING DAMPER	1
HOURGLASS 5/8	HOURGLASS 5/8 SHOCK BUSHING	2
140629	EB6 STUD BAG - P932/140629	1
P837	STAB TAPERED STUD/141264	1
B10RS	RED BOOT	1
BTIE	RED BOOT TIE	1
HSS	HYDRO SHOCK DECAL	1

Installation Instruction:

1. Park vehicle in a straight forward position. Set the emergency brake and block the rear tires.
2. Remove stock stabilizer and discard.
3. Install the tapered stud into the tie rod and tighten.
4. Install the bushing and sleeve onto the body end of the stabilizer. Then place onto stock axle bracket and tighten.
5. Install the boot over the shaft of the stabilizer and then install the bushing. Mount the shaft end of the stabilizer to the the stud on the tie rod and tighten.
6. After installation of the stabilizer, cycle steering left to tight and check all components for adequate clearance. Re-tighten all hardware after the first 100 miles and periodically there after.

Thank you for choosing SKYJACKER.

Seat Belts Save Lives, Please Wear Your Seat Belt.

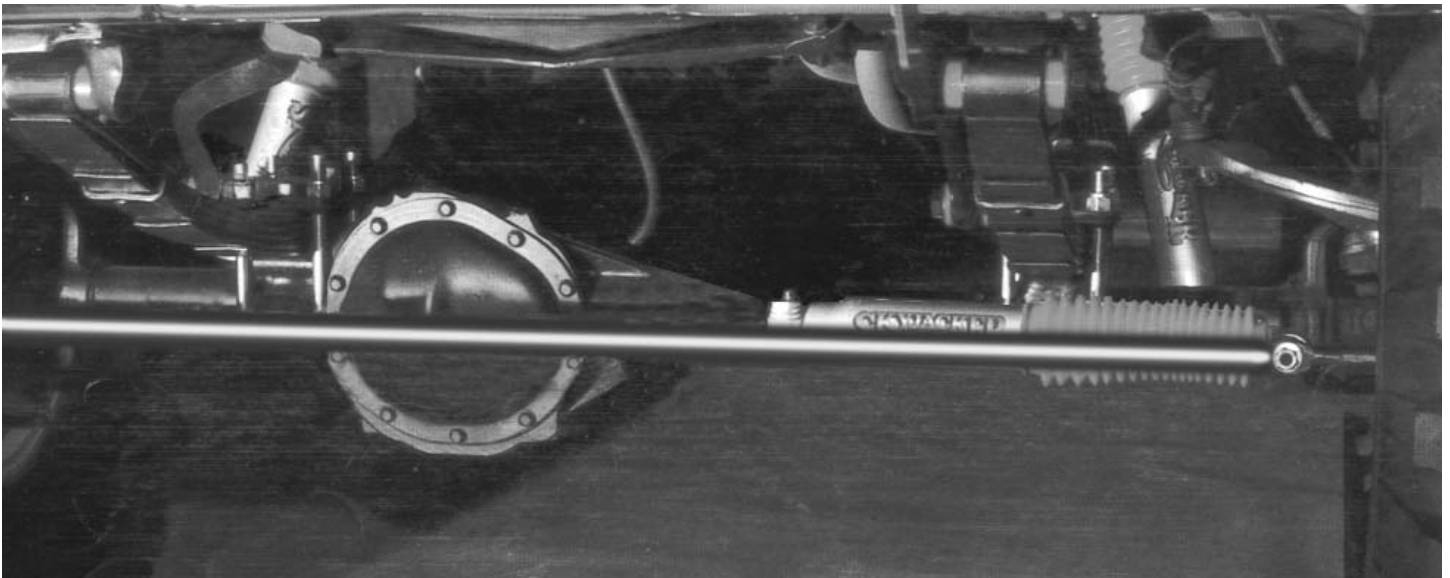

Available Accessories:

- Stainless Steel Braided Brake Lines
- Dual Shock Kits
- Pitman Arm
- Steering Arm

Contact Your Dealer for Part Numbers and Pricing!