

#7099W and #7199W

Steering Stabilizer


INSTALLATION INSTRUCTIONS



#7099W STEERING STABILIZER

HD OEM Replacement Kit:

1. Remove original stabilizer from original mounting brackets (do not remove brackets, see photo #1). Insert a poly bushing and a steel sleeve #54314 into each eye of the stabilizer. Position poly boot onto stabilizer and secure with tie strap provided.
2. Install stabilizer into the original mounting brackets using the original hardware. Tighten all nuts. See photo #2.

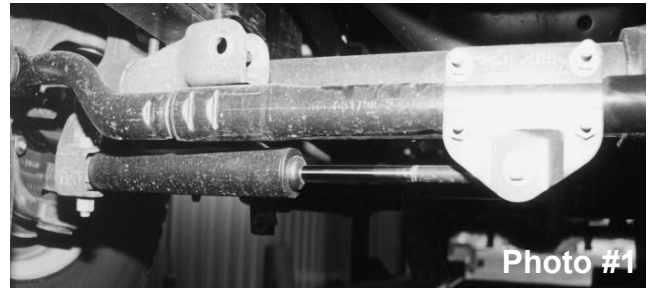

#7199W STEERING STABILIZER

HD Single Kit with Brackets:

1. To install new steering stabilizer insert a poly bushing into each eye and a steel sleeve #54314 only in the eye attached to body. Position poly boot onto stabilizer and secure with the tie strap provided.
2. Notice the 4 indentions on top of the tie rod (see arrows in photo #3). Install new tie rod bracket by placing new u-bolts over tie rod using the indentions #2 and #4) as shown in photo #4. Install new stud mount onto new tie rod bracket, also as shown in photo #4.
3. Install new stabilizer into original mount on passenger side axle using new hardware furnished and tighten. Position stabilizer onto mounting stud in new tie rod bracket and tighten. See photo #5.

