

GMC, Ford, Dodge DUAL STABILIZER KIT INSTALLATION INSTRUCTIONS

Kit #: 7220


SKYJACKER[®]
THE BEAR OF SUSPENSIONS

Contents:

- 2 - 7000WS Steering Stabilizers
- 2 - Boots & Boot Ties
- 4 - 140629 Straight Studs
- 1 - Large Axle Bracket
- 2 - Axle Bracket U-Bolts w/Nuts & Washers
- 2 - Straight Tie Rod End Brackets
- 4 - Tie Rod End U-Bolts w/Nuts & Washers

1. Place wheels in straight forward position.
2. Place boots over stabilizers, secure around body, and tighten with boot ties.
3. Place axle bracket on top of axle as shown and install U-bolts using hardware supplied.
4. Attach 2 straight studs to axle bracket and mount one end of stabilizers to each stud and tighten. (See Note)
5. Pull steering stabilizers out 4 $\frac{3}{4}$ " (exactly halfway) out. The center eye to center eye length will be 19" when stabilizers are halfway out.
6. Insert stud into eye of stabilizers & tie rod brackets.
7. Mount tie rod end brackets using hardware furnished & tighten.
8. Turn wheels fully to the left & right to make sure stabilizer are adjusted properly (see Step #5) and that brackets are secure.

*NOTE: Cylinders may be mounted with rod end to tie rod end bracket if preferred.

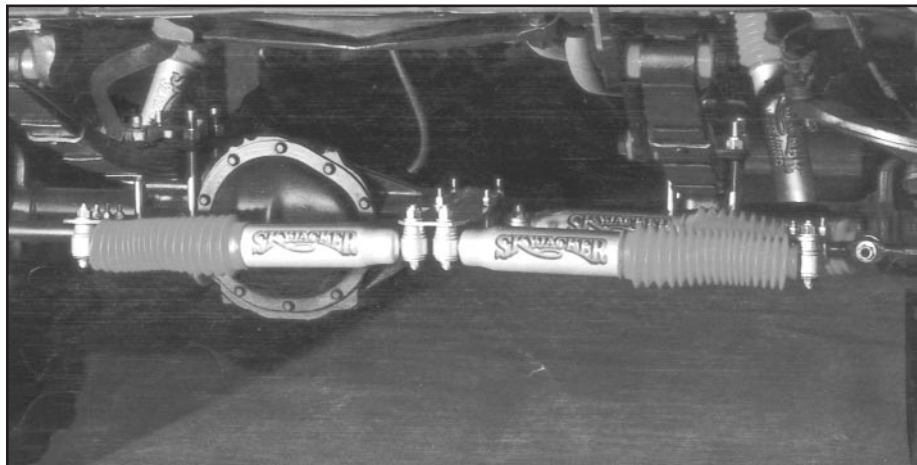

SEAT BELTS SAVE LIVES. PLEASE WEAR YOUR SEAT BELT