

# SKYJACKER®

THE BEAR OF SUSPENSIONS

## 1979-1985 Toyota Pick-Up Steering Stabilizers Part# 7275 & 7276


### Part # 7275

Part #	Description	Qty.
7900	WHITE STEERING DAMPER	2
83092	MAIN BRK FOR 7275	1
83100	TIE ROD BRKT FOR 7275, 7276	1
716SAEW	7/16 SAE WASHER	2
STEM BUSH-SST	STEM BUSHING-STEERING STAB.	8
142120	STAB WASH PKG - P889/145098	4
38X418X4U	3/8 X 4 1/8 X 4 U-BOLT SQ	1
516X1X134U	5/16 X 1 X 1 3/4 U-BOLT RD	2
516SAEW	5/16 SAE WASHER	4
38SAEW	3/8 SAE WASHER	2
38CTN	3/8-16 COARSE N/I LOCK NUT	2
516CTN	516-18 COARSE N/I LOCK NUT	4
716X112FTB	7/16 X 1 1/2 FINE THRD BOLT	1
716FTN	7/16-20 FINE N/I LOCK NUT	1
B10RS	RED BOOT	2
BTIE	RED BOOT TIE	2
HSS	HYDRO SHOCK DECAL	2


### Part # 7276

Part #	Description	Qty.
7900	WHITE STEERING DAMPER	2
83101	MAIN BRKT FOR 7276	1
83100	TIE ROD BRKT FOR 7275, 7276	1
716SAEW	7/16 SAE WASHER	2
STEM BUSH-SST	STEM BUSHING-STEERING STAB.	8
142120	STAB WASH PKG - P889/145098	4
38X418X4U	3/8 X 4 1/8 X 4 U-BOLT SQ	1
516X1X134U	5/16 X 1 X 1 3/4 U-BOLT RD	2
516SAEW	5/16 SAE WASHER	4
38SAEW	3/8 SAE WASHER	2
38CTN	3/8-16 COARSE N/I LOCK NUT	2
516CTN	516-18 COARSE N/I LOCK NUT	4
716X112FTB	7/16 X 1 1/2 FINE THRD BOLT	1
716FTN	7/16-20 FINE N/I LOCK NUT	1
B10RS	RED BOOT	2
BTIE	RED BOOT TIE	2
HSS	HYDRO SHOCK DECAL	2

1. Park the vehicle on level ground and place the wheel in a straight forward position. Set the emergency brake and block the rear tires.
2. Place main bracket "A" around the front face of axle as shown. Install square U-Bolts and secure with washers and nuts. DO NOT TIGHTEN AT THIS TIME.
3. Attach tie rod bracket "B" on the tie rod as shown. Install the 7/16" bolt through bracket using nuts and washers supplied. BE SURE FLAT WASHERS GO BETWEEN THE BRACKET AND THE TIE ROD. Secure loosely with washer and lock nut.
4. Attach body end of stabilizers to main bracket and connect the other end. Extend stabilizer shafts out exactly 4.08" and install onto both brackets using stem washer and washer pack supplied. Adjust brackets so that full clearance is obtained.
5. After installation, rotate tires left to right and check for clearance. Re-tighten all hardware after the first 100 miles and periodically there after.

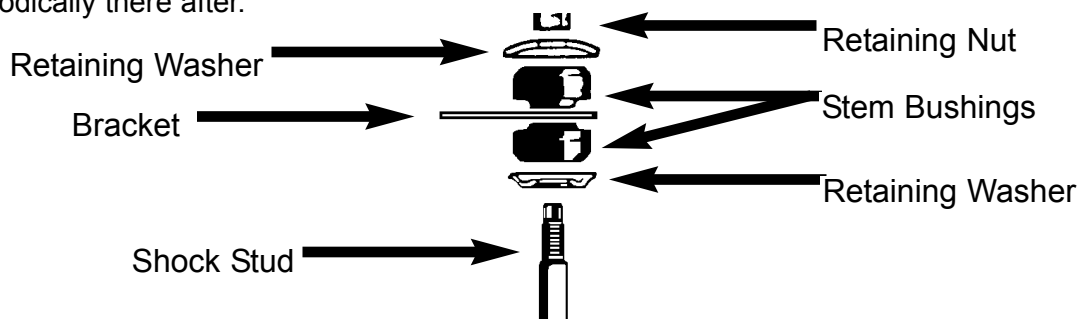

Note: Photo shows 79-83 models. Main bracket will look slightly different on 84-85 models.

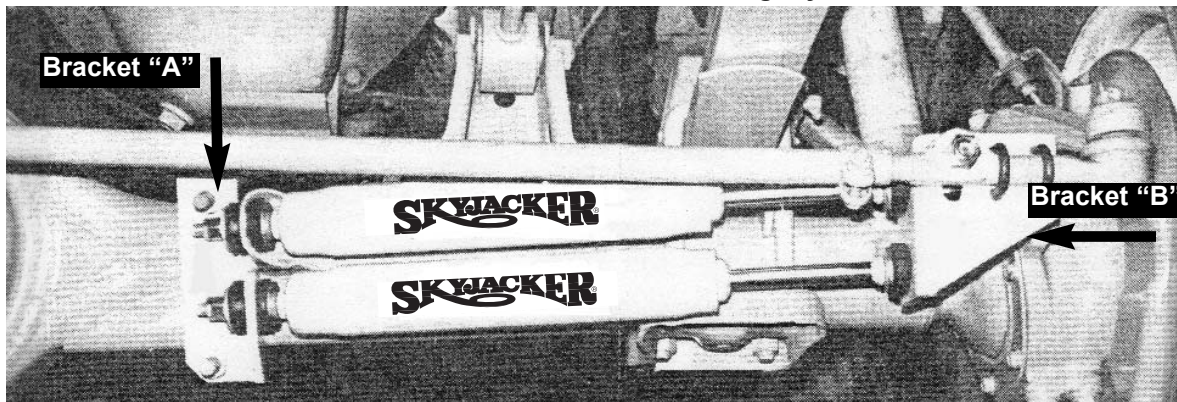

## JESUS CHRIST DIED FOR YOU

### **John 3:16**

For God so loved the world that He gave His only Son, so that everyone who believes in Him should not perish, but have everlasting life.

### **Romans 3:23**

For all have sinned; all fall short of God's glorious standard.

### **Psalms 18:2**

The Lord is my Rock, my fortress, and my savior; my God is my Rock, in whom I find protection. He is my shield, the strength of my salvation, and my stronghold.

### **STEPS TO ACCEPTING JESUS CHRIST AS YOUR PERSONAL SAVIOUR**

God, I come to You admitting I have sinned against You and I need you to take control of my life. The Bible says anyone who calls on the name of the Lord will be saved. I am calling on You, Jesus. I ask that You come live in my heart and be the Lord over my life today. I do believe You died on the cross for me and came back to life to give me life!

Romans 10:9-10 says that if I confess with my mouth that Jesus is Lord and believe in my heart that God raised Him from the dead, I will be saved. Because it is by believing in your heart that you are made right with God, and it is by confessing with your mouth that you are saved.

Thank You, Lord Jesus for a new life in You!  
Now, go and tell somebody about your  
new life in Jesus.

