


#DA300 / DA600 '94-'99 DODGE  
#DA302 / DA602 '00-'01 DODGE  
#DA303 02-07 DODGE 3/4-1 TO N  
PITMAN ARM INSTALLATION

**SKYJACKER®**  
**THE BEAR OF SUSPENSIONS**


1. Remove drag link from pitman arm (see picture #1) and lower it down.
2. Remove pitman arm from steering sector (a puller will be required, see picture #2). Install new Skyjackerfi drop pitman arm using the original lock washer and nut, and torque to OEM specs. Completely remove original stabilizer (it cannot be reinstalled when using a drop pitman arm, but a replacement one is available from skyjackerfi). Refer to catalog for make & model.
3. Loosen turn buckle clamps on drag link and rotate 180° and install in the bottom end of pitman arm (see picture #3), and tighten to OEM specs (be sure to install cotter key). Now tighten turn buckle with the clamps and bolts rotated to the top side of drag link to provide clearance for the steering stabilizer boot.



Picture #1

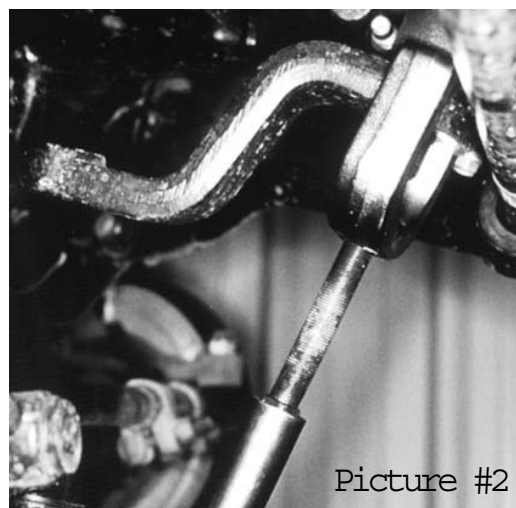

Picture #2

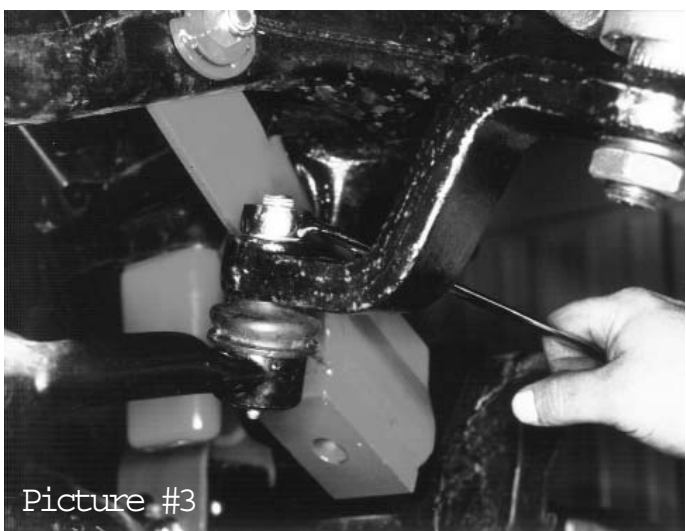

Picture #3