

# High Performance Cold Air Intake Kit



## INSTALLATION INSTRUCTIONS

**S&B P/N 75-3035**

**2001-2004  
Chevrolet Corvette  
5.7L-V8**

**QTY PARTS LIST**

- 1 4" - 1.25" Adapter
- 1 3.75" - 2" Adapter
- 1 Intake Tube
- 1 Intake Box
- 1 CARB Sticker
- 1 Instruction Sheet
- 3 #64 Hose Clamps

**QTY PARTS LIST**

- 2 #56 Hose Clamps
- 4 #10 Washers
- 2 Bent "L" Brackets
- 4 #10 Sheet Metal Screws
- 1 Air Filter

**TOOLS REQUIRED**

- Drill & 1/8" drill bit
- Scriber or pencil
- Flat head screwdriver

1. Turn off engine and disconnect negative battery terminal.
4. Gently pull up on the clamp assembly for the mass air electrical connector and move it to the side
7. Loosen the hose clamps and remove the mass air




2. Disconnect the electrical connection at the Mass air sensor



5. Disconnect the breather hose from the OEM air box



8. Assemble the S&B cold air tube and the mass air sensor in photo order

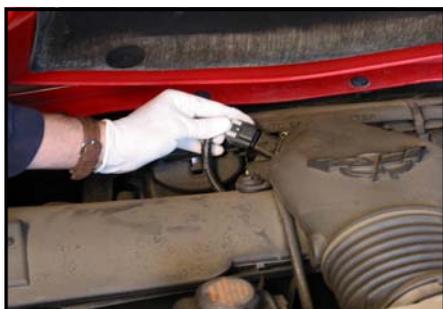


3. Loosen the hose clamps that connect the OEM air tube to the throttle body



6. Gently pull and remove the OEM air box



9. Pull up and remove the pins that secure the OEM air box

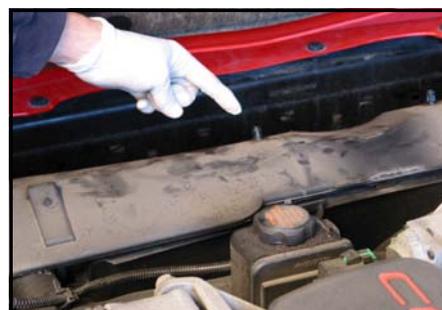

# INSTALLATION INSTRUCTIONS (continued)

10. Push the breather hose into the hole in the S&B high performance filter



11. Attach the S&B filter to the mass air sensor. Place the S&B cold air shield over the air filter and hose clamp them together



12. Place the assembly into the vehicle. Using the 2 "L" brackets mark the air shield and plastic cover as shown, with a scribe. You will use 1 "L" bracket on each side of the shield. Remove and drill the marked holes with a 1/8 drill



13. Place the assembly into the vehicle and tighten the hose clamps. Use the 4 #10 self tapping screws to secure the assembly to the vehicle



## PERFORMANCE TESTING

- \* Engage parking brake and start your engine. To ensure that the system was installed properly, listen for abnormal noises. If an air leak is detected, re-inspect hoses and connections as they may need to be tightened.
- \* S&B FILTERS RECOMMENDS THAT YOU KEEP YOUR OEM INTAKE SYSTEM IN THE EVENT IT IS REQUIRED IN THE FUTURE.
- \* In order to maintain proper warranty, all connections and components must be checked periodically for realignment and to tighten all connections. Failure to do so will void your warranty.
- \* Use only S&B cleaning and oil products to service your filter. Using other company's oil and cleaner products may void your warranty.

**Please call (909) 947-0015 should you have any questions or comments.**

### **Smog Certification Note:**

The California Air Resource Board (CARB) requires that an E.O. identification label be applied to the vehicle in order to pass a smog check inspection when a High Performance Intake Kit has been installed.

You must place the E.O. label provided on or near the intake kit after installation so that a smog check technician can easily verify the E.O. number.

## **PRECISION CLEANING & OILING KIT**

S&B'S Precision Cleaning & Oiling Kit allows vehicle owners to properly maintain their high performance air filters by precisely applying the correct amount of oil. The clearly marked bottle and easy-to-use applicator allow the user to measure and apply the proper amount of oil for each application. S&B has conducted extensive testing with the Precision Cleaning Kit to ensure that it can be used on most cotton high performance filters available today.



Part No.  
88-0005

(909) 947-0015 Telephone - (909) 947-0603 Fax  
[www.sbfilters.com](http://www.sbfilters.com)