


# TF-TV

**Fits: 500, 518, 618 RH & RE VB's & 48RE's**  
Restores TV System Functionality.  
Allows Re-use of 95% of VB's with worn Throttle Valve Bores without special Tools.



TV Valve shown in typical wear area position. New TransGo® TV valve has relocated lands that provides the valve with support from an unworn area of the bore restoring normal function. A no fuss solution!

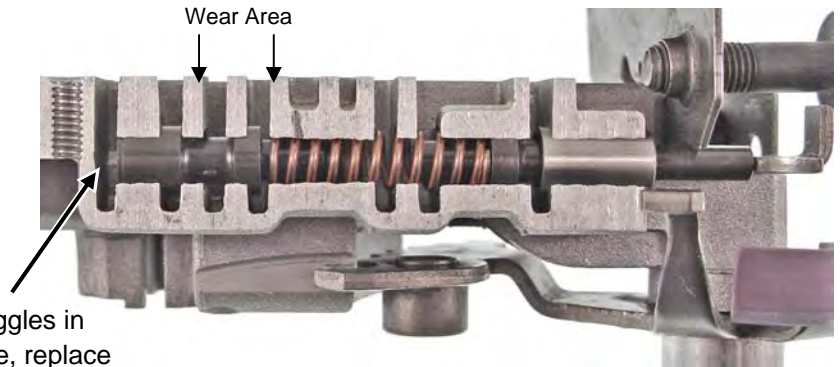

**Note:** If original TV valve wiggles in bore when it's bottomed here, replace the VB. It's too far gone!

## Step 1

Remove and Discard original TV Valve and Spring. For **ALL Normal** use, install new **Blue Spring** and **TransGo® TV Valve**. Always Re-Use your original TV Plunger and Sleeve.

If after road-test, **Later Throttle-On Shifts** are desired or requested by the customer, then Install new **Silver Spring** and **TransGo® TV Valve**. **Not Sure?**

**ALWAYS INSTALL BLUE FIRST!!!**

**Note:** If you are using a **TransGo®** product that included a Green TV Spring for later throttle on shifts AND you are using this product, follow THIS product instruction for the TV valve Assembly! The Springs included in this kit **MATCH** the new Design TV Valve. Green on the original TV valve or New Silver on the New Design TV Valve will functionally provide the same later throttle-on shifts.

