



Bugflector® - Bugflector II® - Carflector™

Contents



Bugflector



Alcohol Pad x2



Washer x4



Self Tapping
Screw x4



Bump On x4


Tools Required



Car Wash Supplies



Clean Towel

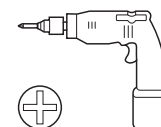


#1 Phillips Driver

Important



WARNING/CAUTION/NOTE

Please read this manual and follow instructions carefully. To emphasize special information, the symbol  and the words **WARNING**, **CAUTION** and **NOTE** have special meanings. These special meanings apply except when laws or regulations require that the signal words be used with a different meaning.

Preparation Before Painting / Installation

A trial fit is recommended to ensure proper positioning and fit, since installing and then removing the Bugflector will significantly degrade the adhesive performance of the tape. Please check fit of parts before painting as we will not accept the return of modified or painted parts, nor assume any responsibility for parts painted in error. Wash your vehicle's hood to remove any debris and/or dirt. Dry the hood with a clean towel.

Ideal installation temperature is between 65°F - 110°F (18°C - 43°C)

Care and Cleaning

1. Avoid the use of automatic "brush-style" car washes.
2. Do not use cleaning solvents of any kind.
3. Wash only with mild soap & dry with a clean cloth.

Congratulations!

You have purchased one of the many quality items offered by Auto Ventshade. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



Lund International, Ventshade Accessories Division
 655 Raco Drive, Lawrenceville, GA 30045
 800-241-7219 • Fax 770-339-5839 • Visit us at lundinternational.com

© 2004 Lund International, Inc. All rights reserved.
 Auto Ventshade™, the Auto Ventshade™ logo and the AVS™ logo are trademarks of Lund International, Inc.

Installation Steps

NOTE: Actual application may vary slightly from drawings.

BF01

Alcohol Pad

Clean Bugflector mounting location.

Alcohol Pad

Hood Bumper Stops

1

Peel back tape liner.

2"

5cm

2

Center Bugflector and attach with exposed tape. Remove tape liner.

3

NOTE: If applicable position Bugflector over trim.
92-99 Ford Fullsize Van - under trim
91-96 Ford Escort - discard rubber trim
99-up F250/350 - discard rubber trim

Apply pressure to tape flange.

4

Optional Screw Attachment

Do No Overtighten

Hood Bugflector Washer

5

91-94 Chevrolet Cavalier uses no screws
96-up Dodge Caravan/Plymouth Voyager uses (2) screws only

Lower hood, adjust hood bumper stops if necessary. Apply bump-ons to hood surface.

6