



## STOP READ THIS WARNING!

Make sure you test fit these exhaust components BEFORE any cutting, welding or unnecessary bending is done. Once modified, the components of the system are NOT RETURNABLE.

If you are unsure of the proper installation procedures or fitment, please contact a qualified exhaust shop or call our tech lines toll free at 800-421-3890 or visit our installation gallery at: [www.pypesexhaust.com/install](http://www.pypesexhaust.com/install)

One of our experienced exhaust techs will be glad to assist you in any way. Thanks and enjoy you new...

Pypes Performance Exhaust!

SCROLL DOWN FOR INSTRUCTIONS



# SJJ21S

## 2007-18 Jeep Wrangler 4 Door HGC Street Pro Stainless Steel Cat-back System


Thanks again for purchasing your new stainless steel Pypes Performance Exhaust. Please take the time now to review these installation instructions and confirm that all the components in the kit were received in your shipment before you begin disassembly. If you find a component missing or have questions about the installation please contact our technical department at [tech@pypesexhaust.com](mailto:tech@pypesexhaust.com) or through our live chat room found on the home page of the Pypes website at [www.pypesexhaust.com](http://www.pypesexhaust.com).



**Pypes Performance Exhaust**  
2705 Clemens Rd B103 Hatfield, PA 19440  
[www.pypesexhaust.com](http://www.pypesexhaust.com) 800-421-3890

### BILL OF MATERIALS

- 1 TJJ21 Tail Pipe
- 1 MVS11 Muffler
- 2 MJJ22
- 4 HVC21 2.5" Band Clamp

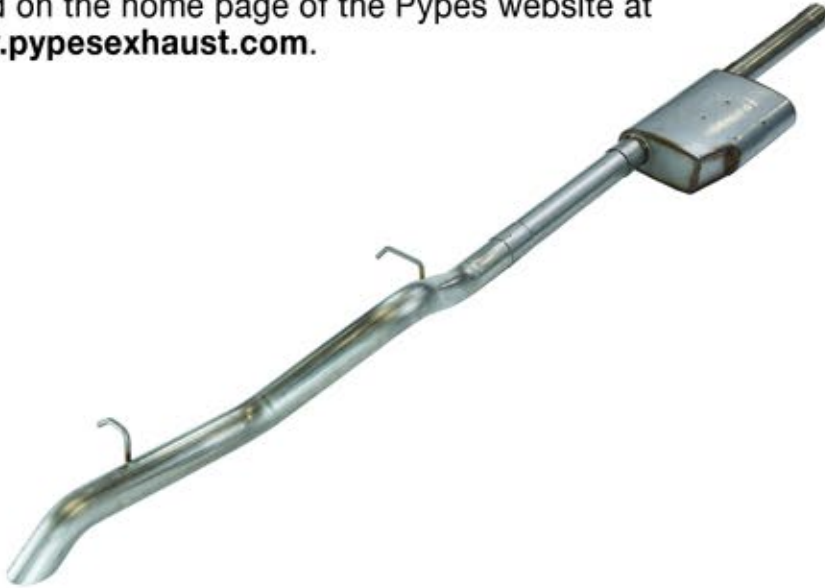

1. After you have inventoried the parts begin by placing your Jeep on a lift or 4 jack stands so you can work safely under your vehicle.
2. Unbolt the factory muffler using the 15mm socket and remove the muffler from the vehicle. To aid in the removal pre-soak the bolt and nut as well as the rubber bushings.
3. Using the 15mm socket loosen the clamp at the end of the factory down pipe and remove the factory mid pipe. Save all the rubber hanger bushings as they will be reused, unless your Jeep has spacer blocks lowering the rear sway bar. If so, use the supplied HVH60R isolators.
4. Starting at the front install one of the MJJ22 mid pipes along with two of the HVC21 clamps. Install the tail pipe hanger rods into the isolator blocks at the factory locations.
5. Now that you have all the components loosely installed you can start making adjustments to align the system. Once you are satisfied with the alignment tighten all clamps and fasteners. Air tools for this step are highly recommended.
6. Now start your vehicle and check for leaks. It's not uncommon to see condensation coming from the relief cuts in the pipe for the first few hundred miles. Double check all clamps and hardware for tightness after the first week of operation and adjust accordingly.

**NOTE:** When tightening the HVC21/24/25/26 band clamps, make sure the I-block in the center of the clamp is against the head of the bolt. Failure to do so will result in the clamp not tightening properly or the I-block to break.

**Now it's time to fire up your Wrangler and enjoy your new Pypes Performance exhaust!**